

Architectural Door Accessories

ASSA ABLOY


Pemko H600S-OH Sliding Door Hardware

The global leader in
door opening solutions


Door Leaf Capacity - Up to 600 lbs.

Manufactured by


HENDERSON

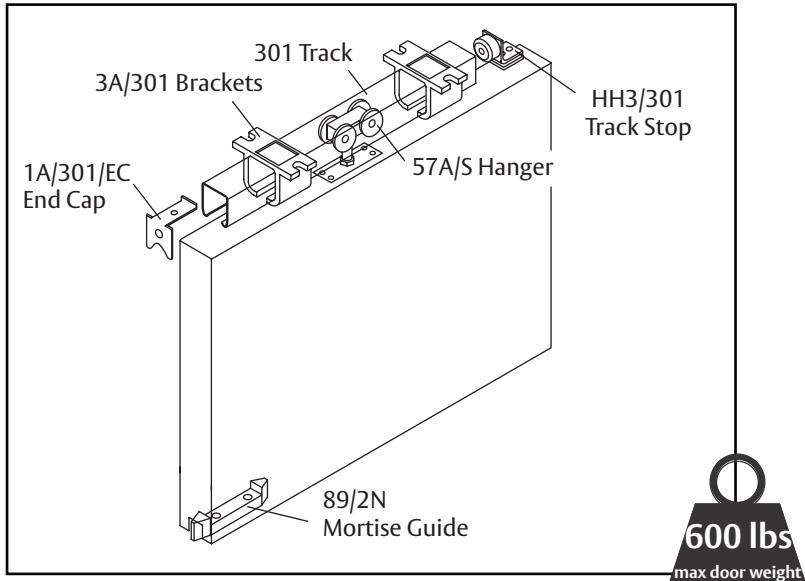

Overhead Mount

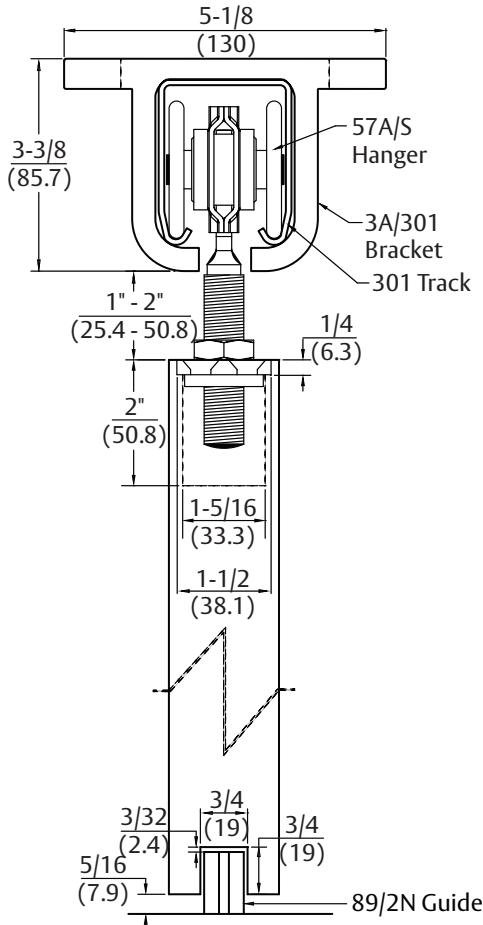

Part Number	Material	Track Length	Door Width
H600S-OH/6	Steel	72"	36"
H600S-OH/8	Steel	96"	48"
H600S-OH/10	Steel	120"	60"
H600S-OH/12	Steel	144"	72"

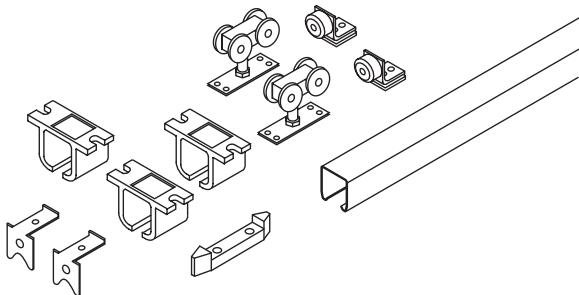


H600S-OH Kits Include:

- 1 ea 301 Galvanized Steel Track
 - 3A/301 Aluminum Alloy Overhead Mount Track Brackets (One at each end and no than three feet in between)
- 2 ea 1A/301/EC Aluminum Alloy End Caps
- 2 ea 57A/S Zinc Coated Steel Body, Wheels, and Pendant Bolt Hangers
- 2 ea HH3/301 Galvanized Steel In-Track Stops
- 1 ea 89/2N Gray Nylon Mortise Guide

1. Install brackets.


Slide brackets onto track. Inward brackets should be 2' (61m) from each end and centered on track.

Do not install end brackets with end caps at this time.

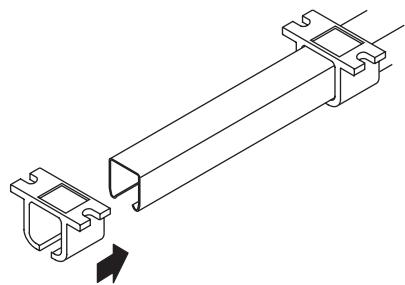


2. Secure track.

Ensure track is plumb and level.

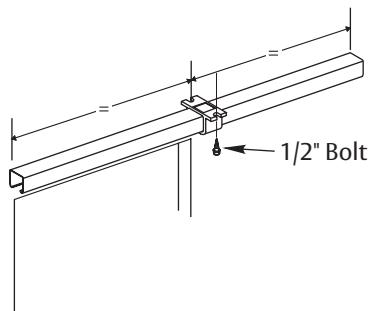


3. Mortise door for door guide.

Attach a plumb line to hanger. Remove one end bracket. Place hanger inside track. Using plumb line, mark the centerline of door guide.

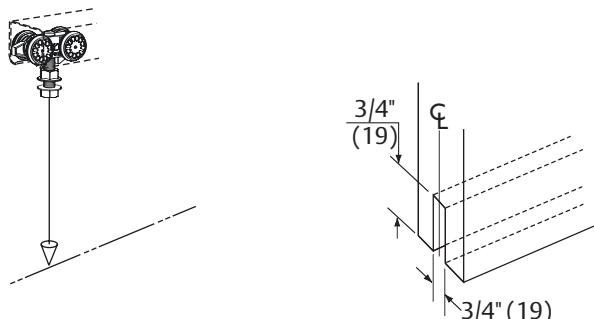

4. Fit door guide to floor.

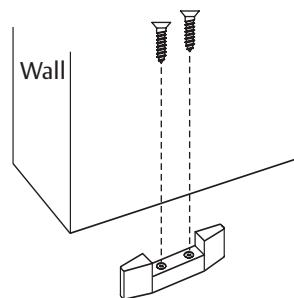

ASSA ABLOY


The global leader in
door opening solutions

Copyright © 2017, Pemko Manufacturing Co., an ASSA ABLOY Group company. All rights reserved.
Reproduction in whole or in part without the express written permission of Pemko Manufacturing Co. is prohibited.


81007 02/17

5. Prepare top of door for hanger hardware.

- ① Drill $1\frac{5}{16}$ " (33.3) dia. x 2" (50.8) deep hole 8" (203.2) from door edge to centerline of hole and centered in thickness of door.
- ② Route door for $\frac{1}{4}$ " (6.4) thick, $7\frac{5}{16}$ " (185.7) long, and $1\frac{1}{2}$ " (38.1) wide plate centered on centerline of hole and thickness of door.

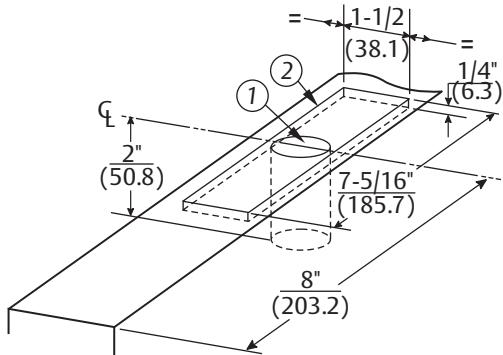


6. Attach hangers to doors.

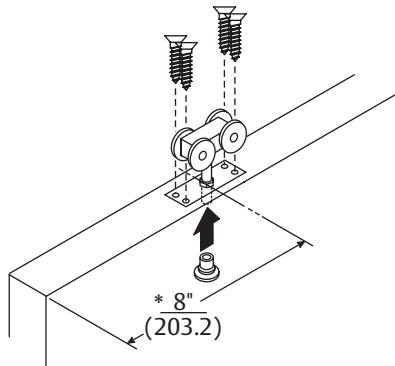

*From door edge to centerline of hanger bolt and plate.

7. Hang door.

Slowly guide complete door unit into track using installed floor guide. Install track stops.

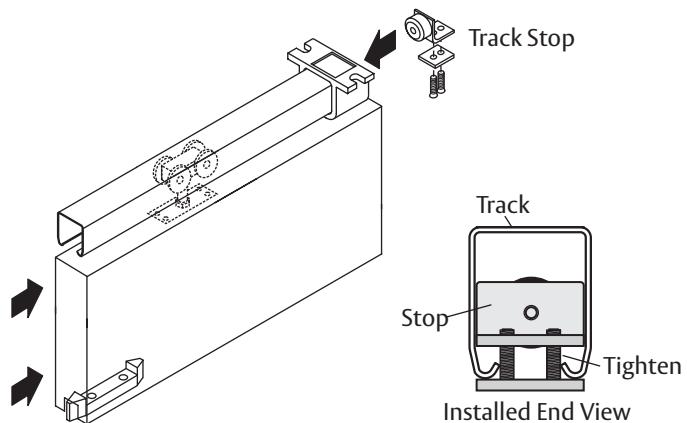

ASSA ABLOY

The global leader in
door opening solutions


Copyright © 2017, Pemko Manufacturing Co., an ASSA ABLOY Group company. All rights reserved.
Reproduction in whole or in part without the express written permission of Pemko Manufacturing Co. is prohibited.

81007 02/17

3

8. Install end bracket caps.

Replace end brackets onto ends of track with end caps in position. Check for smooth operation. Adjust and tighten stops.

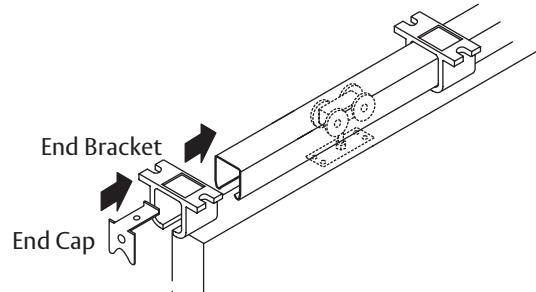

IMPORTANT:

Visually check all bolts and screws; tighten if necessary.
If access door is installed, check operation.
Check operation of doors for ease.

- Door catches floor guide: Check that the track is level. Ensure that the track and floor guide are parallel to within $+\text{- } \frac{1}{8}$ " (3).
- Door scrubs: Check that the door is level on hangers.
- Door moves while in operation: Check hangers are installed correctly.

www.pemko.com

USA:
Ventura, CA 93003
Phone: 800.283.9988

Memphis, TN 38141
Phone: 800.824.3018

Canada:
Vancouver, BC V2T6W3
Phone: 877.535.7888

Toronto, ON L4K4T9
Phone: 877.535.7888