

# OFFSET PULL TRIMS P12, P13 and P14

## Installation Instructions

FM332 9/10 (617419250)

**Corbin  
Russwin**

**ASSA ABLOY**


In U.S.:  
Corbin Russwin, Inc.  
225 Episcopal Road  
Berlin, CT 06037 USA  
www.corbinrusswin.com

**Technical Product Support:**

Phone: 888-607-5703

Fax: 860-828-7277

In Canada:  
ASSA ABLOY  
Door Security Solutions Canada  
160 Four Valley Drive  
Vaughan, Ontario, Canada L4K 4T9  
www.assaabloy.ca

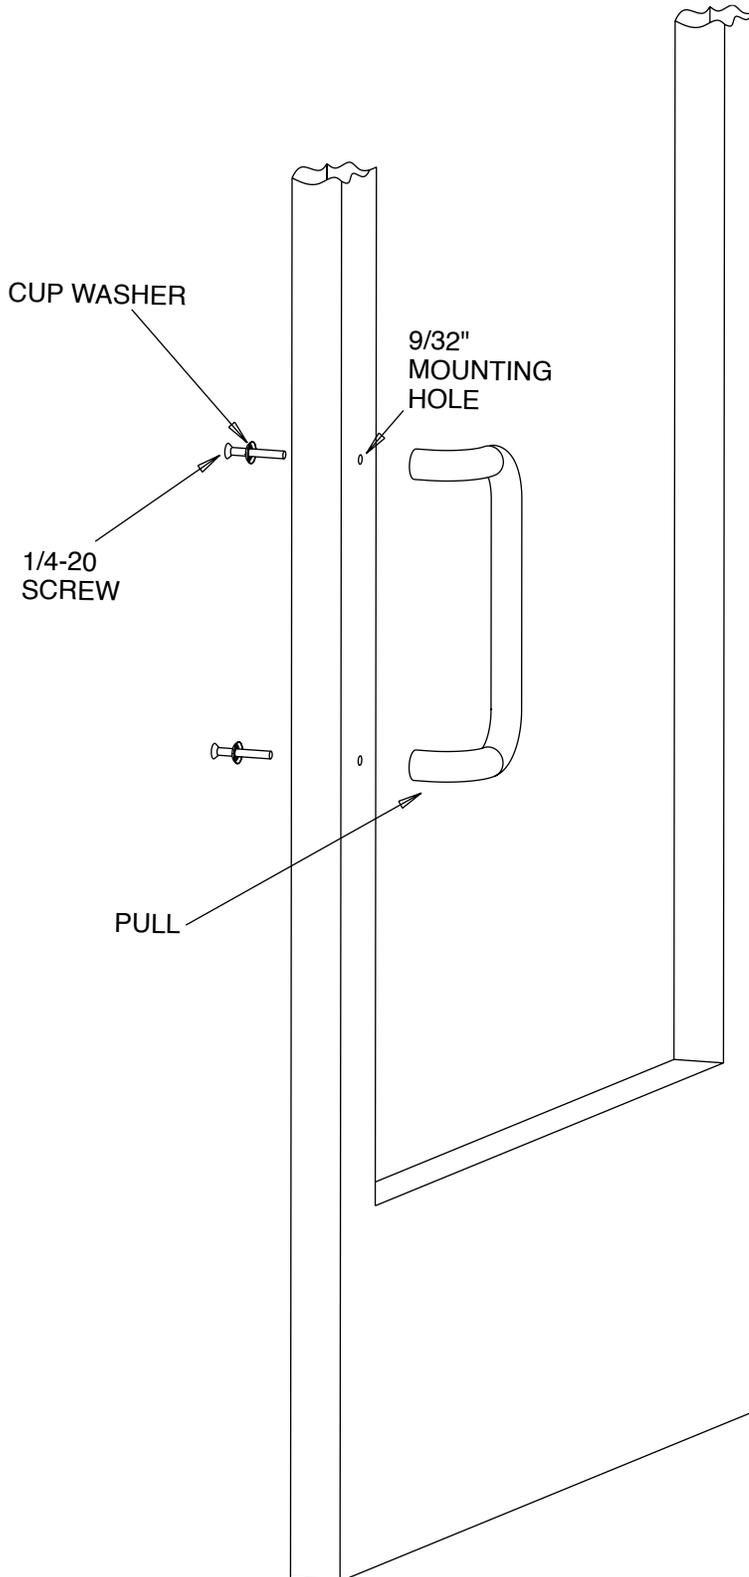

### NOTE:

- Prior to installation make sure the through bolt will not interfere with concealed hardware.
- When installing in combination with a Rim, SecureBolt® or Surface Vertical Rod exit device one of the screws may be through bolted using one of the mounting plate holes allowing the cup washer to be omitted in this location.
- When installing in combination with a concealed vertical rod device the pull trim must be mounted offset from the backset so that it does not interfere with the operation of the device.

### TO INSTALL THE PULL:

1. Determine and mark location of mounting holes.
2. Drill two 9/32" mounting holes through the door.
3. Using two 1/4-20 screws with cup washers, install pull on the door.
4. Tighten the screws.

Copyright © 2010 Corbin Russwin, Inc., an ASSA ABLOY Group company. All rights reserved.  
Reproduction in whole or in part without the express written permission of Corbin Russwin, Inc. is prohibited.

ASSA ABLOY, the global leader in door opening solutions

FM 332