

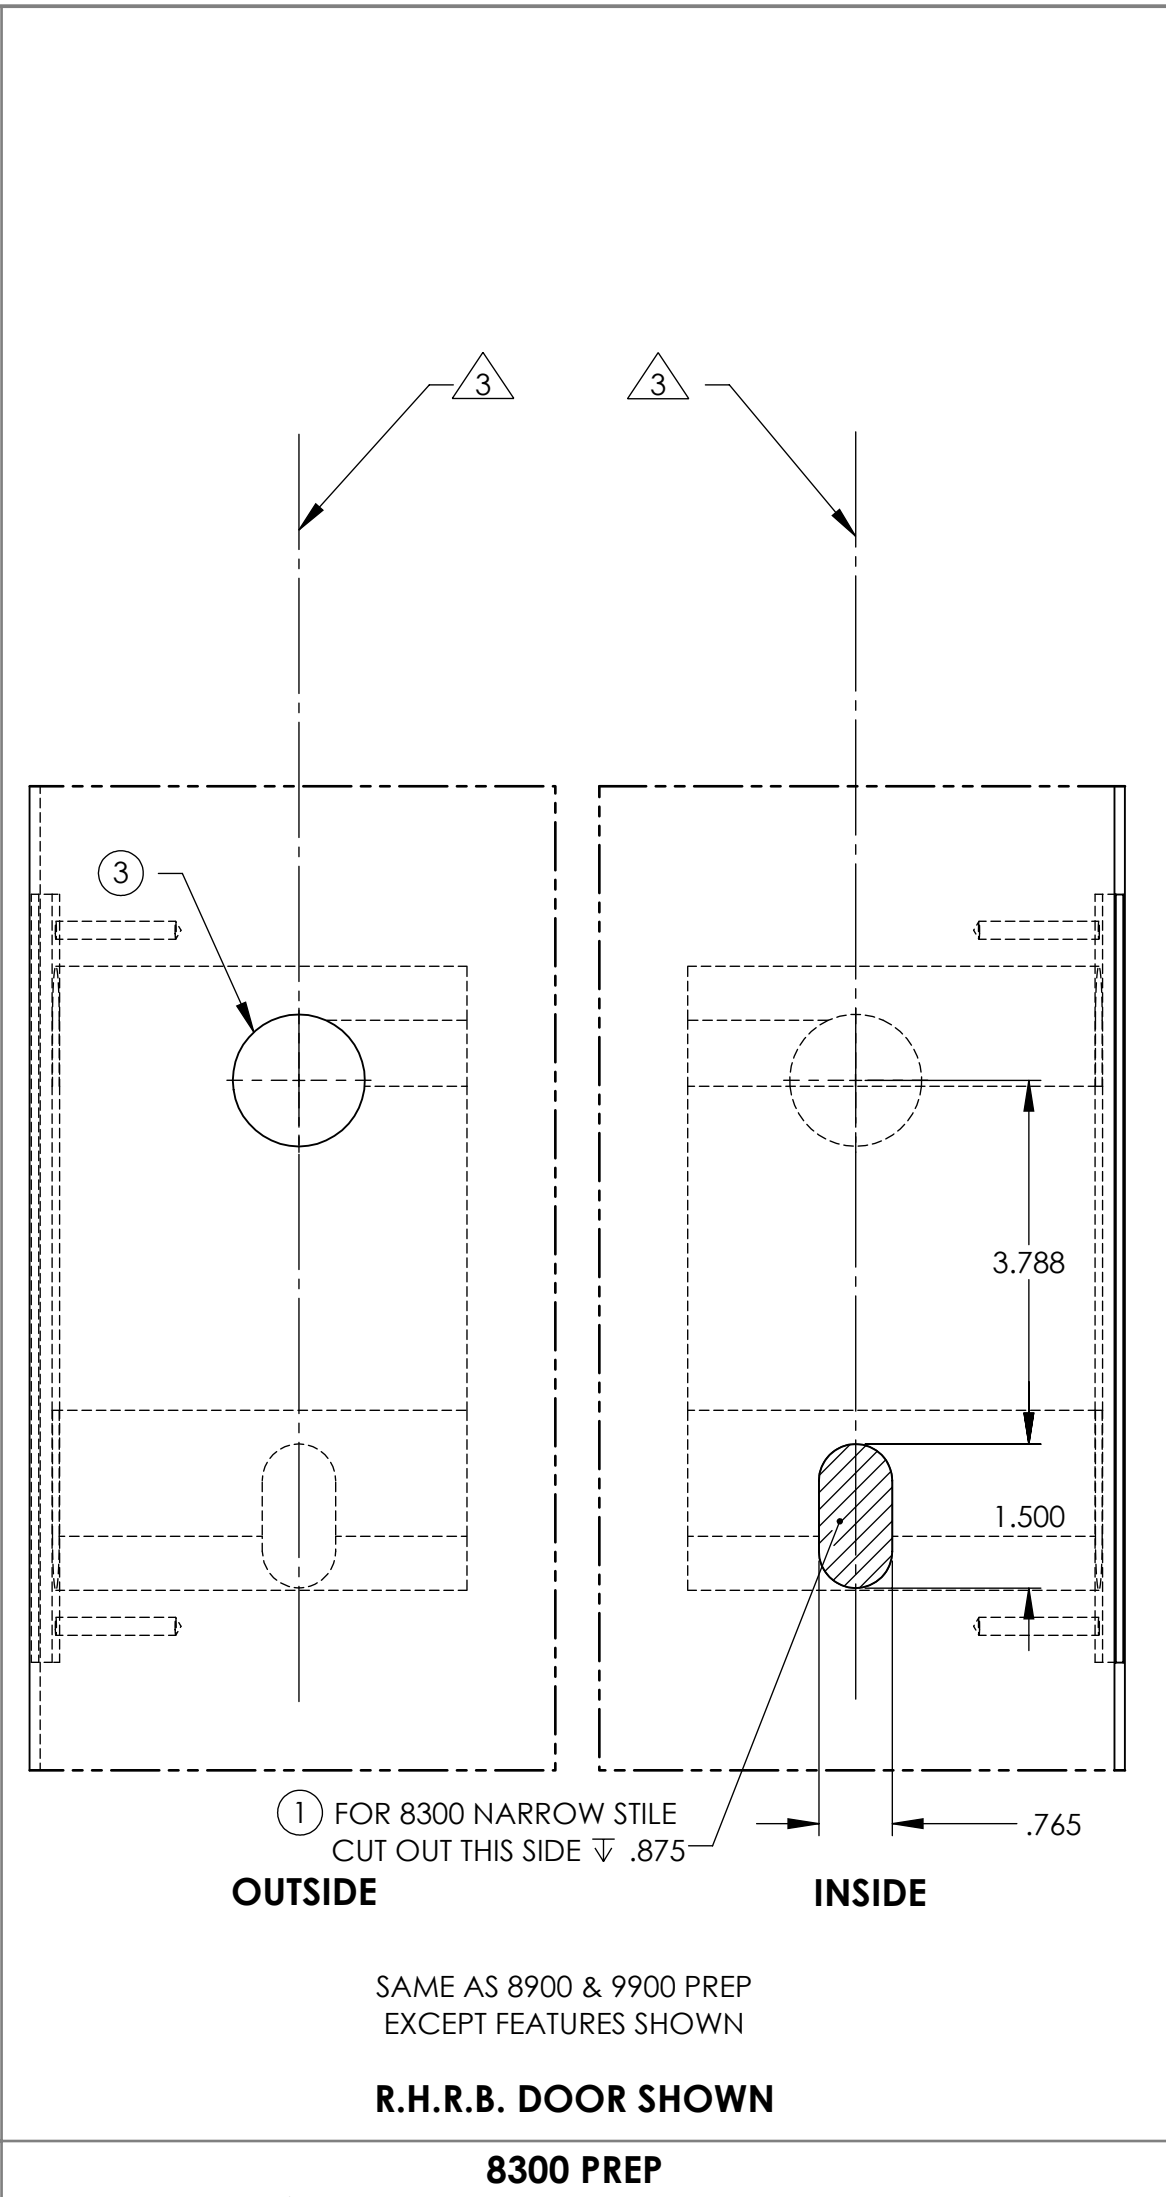


WOOD DOOR

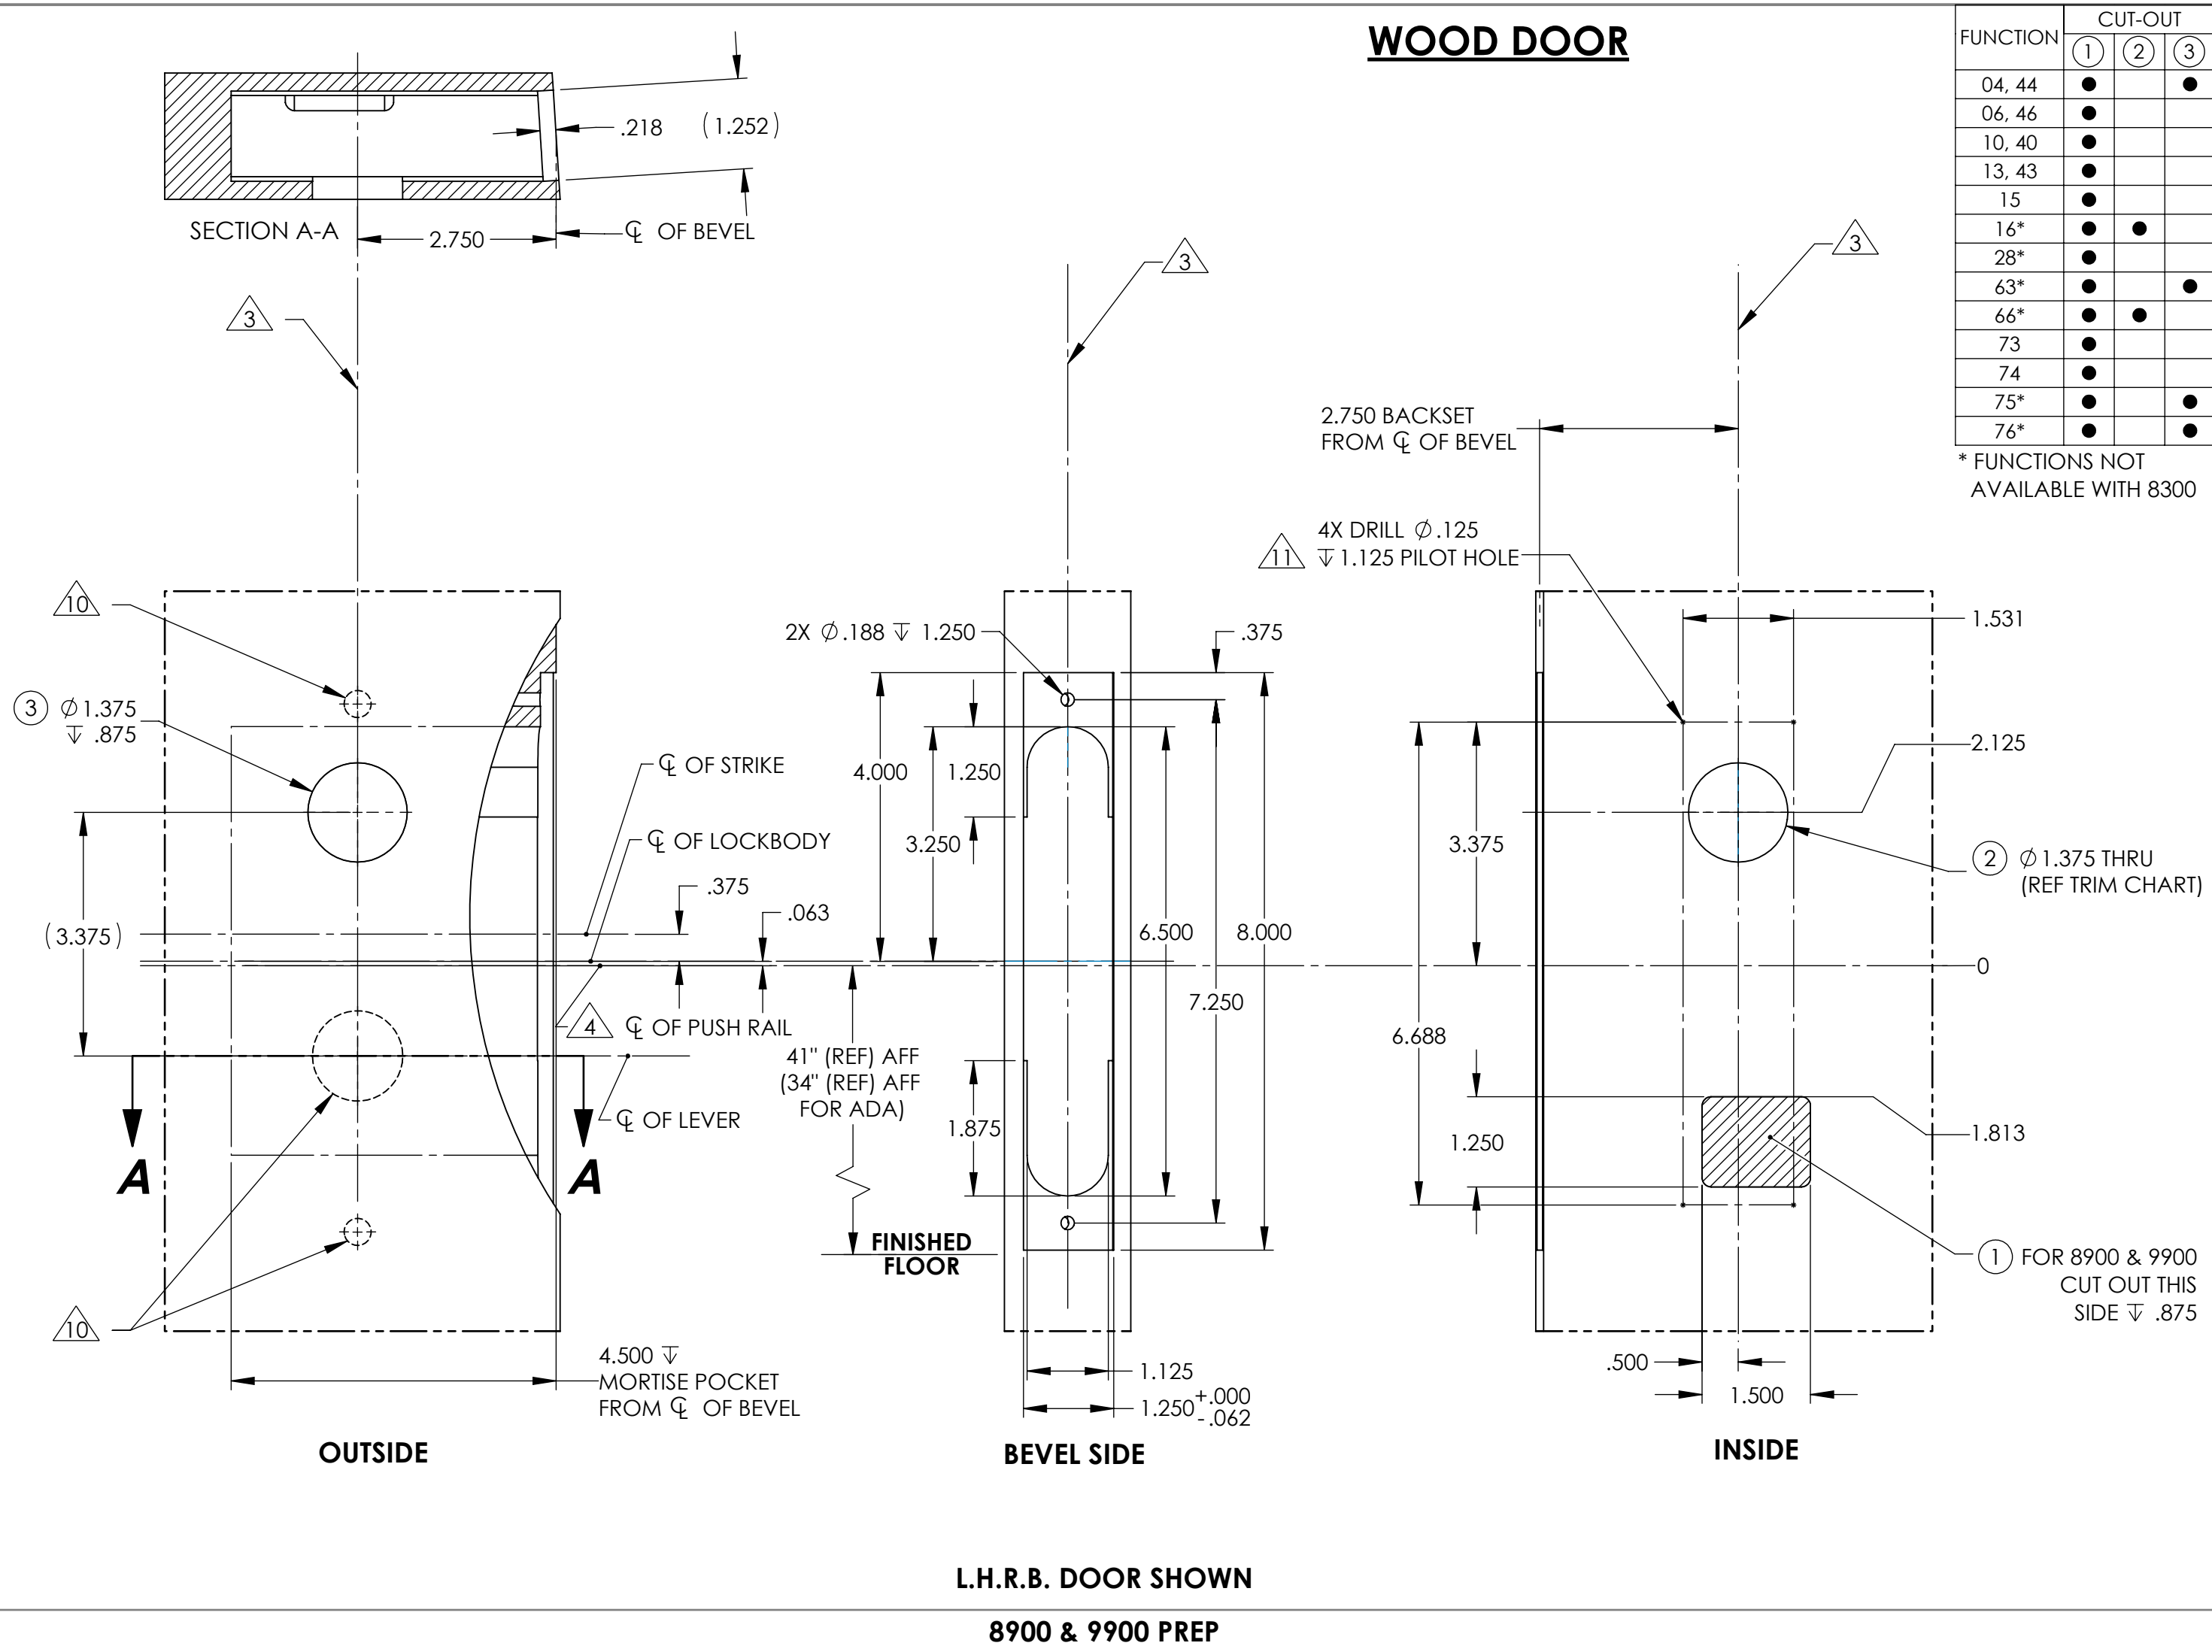

NOTES:


1. DRAWING IS NOT TO SCALE
2. REFERENCE STRIKE TEMPLATE No. 4192 FOR 815 STRIKE AND NO. 3908 FOR 908 STRIKES ON HOW TO PREP THE FRAME.
3. VERTICAL CENTERLINE IS REFERENCED FROM THE CENTERLINE OF THE BEVEL. (INDUSTRY STANDARD BEVEL 1/8 INCH IN 2 INCHES)
4. CONSULT THE AUTHORITY HAVING JURISDICTION (AHJ) TO VERIFY THE RECOMMENDED MOUNTING HEIGHT ABOVE THE FINISHED FLOOR (AFF).
5. STANDARD TOLERANCE OF $\pm .015$ APPLIES TO ALL DOOR PREPARATION REQUIREMENTS, UNLESS OTHERWISE SPECIFIED.
6. DOOR REINFORCEMENT IS RECOMMENDED TO IMPROVE (SURFACE MOUNTED) FASTENER HOLDING POWER AND CRUSH RESISTANCE (WHEN THRU-BOLTING IS EMPLOYED). CONSTRUCTION TECHNIQUES SHOULD REFLECT INDUSTRY BEST PRACTICES (I.E. WDMA, SDI) AND AUTHORIZED METHODS WHERE LABEL SERVICE (I.E. UL, W-H) IS IN EFFECT.
7. CAREFULLY NOTE WHICH FEATURES ARE OPTIONAL, (WHETHER THE FEATURE APPLIES TO BOTH SIDES OF THE DOOR AND/OR IF A DEPTH APPLIES).
8. MAXIMUM PRODUCT DIMENSIONS ARE SHOWN FOR THE PURPOSE OF VERIFYING FITMENT WITH DOOR FRAM STOPS, DOOR STILE SIZE & LIGHT/LOUVER KITS.
9. IF OPTIONAL LEVERS OR ROSES ARE USED REFERENCE THE RELATED PRODUCT DIMENSIONS TO VERIFY THE FITMENT REQUIREMENTS.
10. REFERENCE TRIM TEMPLATE FOR DETAILS TO PREP DOOR.
11. TO ASSURE COMPLETE RETRACTION OF LATCH BOLT, DO NOT DRILL HOLES UNTIL APPLYING EXIT DEVICE.

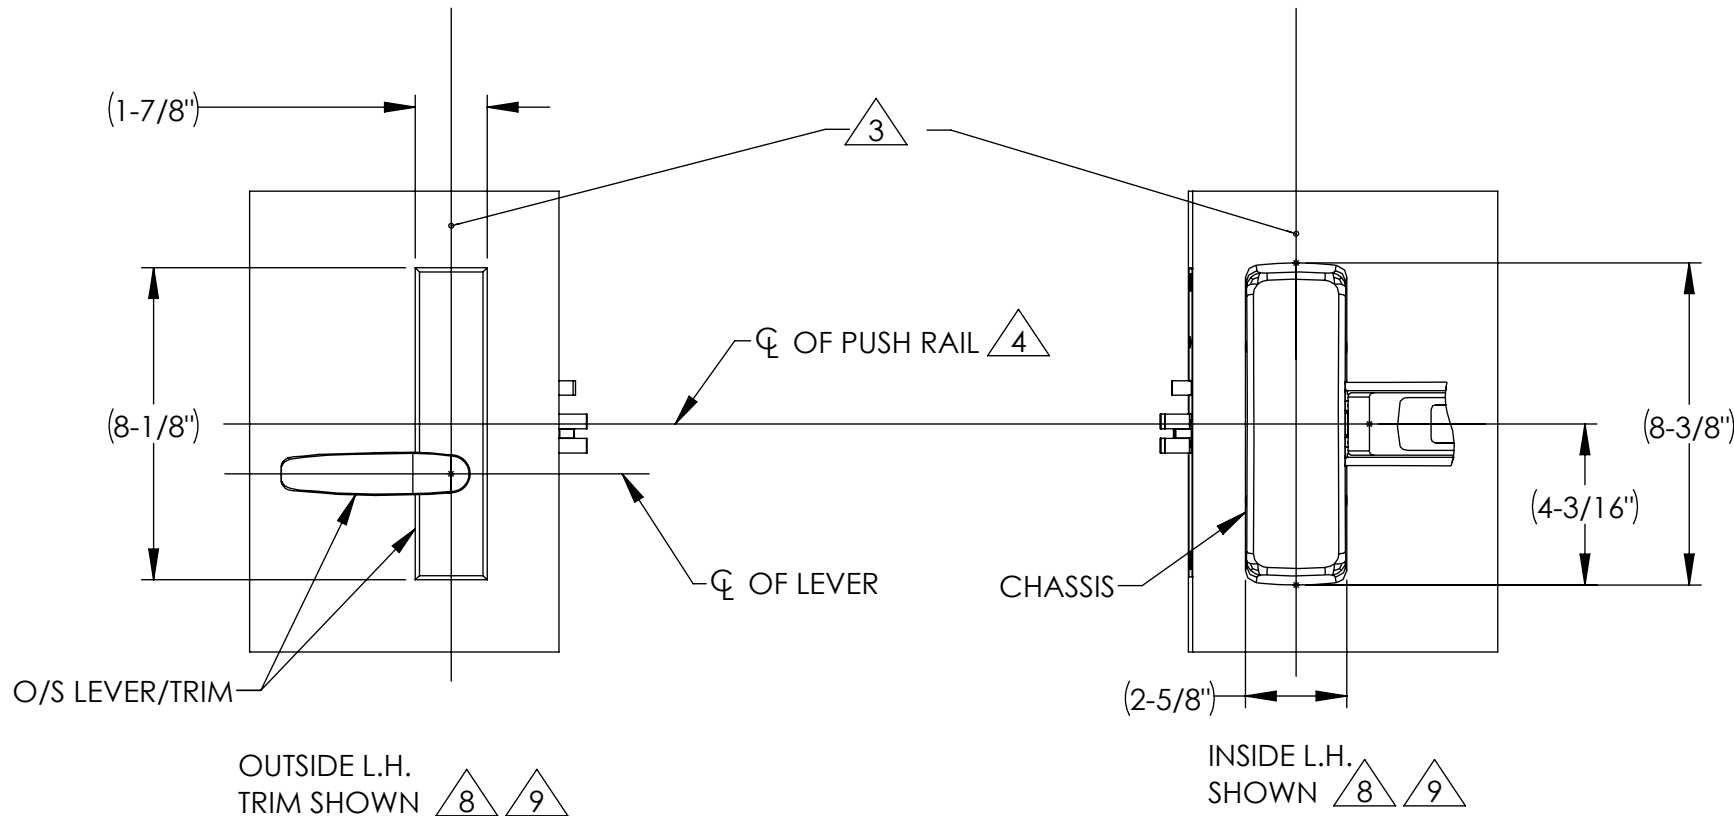

BACKSET DEFINITION		DOOR HANDING	
BACKSET		L.H.	R.H.
TOP OF DOOR VERTICAL CL		INSIDE	OUTSIDE
CL OF BEVEL		INSIDE	OUTSIDE
CL OF BEVEL		L.H.R.B.	R.H.R.B.
SARGENT ASSA ABLOY		Sargent Manufacturing Company 100 Sargent Drive New Haven, CT 06511	
DOOR MANUFACTURERS TEMPLATE: WOOD DOOR 8300, 8900, & 9900 EXIT DEVICE		RELEASE DATE 11/30/20	
SHEET 1 OF 2		TEMPLATE NO. 4709 3	

FUNCTION	CUT-OUT		
	(1)	(2)	(3)
04, 44	●		●
06, 46	●		
10, 40	●		
13, 43	●		
15	●		
16*	●	●	
28*	●		
63*	●		●
66*	●	●	
73	●		
74	●		
75*	●		●
76*	●		●

* FUNCTIONS NOT
AVAILABLE WITH 8300

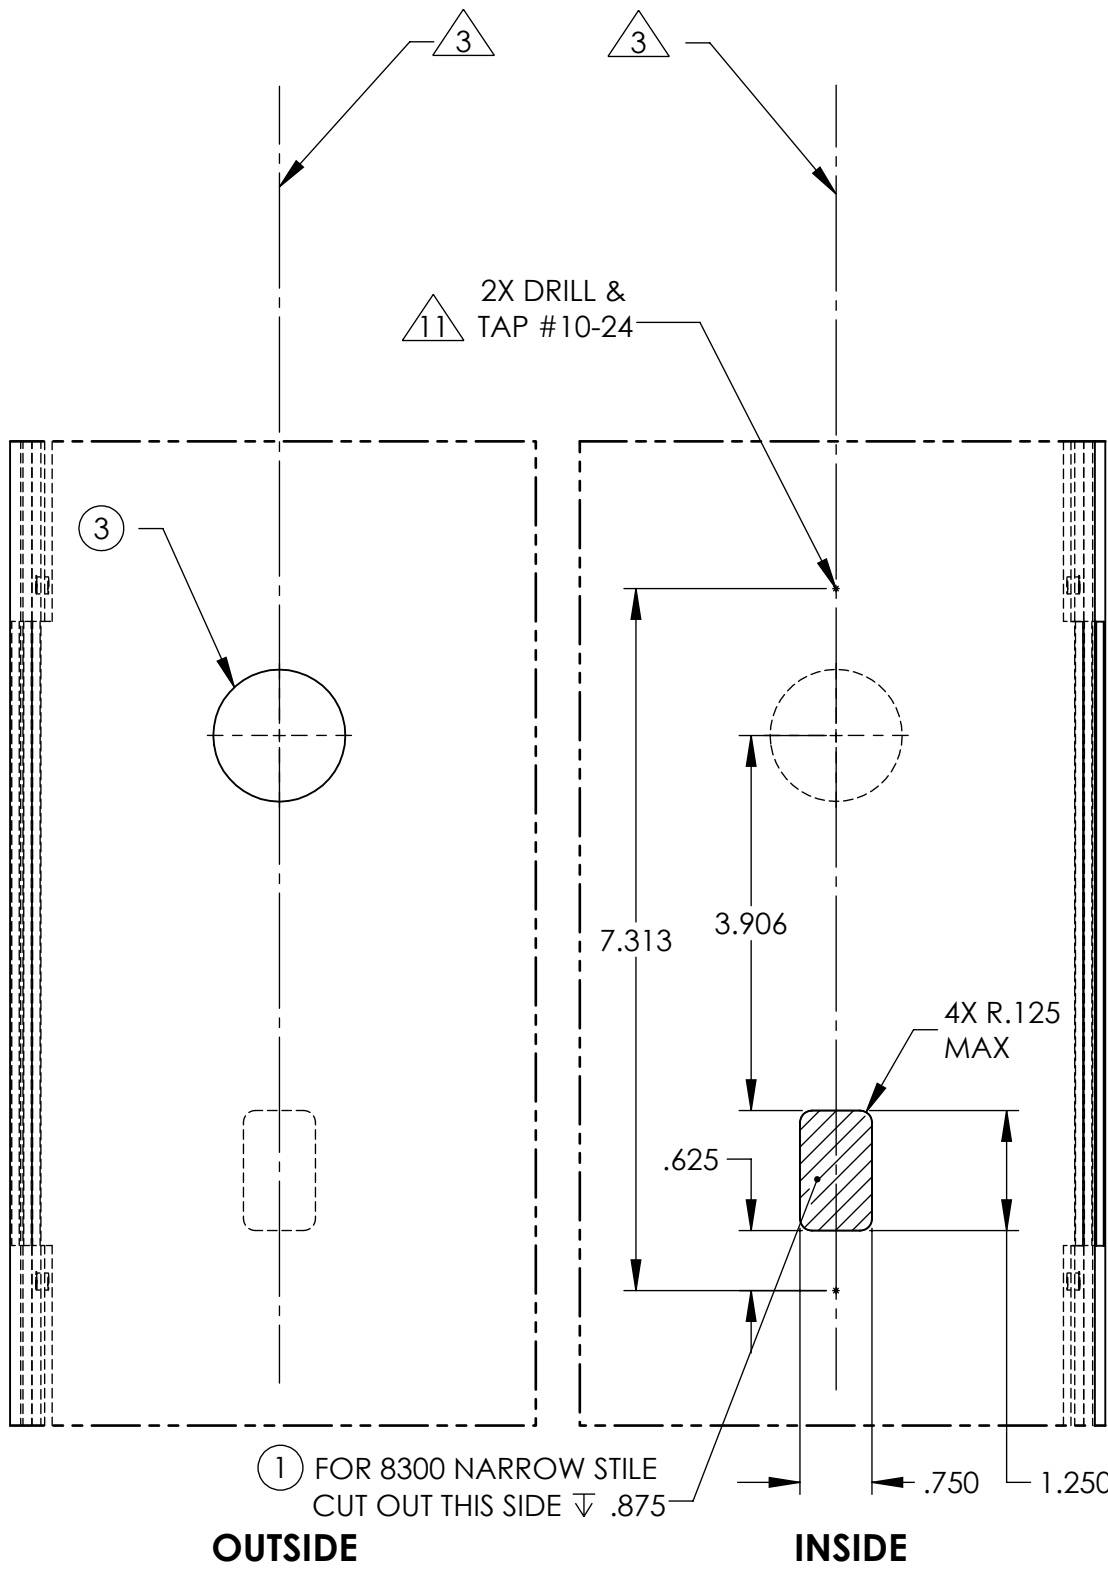


SAME AS 8900 & 9900 PREP
EXCEPT FEATURES SHOWN

R.H.R.B. DOOR SHOWN

8300 PREP

NOTES:

1. DRAWING IS NOT TO SCALE
2. REFERENCE STRIKE TEMPLATE No. 4192 FOR 815 STRIKE AND NO. 3908 FOR 908 STRIKES ON HOW TO PREP THE FRAME.
3. VERTICAL CENTERLINE IS REFERENCED FROM THE CENTERLINE OF THE BEVEL. (INDUSTRY STANDARD BEVEL 1/8 INCH IN 2 INCHES)
4. CONSULT THE AUTHORITY HAVING JURISDICTION (AHJ) TO VERIFY THE RECOMMENDED MOUNTING HEIGHT ABOVE THE FINISHED FLOOR (AFF).
5. STANDARD TOLERANCE OF $\pm .015$ APPLIES TO ALL DOOR PREPARATION REQUIREMENTS, UNLESS OTHERWISE SPECIFIED.
6. DOOR REINFORCEMENT IS RECOMMENDED TO IMPROVE (SURFACE MOUNTED) FASTENER HOLDING POWER AND CRUSH RESISTANCE (WHEN THRU-BOLTING IS EMPLOYED). CONSTRUCTION TECHNIQUES SHOULD REFLECT INDUSTRY BEST PRACTICES (I.E. WDMA, SDI) AND AUTHORIZED METHODS WHERE LABEL SERVICE (I.E. UL, W-H) IS IN EFFECT.
7. CAREFULLY NOTE WHICH FEATURES ARE OPTIONAL, (WHETHER THE FEATURE APPLIES TO BOTH SIDES OF THE DOOR AND/OR IF A DEPTH APPLIES).
8. MAXIMUM PRODUCT DIMENSIONS ARE SHOWN FOR THE PURPOSE OF VERIFYING FITMENT WITH DOOR FRAM STOPS, DOOR STILE SIZE & LIGHT/LOUVER KITS.
9. IF OPTIONAL LEVERS OR ROSES ARE USED REFERENCE THE RELATED PRODUCT DIMENSIONS TO VERIFY THE FITMENT REQUIREMENTS.
10. REFERENCE TRIM TEMPLATE FOR DETAILS TO PREP DOOR.
11. TO ASSURE COMPLETE RETRACTION OF LATCH BOLT, DO NOT DRILL HOLES UNTIL APPLYING EXIT DEVICE.

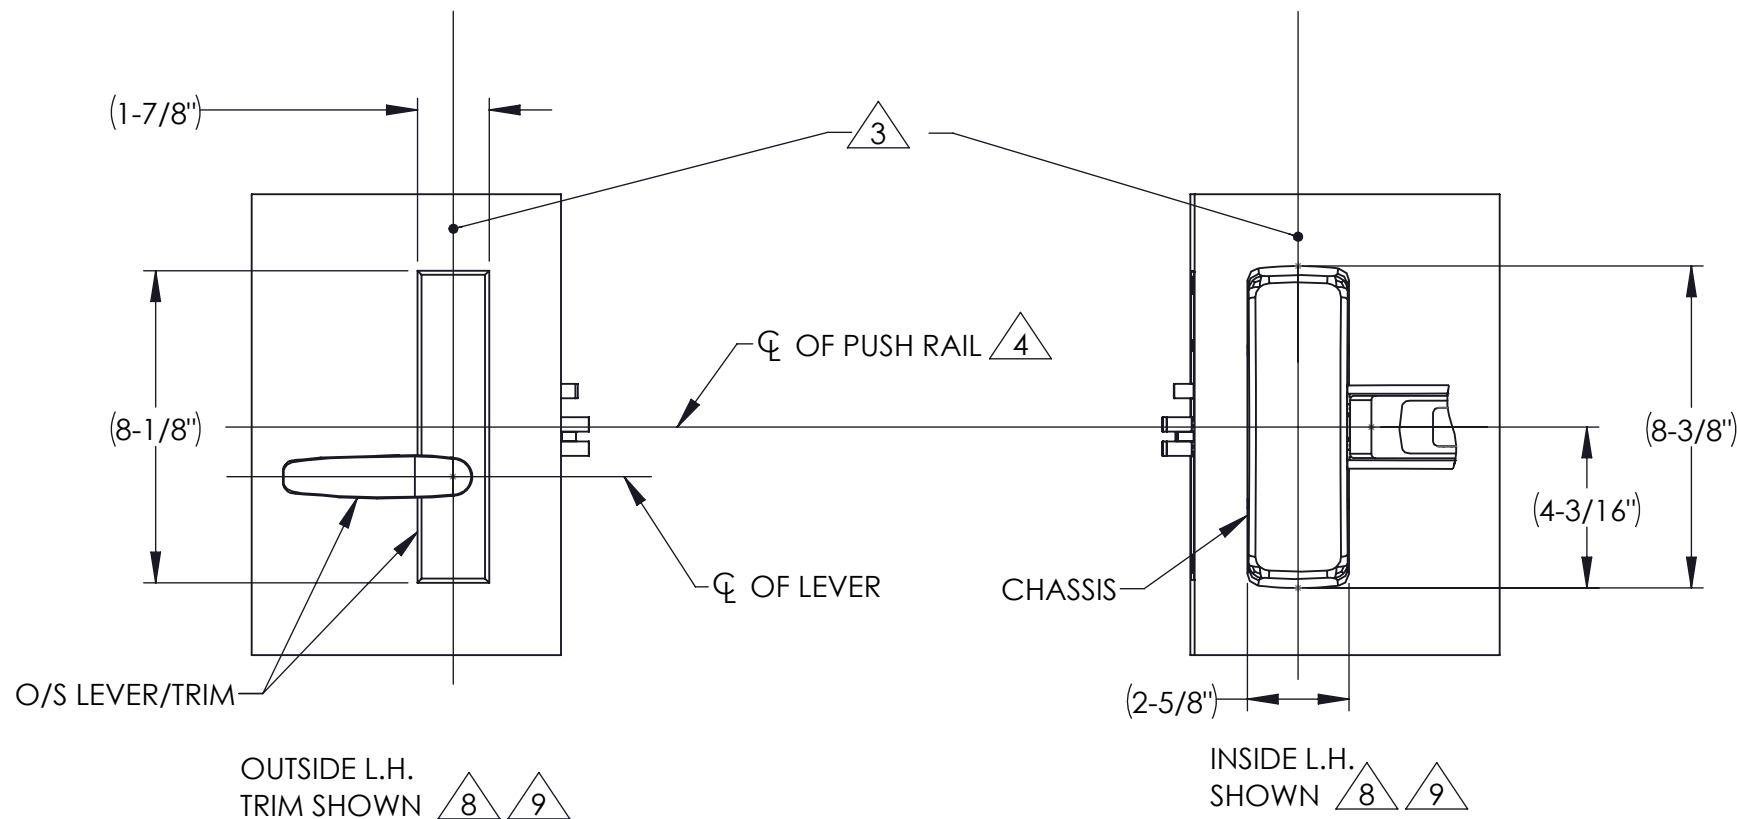

BACKSET DEFINITION BACKSET TOP OF DOOR VERTICAL C C OF BEVEL	DOOR HANDING L.H. INSIDE R.H. OUTSIDE INSIDE L.H.R.B. OUTSIDE R.H.R.B.
SARGENT ASSA ABLOY	Sargent Manufacturing Company 100 Sargent Drive New Haven, CT 06511
DOOR MANUFACTURERS TEMPLATE: METAL DOOR 8300, 8900, & 9900 EXIT DEVICE	RELEASE DATE 11/30/20 TEMPLATE NO. 4709 3
SHEET 2 OF 2	