



INACTIVE DOOR WITHOUT STRIKE

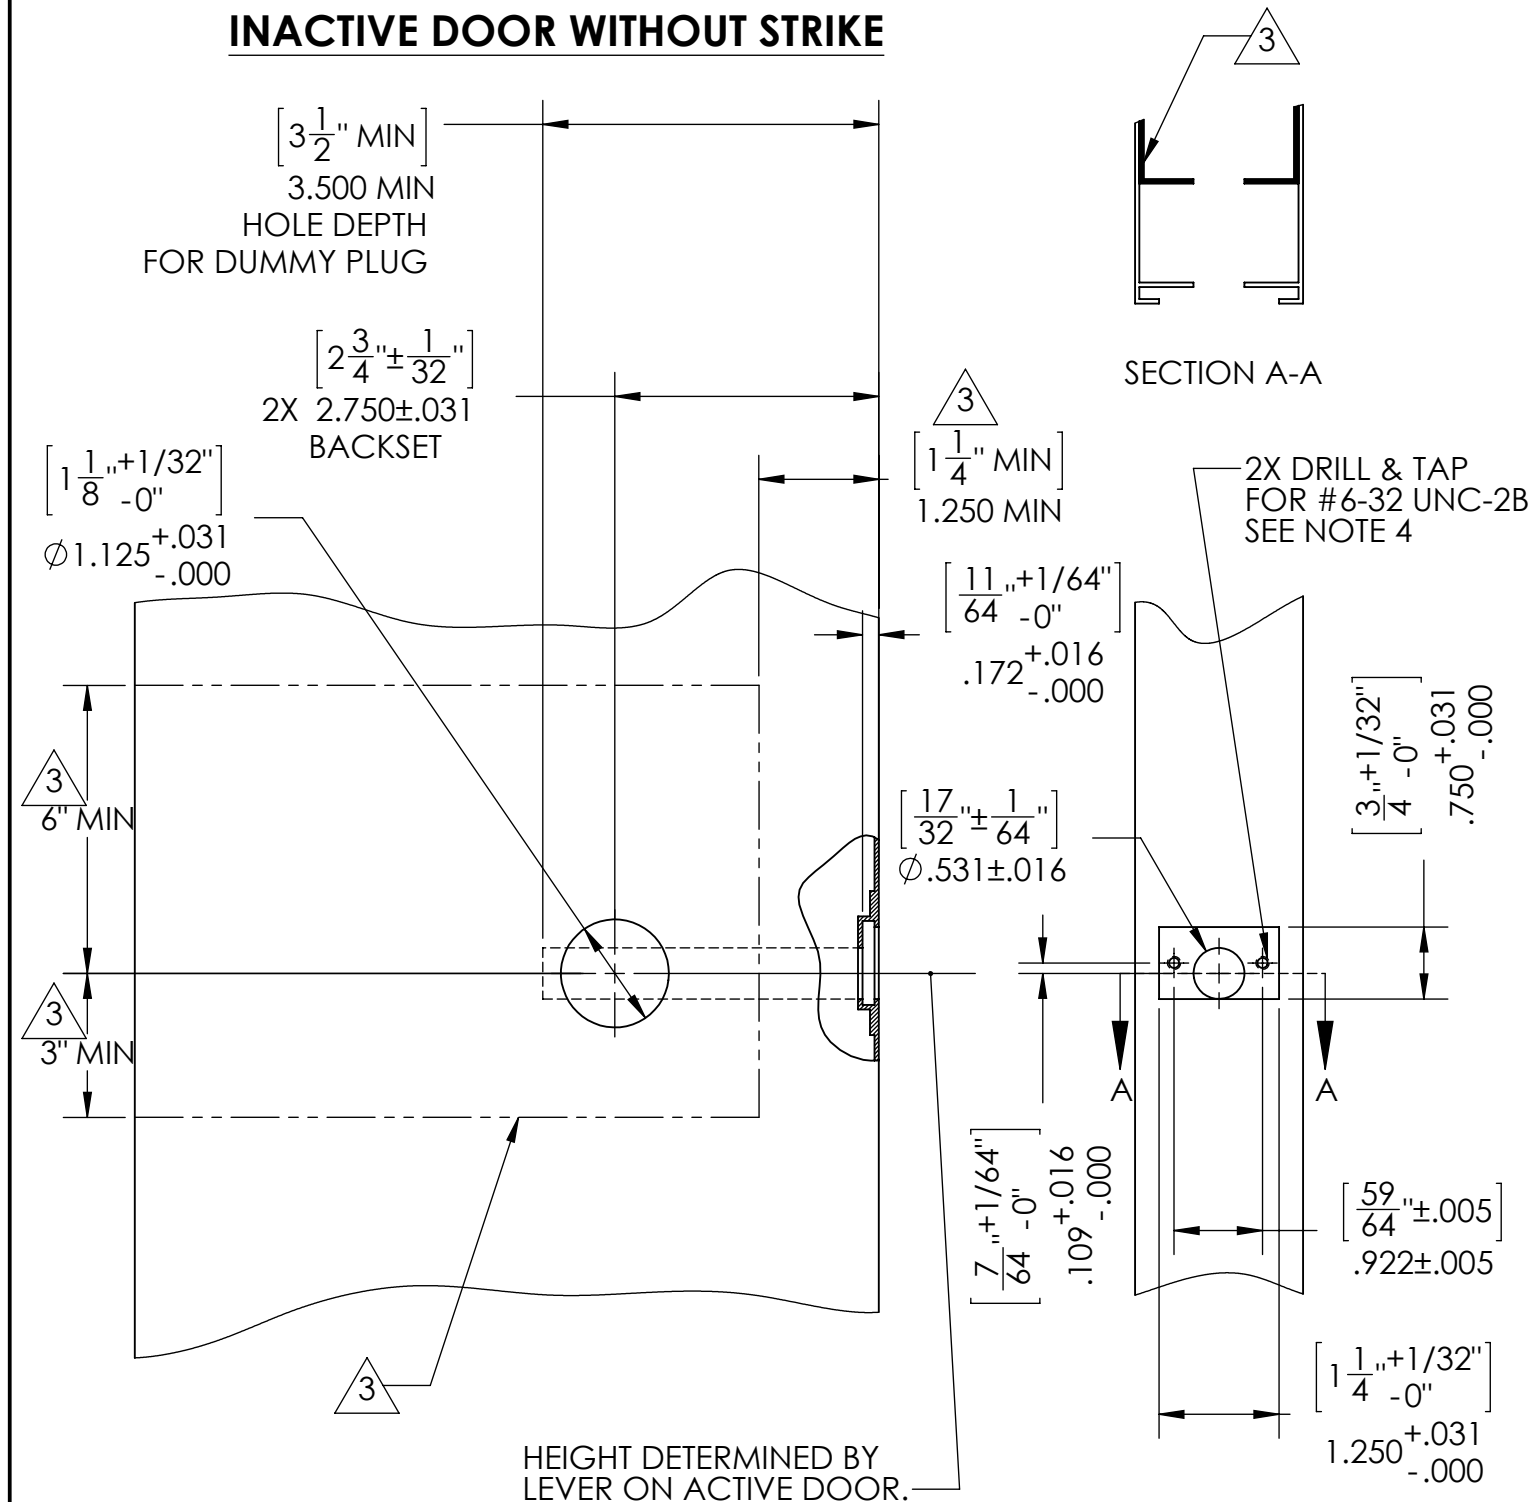

NOTES:

- FOR USE WITH R8293 & R8294 FUNCTIONS ONLY. FOR ALL OTHER FUNCTIONS SEE TEMPLATE 4646.
- FOR INACTIVE DOOR WITH A STRIKE, LOWER MOUNTING SURFACE PLATE MUST BE SET $1/16"$ DEEPER THAN UPPER STRIKE MOUNTING SURFACE PLATE TO ACCOMODATE $1/16"$ THICKNESS OF THE PLATE IN DUMMY PLUG.
- SUITABLE REINFORMENT IN AREA SHOWN TO PREVENT BOWING OF DOOR SURFACES.
- FOR WOOD DOORS LATCH FRONT HOLES MAY BE FIELD DRILLED.

INACTIVE DOOR WITH STRIKE

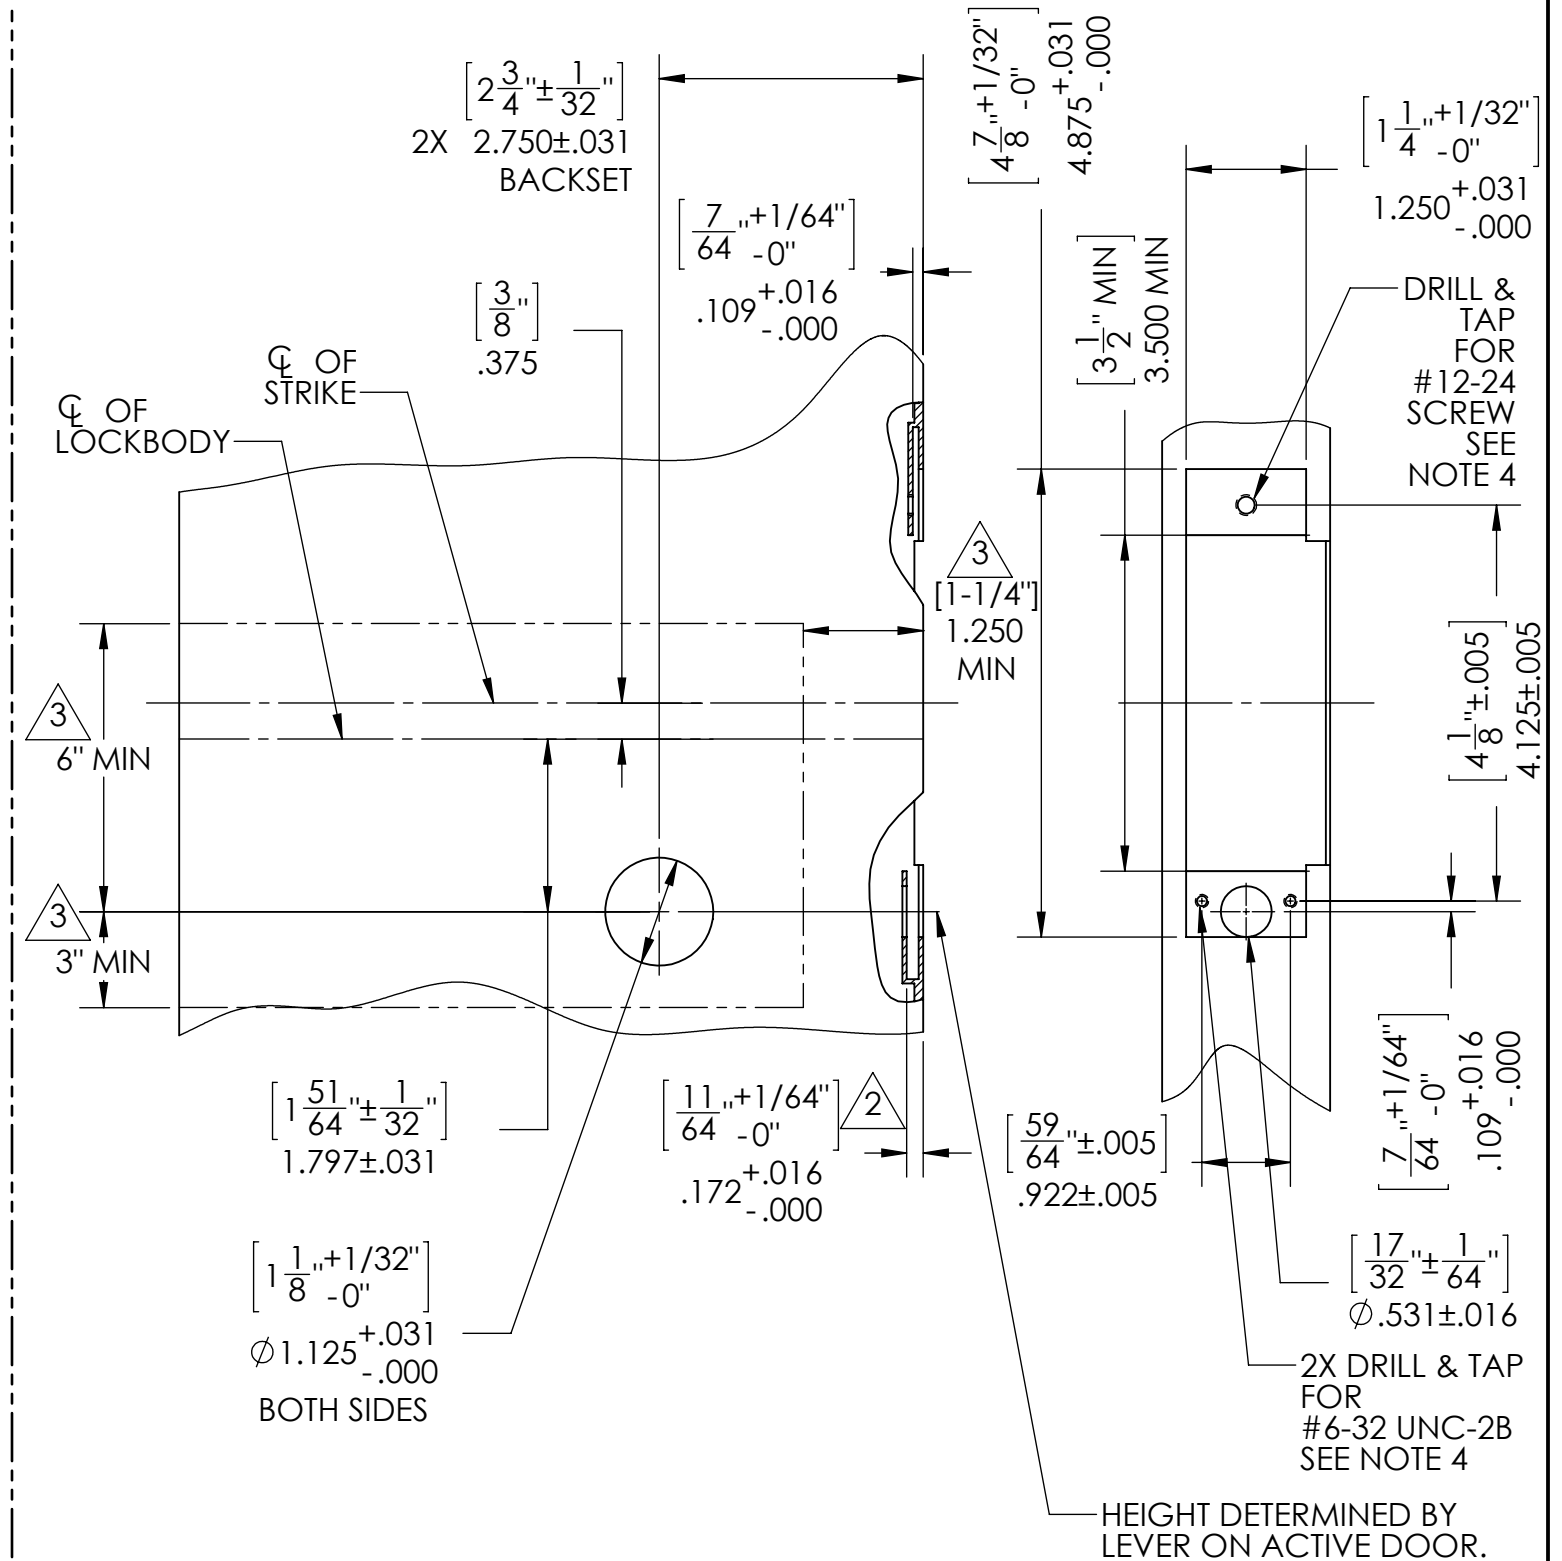

SARGENT
ASSA ABLOY

SARGENT Manufacturing Company
100 Sargent Drive New Haven, CT 06511

TEMPLATE FOR R8293 & R8294
DUMMY TRIM

RELEASE DATE
04-MAR-2010

TEMPLATE NO.
4667 A