


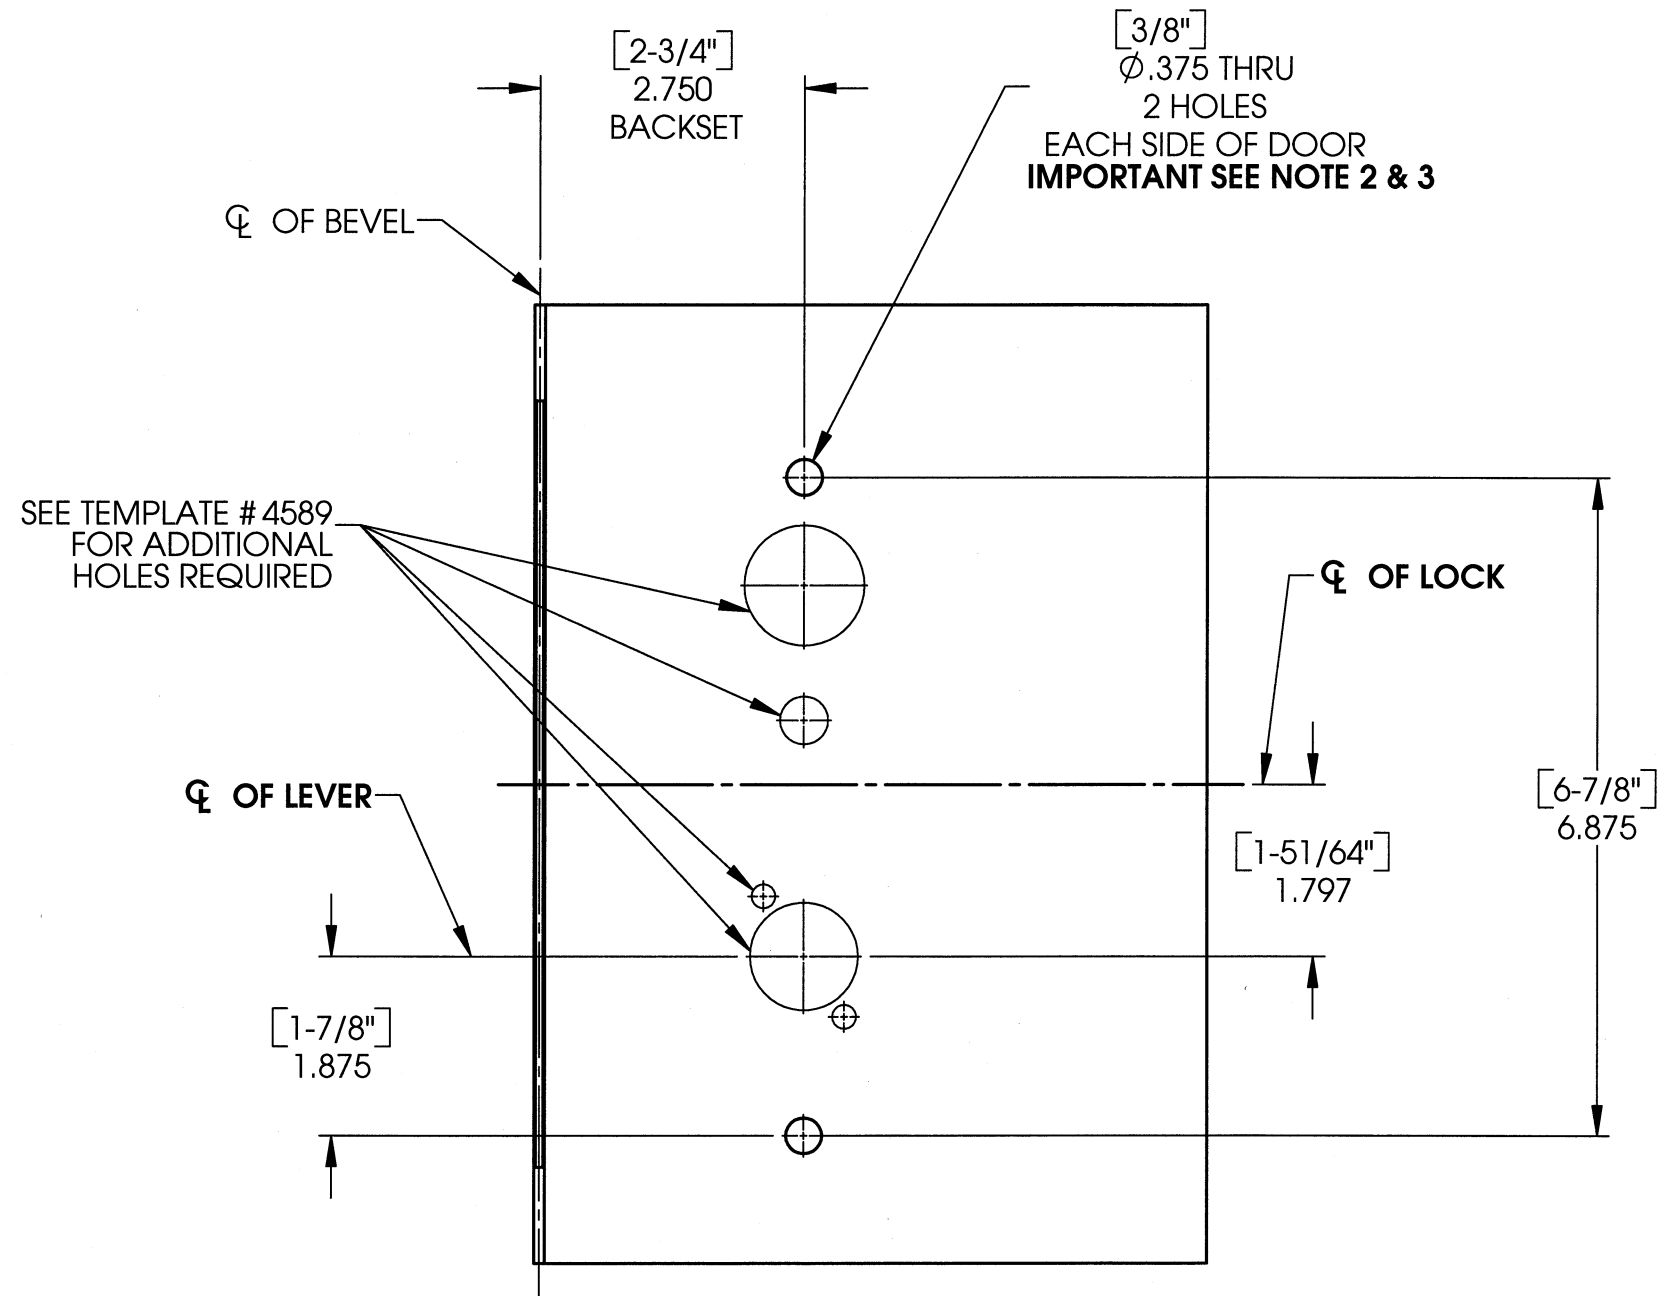

REQUIRED HOLES FOR CE, LE1, LW1 AND TE ESCUTCHEON
IMPORTANT SEE NOTE 3

NOTES:

1. TO ASSURE CORRECT ALIGNMENT OF TRIM, SCREW HOLES MUST BE LOCATED IN RELATION TO LEVER HOLE AFTER LOCK BODY IS INSTALLED IN DOOR.
2. SUITABLE REINFORCEMENT REQUIRED FOR MOUNTING SCREWS.
3. IMPORTANT FOR TRIM ONE SIDE FUNCTIONS, INSIDE ESCUTCHEON IS SURFACE APPLIED WITH (2) # 8-32 SCREWS.

SARGENT Manufacturing Company
100 Sargent Drive New Haven, CT 06511

7900 MORTISE LOCK
CE, LE1, LW1 AND TE ESCUTCHEONS

RELEASE DATE

11-JUN-07

TEMPLATE NO.
4610 A