

Model 790 Fire Block

for Models 7900 & 7970 Non-Hold Open
Overhead Concealed Door Closers with Slide Track
Supplemental Installation Instructions

**NORTON
RIXSON**

ASSA ABLOY

WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65warnings.ca.gov.

CAUTION

An incorrectly installed or improperly adjusted door closer can cause property damage or personal injury. These instructions should be followed to avoid the possibility of misapplication or misadjustment.


READ AND FOLLOW ALL INSTRUCTIONS.
SAVE THESE INSTRUCTIONS.

This document is supplemental.

Refer to the Installation Instruction and template of the specific model for closer installation information.

NOTES:

1. Do not scale drawing
2. Hardware dimensions shown (for cutouts)
3. Dimensions are in inches.
4. Dimension must be taken from separate template provided with closer.

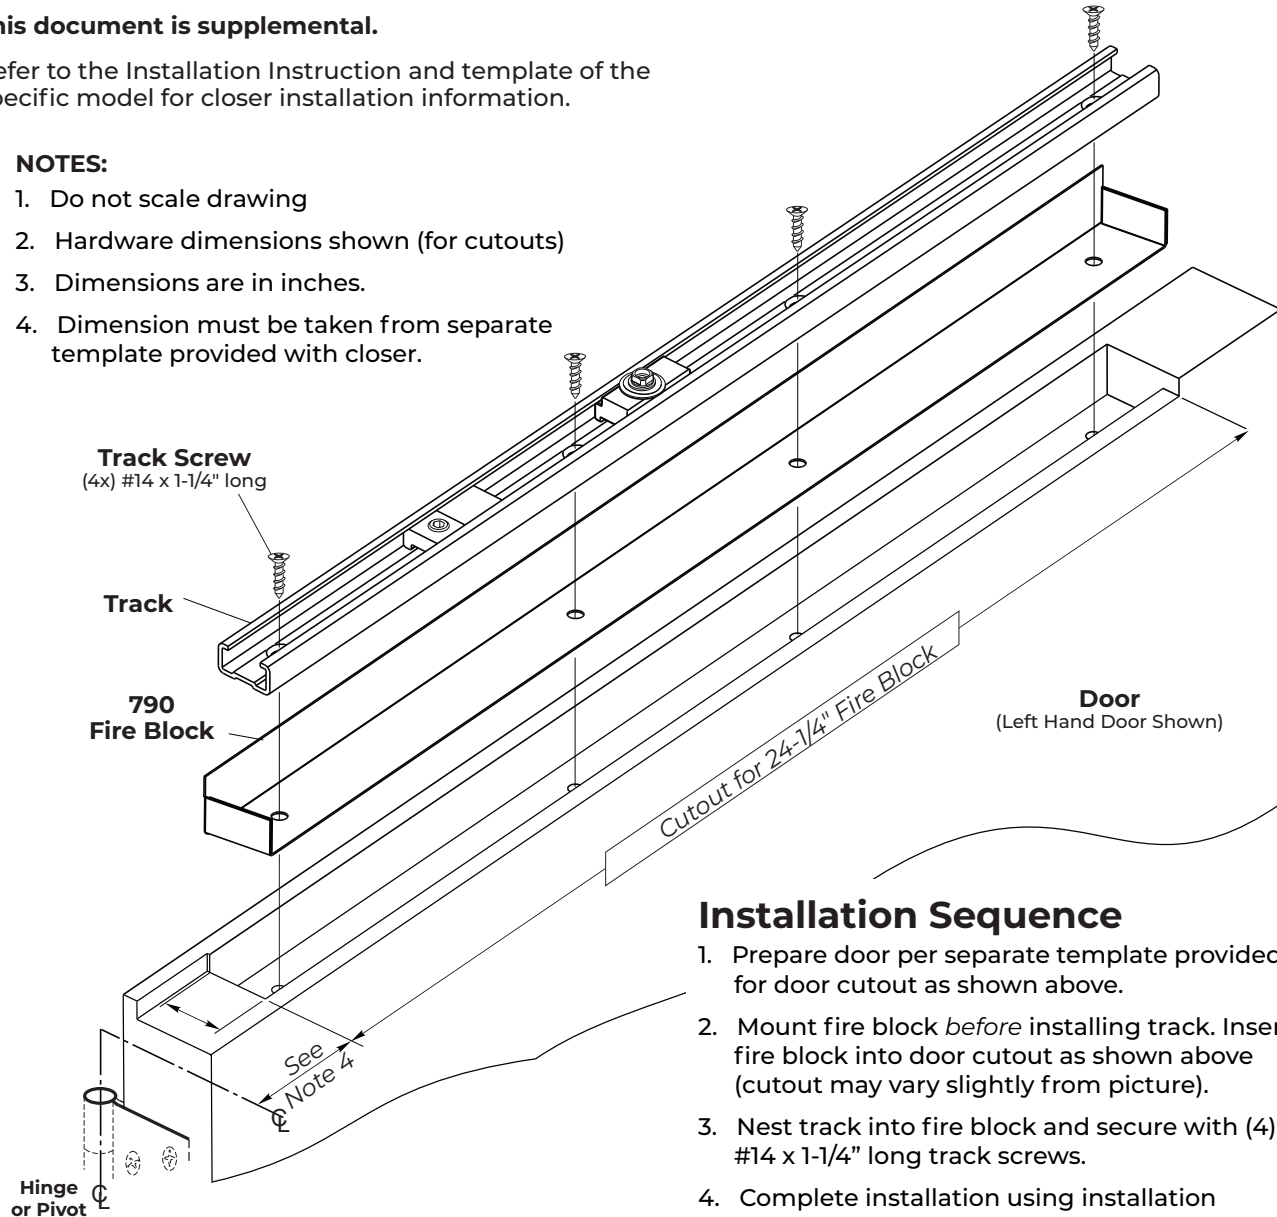

Installation Sequence

1. Prepare door per separate template provided for door cutout as shown above.
2. Mount fire block *before* installing track. Insert fire block into door cutout as shown above (cutout may vary slightly from picture).
3. Nest track into fire block and secure with (4) #14 x 1-1/4" long track screws.
4. Complete installation using installation instructions provided with closer.

Technical Product Support:
Monroe, NC 28112 USA
Phone: 877.974.2255 ext: 2
Techsupport.NortonRixson@assaabloy.com
NortonRixson.com

Copyright © 2001, 2014, 2024, 2025, ASSA ABLOY Accessories and Door Controls Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Accessories and Door Controls Group, Inc. is prohibited.
80-9379-1202-020 Rev 4 05/25

Approved 2025-07-31

Experience a safer
and more open world