

7200 Series

Model 7290MPS x 790, Fire Block for Non-Hold Open Overhead Concealed Closers Supplement Assembly Instructions

**NORTON
RIXSON**

ASSA ABLOY

WARNING


This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65warnings.ca.gov.

ATTENTION:

An incorrectly installed or improperly adjusted product can cause property damage or personal injury. These installation instructions should be followed to avoid the possibility of misapplication or misadjustment.

NOTES:

1. Do not scale drawing.
2. Hardware dimensions shown (for cutouts).
3. Dimensions are in inches (mm).
4. This dimension must be taken from separate template provided.

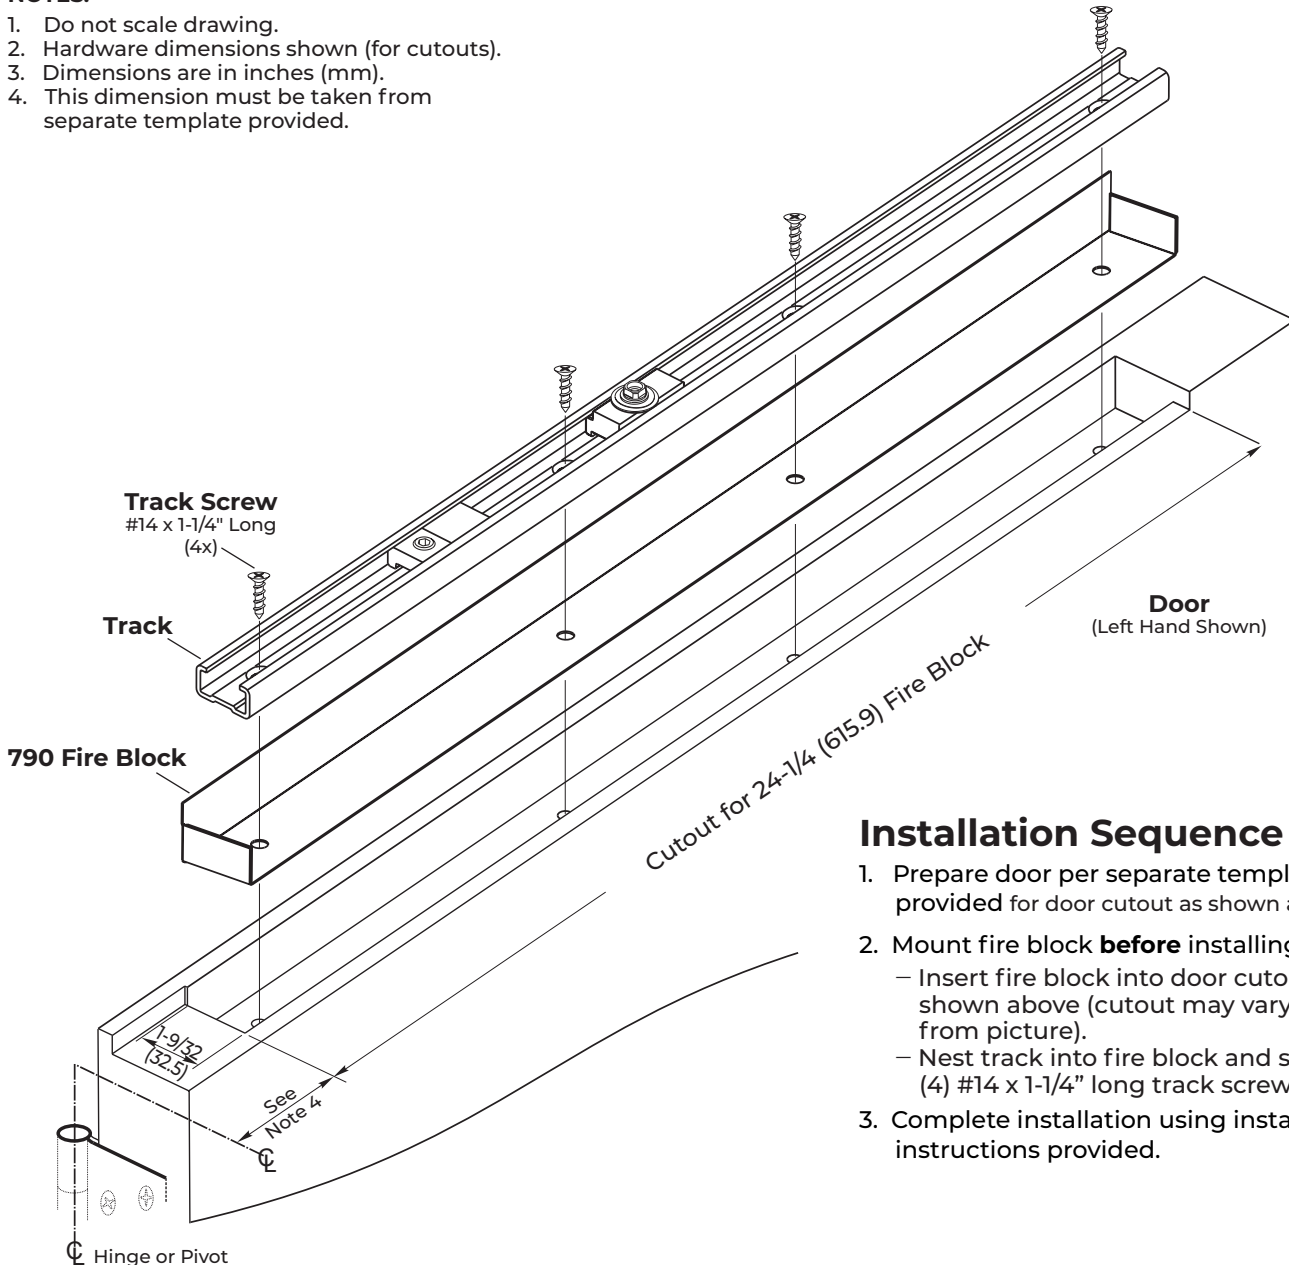

Installation Sequence

1. Prepare door per separate template provided for door cutout as shown above.
2. Mount fire block **before** installing track.
 - Insert fire block into door cutout as shown above (cutout may vary slightly from picture).
 - Nest track into fire block and secure with (4) #14 x 1-1/4" long track screws.
3. Complete installation using installation instructions provided.

Technical Product Support:
Monroe, NC 28112 USA
Phone: 877.974.2255 ext: 2
Techsupport.NortonRixson@assaabloy.com
NortonRixson.com

Copyright © 2002, 2014, 2025, ASSA ABLOY Accessories and Door Controls Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Accessories and Door Controls Group, Inc. is prohibited
80-9372-1072-020 Rev 4 06/25

Approved 2025-06-09

Experience a safer
and more open world