
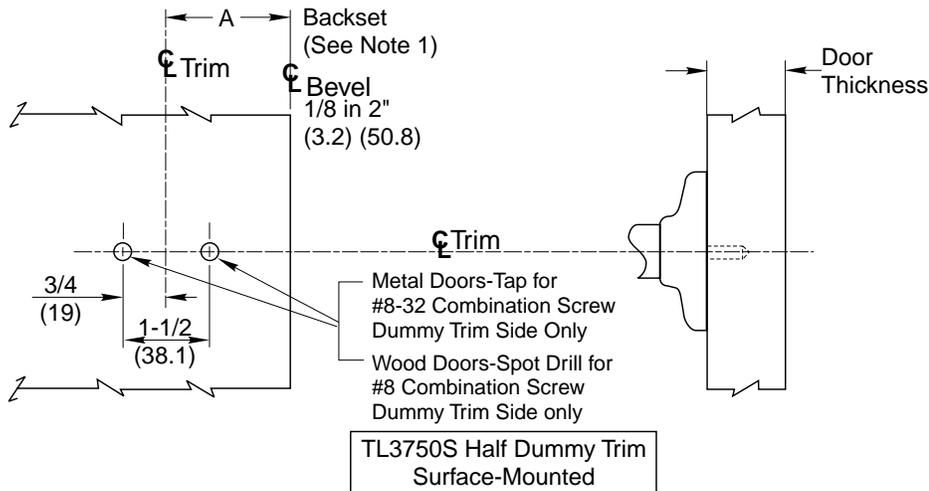



Notes:

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Dimensions given in inches and (mm).

Template Cross Reference	
Description	Template
TL3700 Series Tubular Lock	T31048

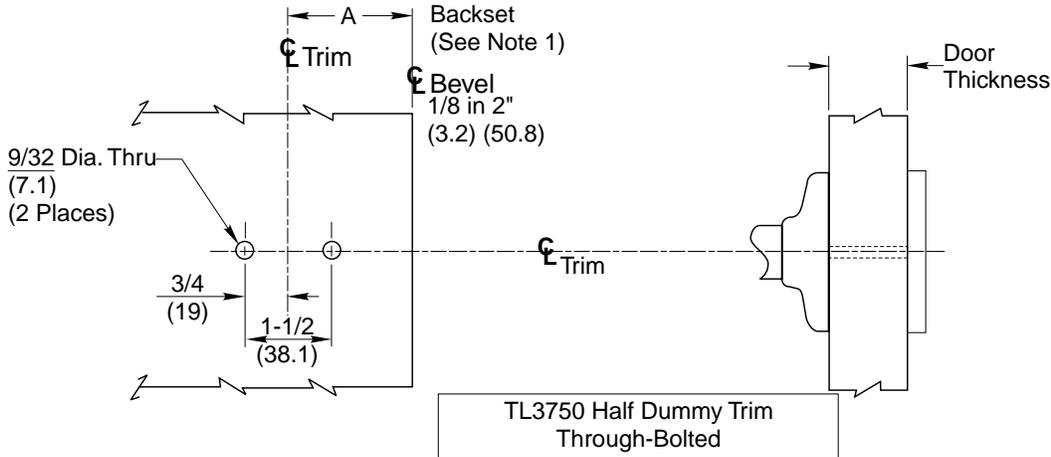

Backset A	
2-3/4 (69.9)	Regular
2-3/8 (60.3)	Optional

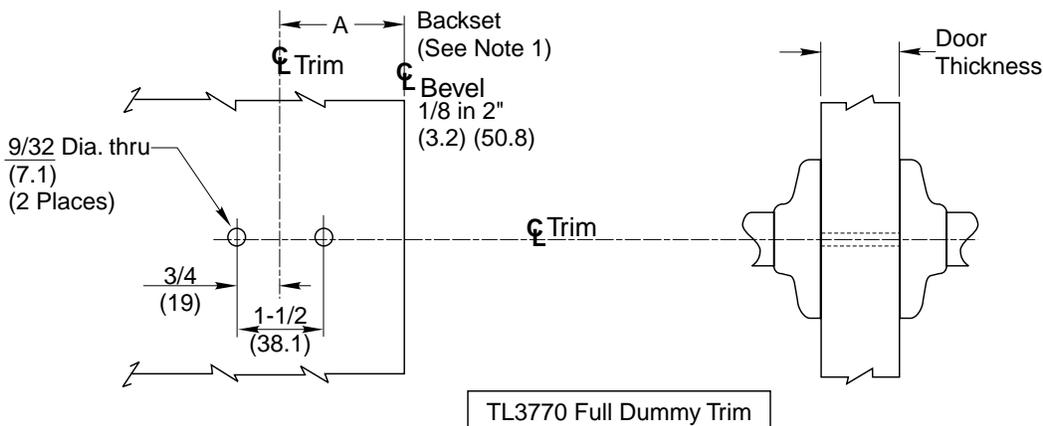

RESPONSIBILITY
 Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

TL3750
TL3750S, TL3770

 Dummy Trim

Corbin Russwin[®]
 www.corbinrusswin.com
 Do Not Scale Drawing

Supersedes	Dr.	App.
Date 07-07	Template Number	T31049