


Notes:

1. Dimensions given in inches and (mm).

Template Cross Reference	
Full Dummy Trim	T31186

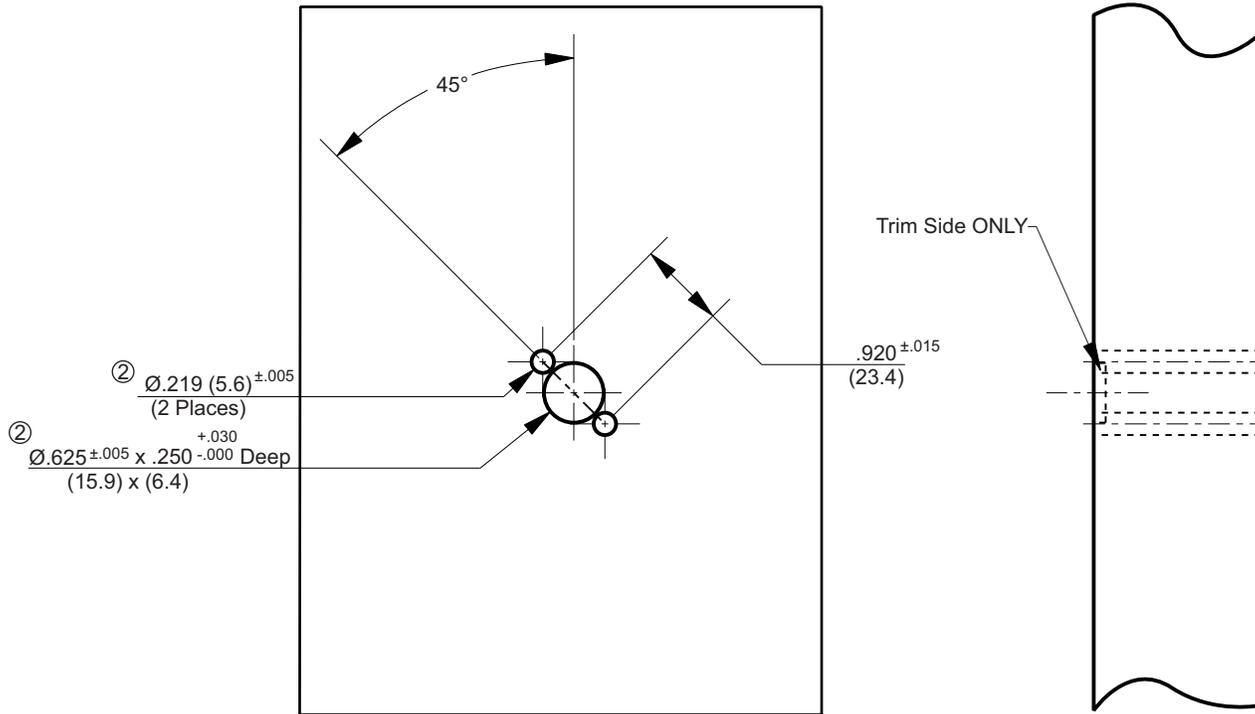

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

Inspire™ Half Dummy Trim



ASSA ABLOY

www.corbinruswin.com

SUPERSEDES T31187-1	DO NOT SCALE DRAWING
TEMPLATE NUMBER T31187-2	DATE 07-14