


**Notes:**

1. Dimensions given in inches and (mm).

Template Cross Reference	
Half Dummy Trim	T31187

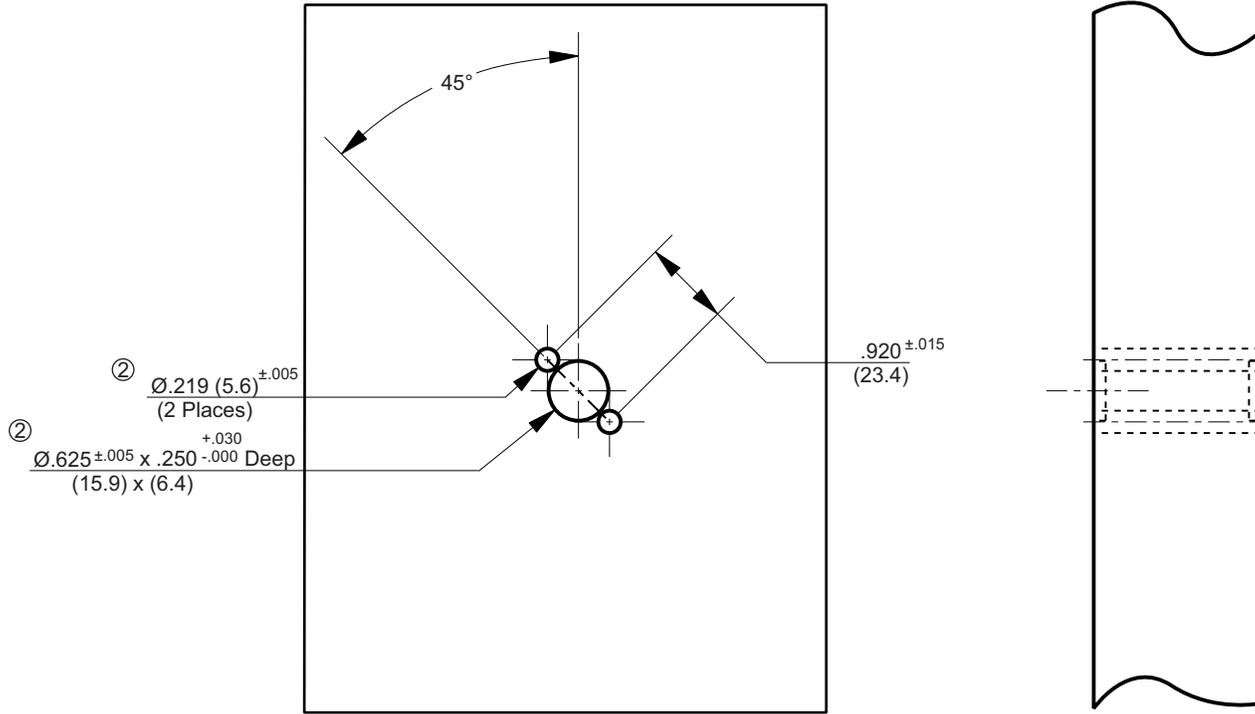

**RESPONSIBILITY**

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

**Inspire™ Full Dummy Trim**



**ASSA ABLOY**

www.corbinruswin.com

SUPERSEDES	T31186-1	DO NOT SCALE DRAWING
TEMPLATE NUMBER	<b>T31186-2</b>	DATE <b>07-14</b>