


Notes:

1. Backset is measured from centerline of bevel which is centerpoint of door thickness. Non-beveled door shown.
2. Dimensions given in inches and (mm).

Series Function	Hole A Required
TL3710	
TL3720	●
TL3780	

Metal Door Prep

Wood Door Prep

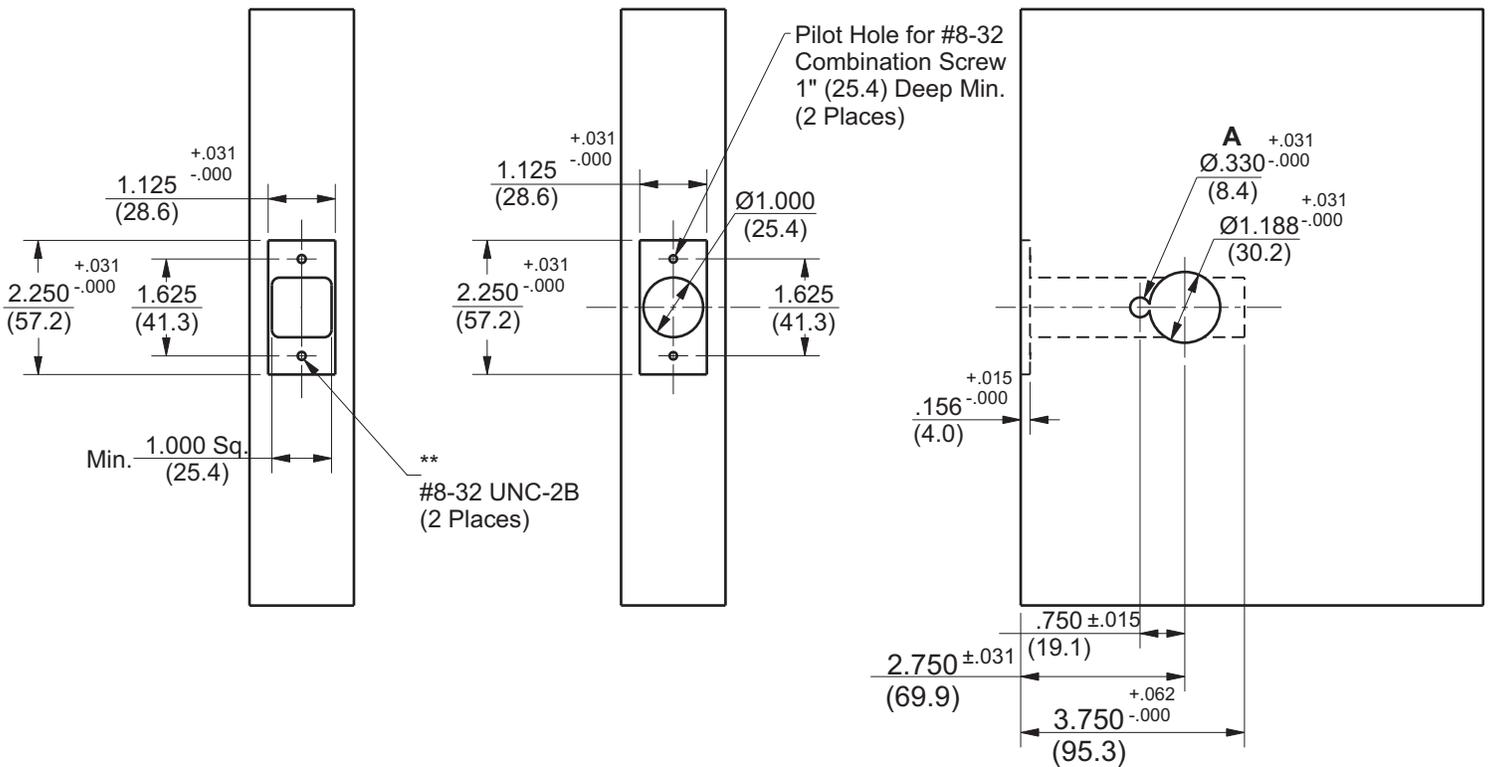

** Threaded Holes Can be omitted on Wood Doors.

Template Cross Reference	
SF & SFR Strike	T30638
ANSI Strike	T30543
Strike Box	T30476
Full Dummy Trim	T31186
Half Dummy Trim	T31187

Tolerances	
Inches	(mm)
.005	(.127)
.010	(.254)
.015	(.381)

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

TL3700 Series Inspire™ Trim



ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES	DO NOT SCALE DRAWING
TEMPLATE NUMBER	DATE
T31185	12-10