


BACKSET DEFINITION	DOOR HANDING	DOOR HOLES REQUIRED								
		1	2	3	4	5	6	7	8	9
		X	X	X	X	X	X	X		X
		X	X	X	X	X	X		X	X
		X		X	X	X			X	X
		X		X	X	X		X		X


IMPORTANT

For additional cutouts on inside of door, refer to exit device template.

Refer to exit device template for Location of vertical and horizontal Center line of cylinder.

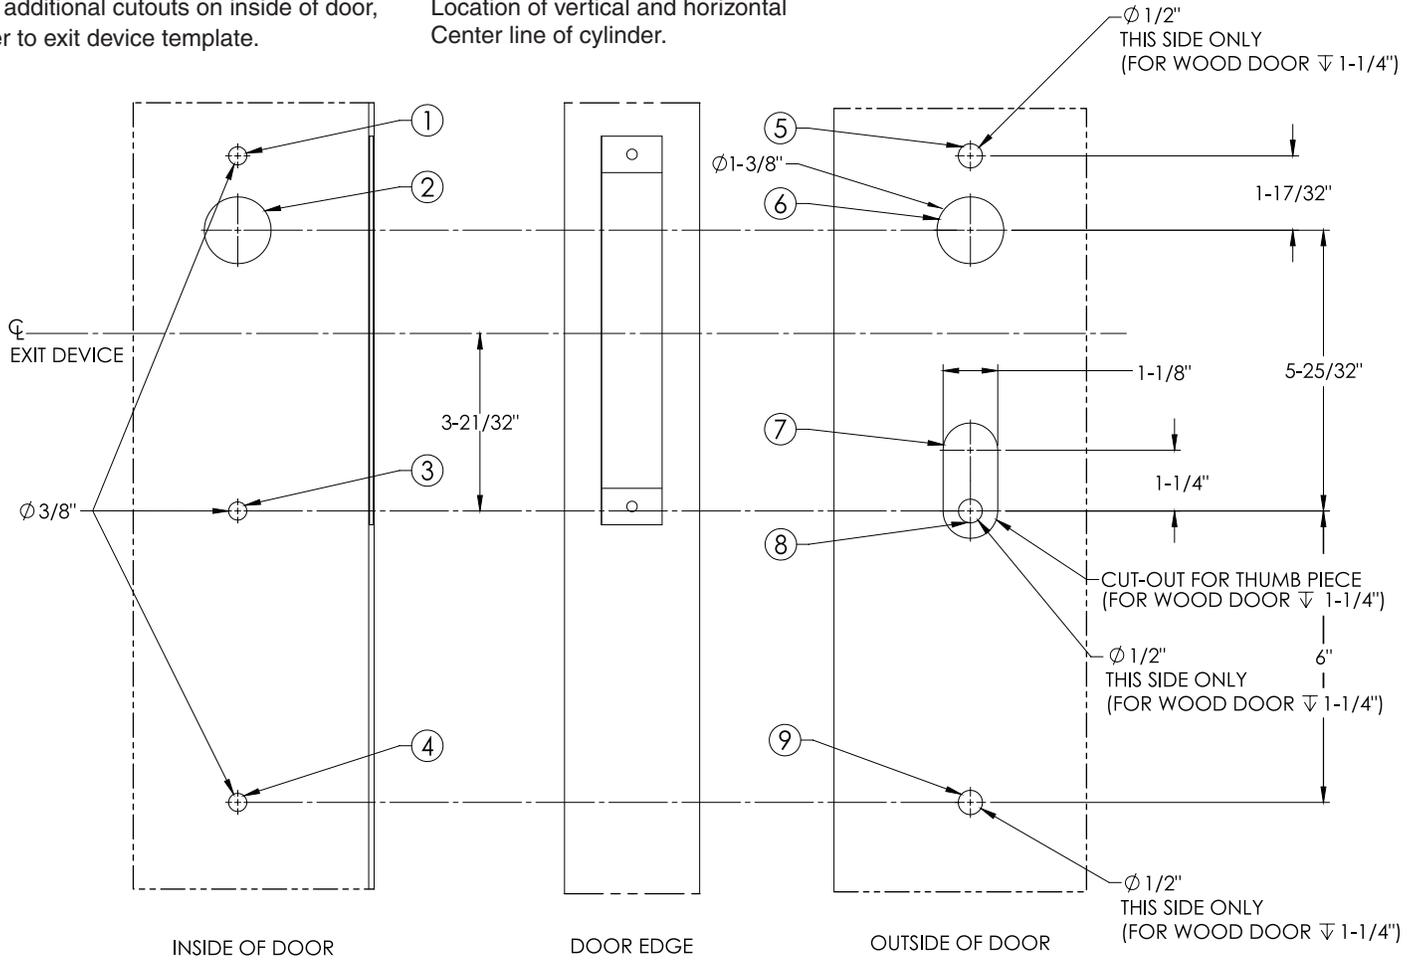

R.H.R.B. DOOR SHOWN

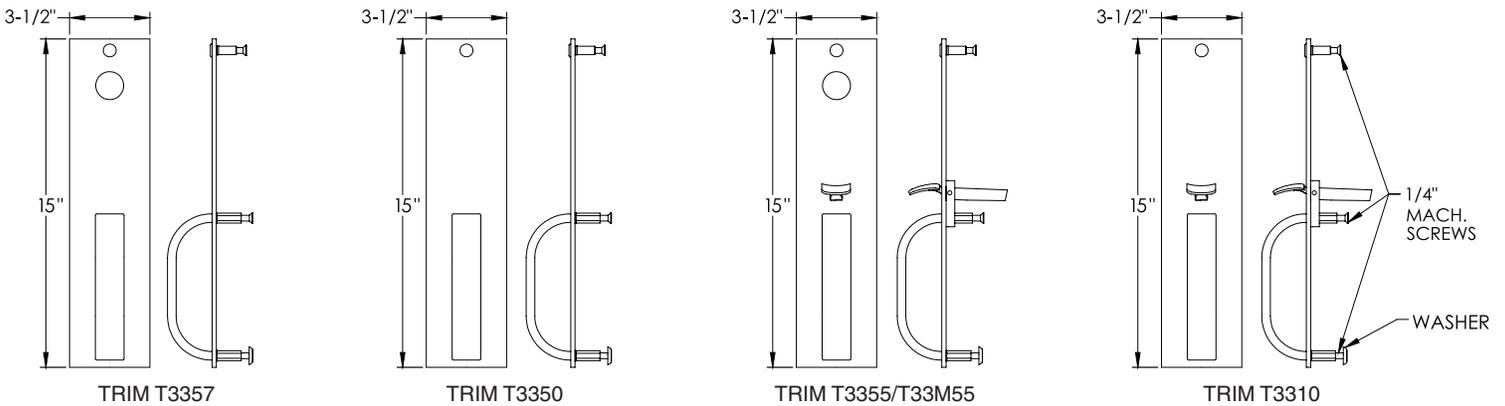

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

T33 Trim



www.corbinruswin.com

SUPERSEDES	T31212	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T31212-1	DATE 01-15