



1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Door prep with 2-3/4" (69.9) backset meets ANSI standards A115.2 for steel doors and A115.W2 for wood doors plus through bolt holes shown.
3. Dimensions given in inches and (mm).
4. 1-1/4" strike lip suits frame for 1-3/4" thick door. Lip will vary for other door thicknesses.
5. Door prep will vary for 3/4" (19) latch assembly. Refer to template T30528 for details.
6. (\*\*) Inside only. Wire clearance.
7. Sheet 2 shows how prep details are affected by handing.
8. Concealed Door Position Switch p/n: 708F989 is included with this product. Use and installation location to be specified by others. See Access 600 installation instructions for details (FM290 or FM313).


BACKSET "A"	
2-3/4 (69.9)	Regular
3-3/4 (95.3)	Optional
5 (127)	

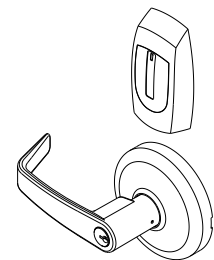

CL33600 TCRNE1 Series

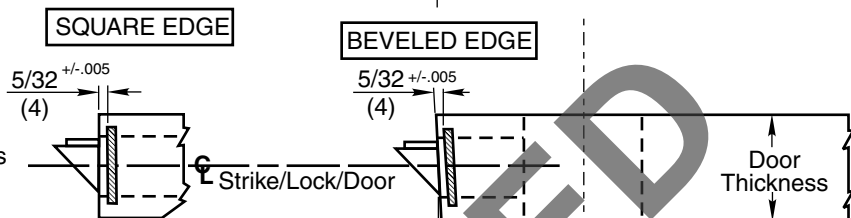

When door gasketing or silencers are used, proper allowances must be made for strike location to maintain a common centerline with lock and door as shown so that bolt will freely enter strike.

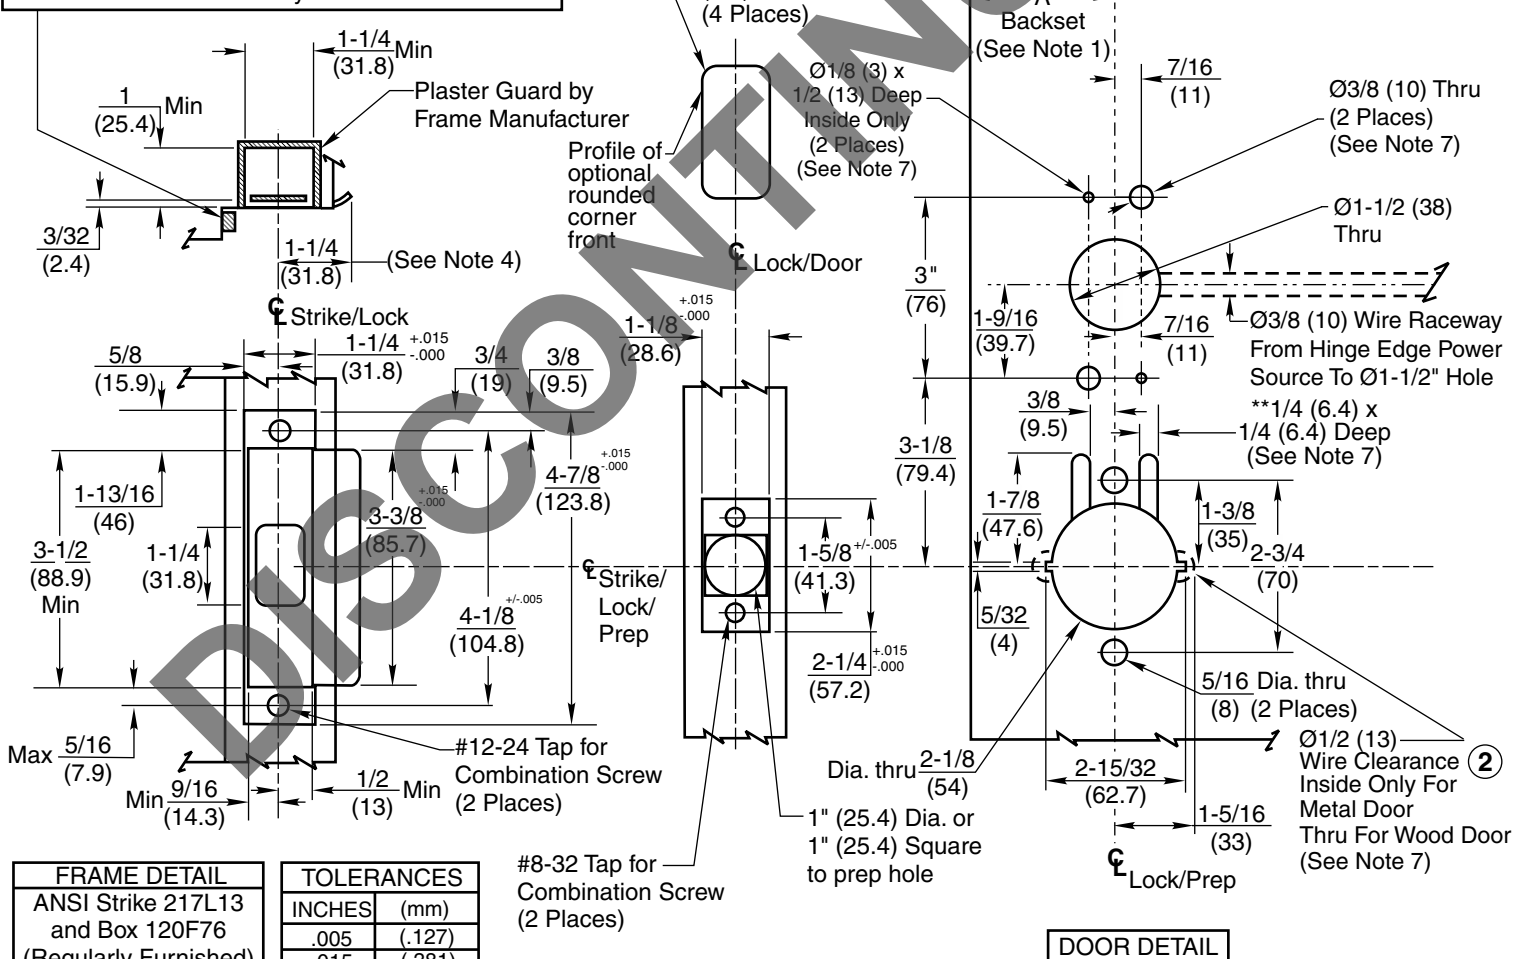

<p>FRAME DETAIL</p> <p>ANSI Strike 217L13 and Box 120F76 (Regularly Furnished)</p>
--

TOLERANCES	
INCHES	(mm)
.005	(.127)
.015	(.381)

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.


# Access 600® TCRNE1 CL33600 Series Cylindrical Lever Lockset




[www.corbinrusswin.com](http://www.corbinrusswin.com)

SUPERSEDES <b>T31071-1</b>		DO NOT SCALE DRAWING	
TEMPLATE NUMBER <b>T31071-2</b>		SHEET <b>1 of 2</b>	DATE <b>08-18</b>

LH/LHR DOORS

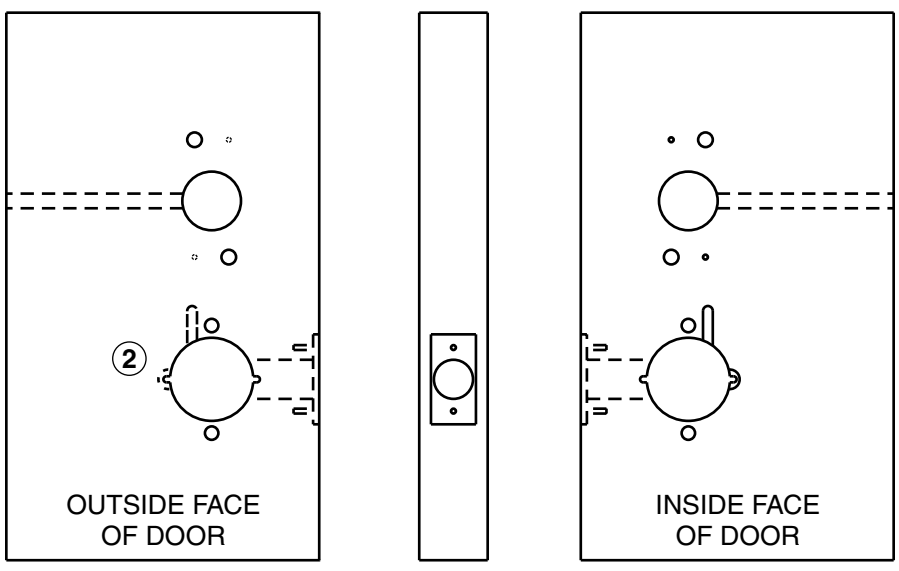

RH/RHR DOORS

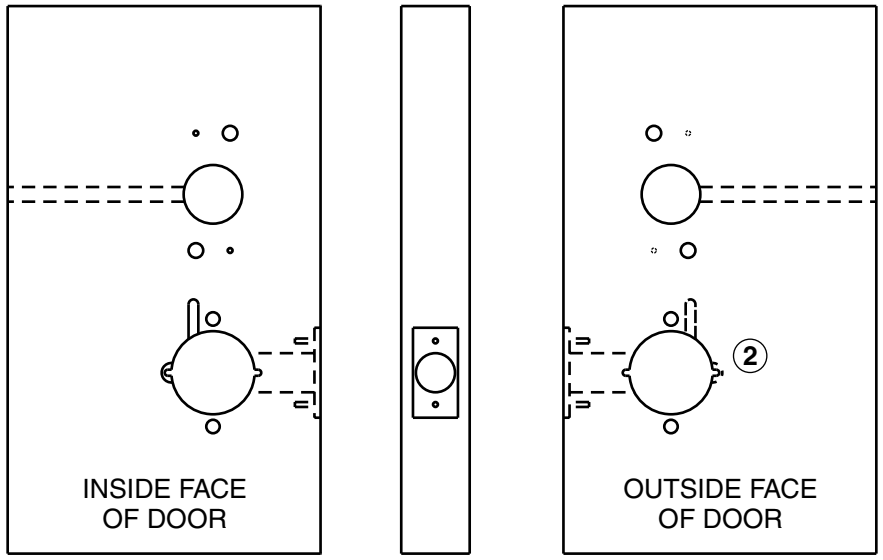

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

**Access 600® TCRNE1**  
**CL33600 Series**  
**Cylindrical Lever Lockset**



**ASSA ABLOY**

[www.corbinrusswin.com](http://www.corbinrusswin.com)

SUPERSEDES	T31071-1	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T31071-2	SHEET 2 of 2
		DATE 08-18