




**Frame Face Installation
(Inswing Door)**

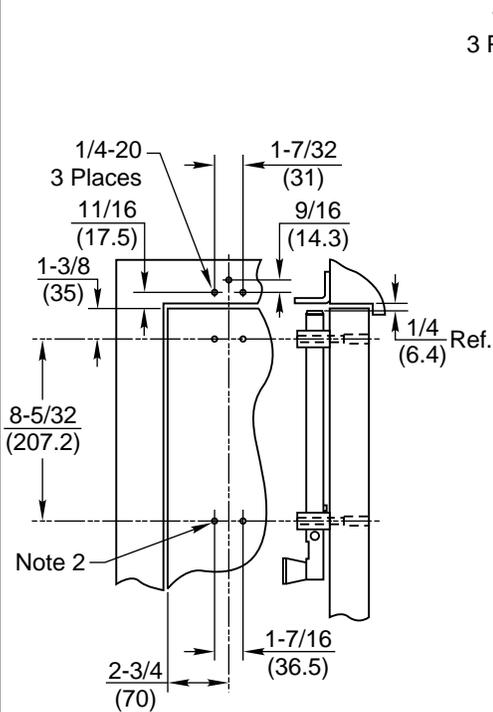

**Frame Stop Installation
(Outswing Door)**

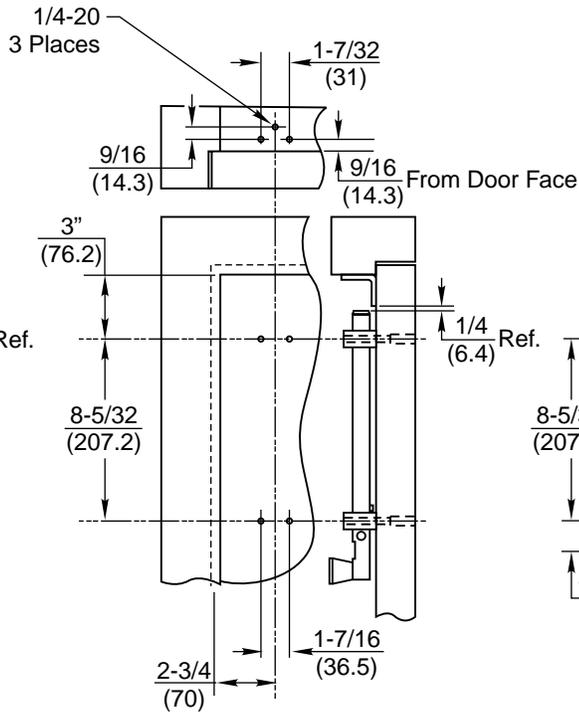

**Door Bottom Installation
(Inswing or Outswing Door)**

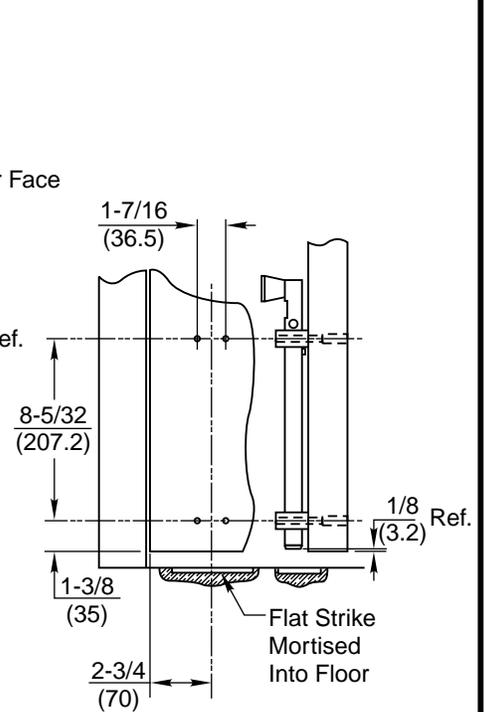

Notes:

1. Do not scale drawing.
2. Holes in door are 9/32" (7.2) diameter thru and 3/8" (9.5) diameter x 1-1/8" (28.6) c'bore in outside surface.
3. Tolerance on all dimensions is +/- 1/64" (0.4)
4. Dimensions are in inches (mm).

**988 CR Surface Bolt
Metal Door Preparation**

**Corbin
Russwin**[®]
www.corbinrusswin.com

SUPERSEDES	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T30988 DATE 1-04