


# Architectural Door Accessories

## Pemko Side Wall Track (SWT) System With Soft Close

The global leader in  
door opening solutions

**WARNING: DO NOT LEAVE DOOR UNATTENDED AT ANY POINT DURING INSTALLATION!**


**Door Leaf Capacity - Up to 200 lbs.**

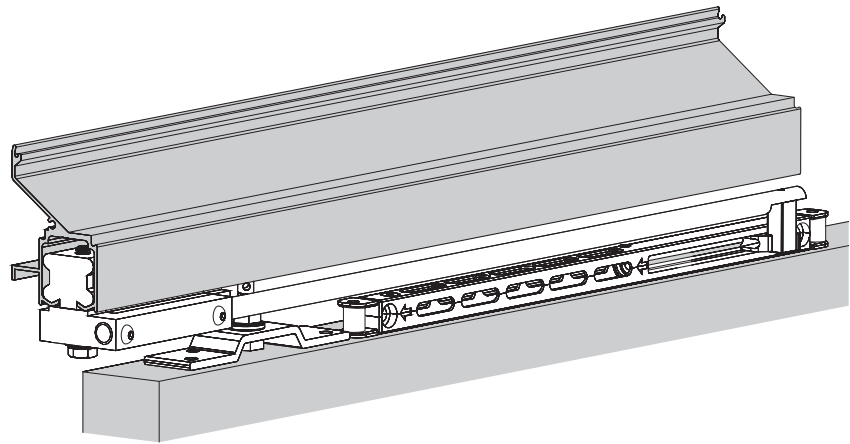


- Required Tools:
- 12mm Wrench
  - 7/16" Wrench
  - Level
  - 1/8" Hex Key
  - 1/8" Drill Bit
  - 1/2" Drill Bit

Part Number	Description
280_-SWTKIT/_-1411-1	Single Device 88-132 lbs
280_-SWTKIT/_-1411-2	Dual Device 88-132 lbs
280_-SWTKIT/_-1413-1	Single Device 133-176 lbs
280_-SWTKIT/_-1413-2	Dual Device 133-176 lbs
280_-SWTKIT/_-1418-1	Single Device 177-200 lbs
280_-SWTKIT/_-1418-2	Dual Device 177-200 lbs

Minimum Door Width 28"

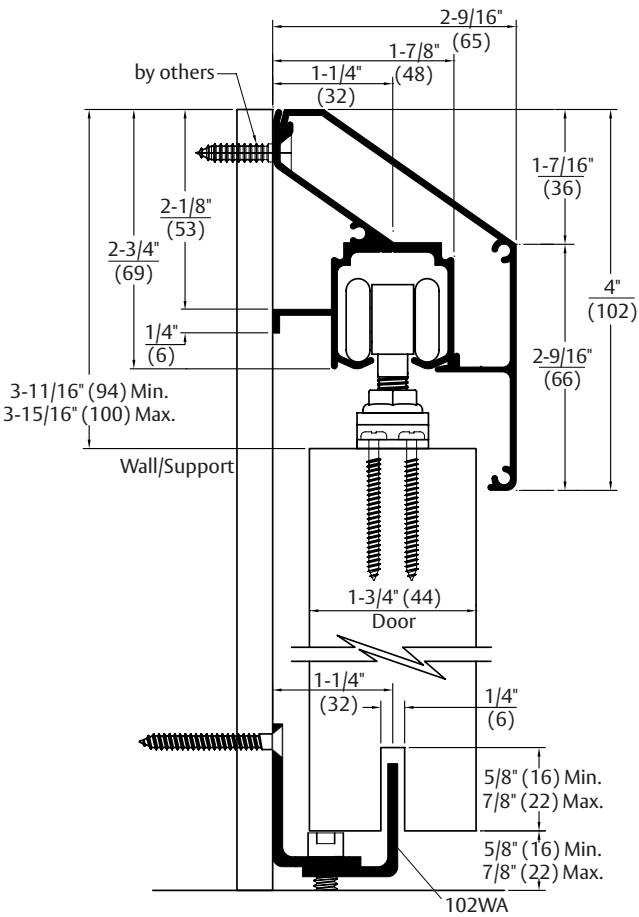

### 1. Assemble hangers.

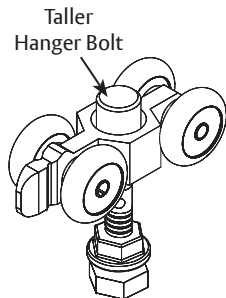


### 2. Fit hanger aprons to door panels.

Drill 1/2" (13) dia x 1-1/2" (38) deep hole 5" (127) from door edge to centerline and centered in door thickness.


Using apron as template, pre-drill four mounting holes with 1/8" drill bit.

Install aprons.

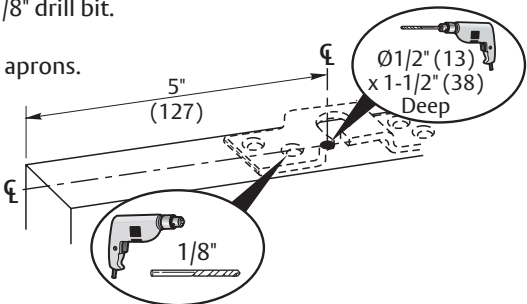

### 3. Insert hangers.


Ensure that each hanger is inserted with flange oriented as shown.

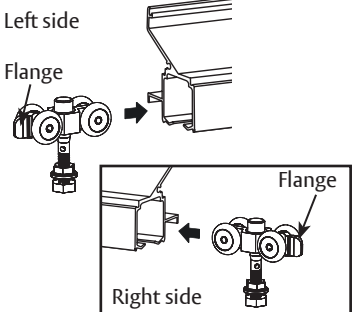

#### 4. Secure track.

Locate mounting holes only in areas where wall offers sufficient backing to hold screw. One fastener at each end and on 24" (61cm) centers is recommended.

Check that track is level before finalizing mounting process.

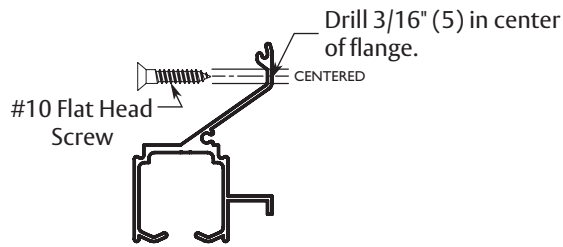


#### 5. Mortise door.

If using floor mounted guide, attach a plumb line to hanger.


Place hanger inside track.

Using plumb line, mark for position of door guide on floor.

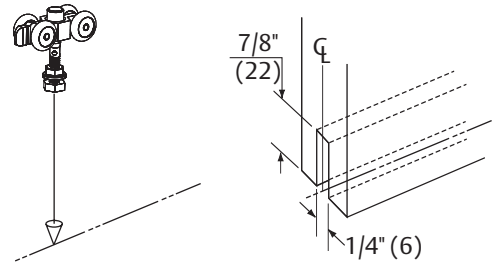


#### 6. Fit either door guide 102N or 102WA.

Pre-drill mounting holes with 1/8" drill bit.

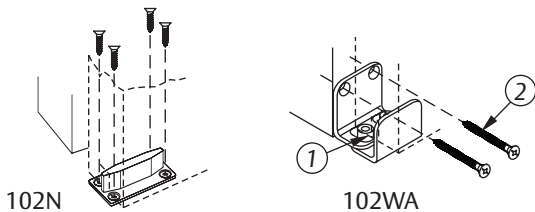

#### 7. Activate devices.


Slide catch towards center of device as shown.

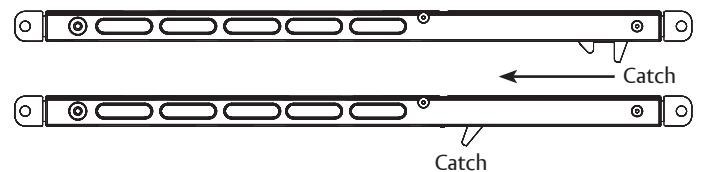

#### 8a. Position soft close damper(s).

Locate soft close damper(s) on top door edge. Pay special attention to damper orientation as shown. Catches are installed toward center of door.



Damper mounted on left side of door must face front of door. Damper on right side of door must face back of door as shown.



System may come with only one damper.

#### 8b. Mark and pre-drill holes for damper(s).

Predrill 1/8" x 2" for #10 x 2" wood screws (provided).

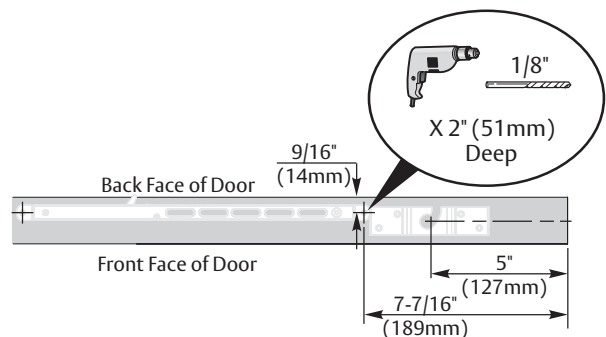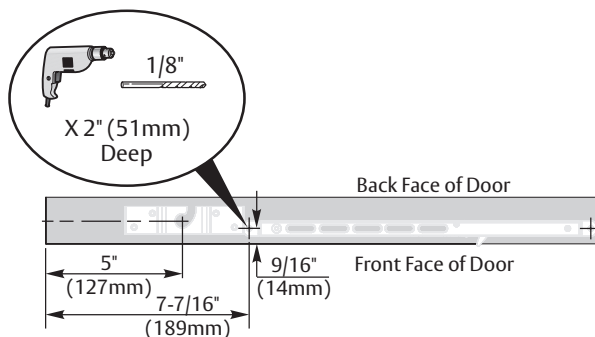

**ASSA ABLOY**

The global leader in  
door opening solutions


Copyright © 2018, ASSA ABLOY Accessories and Door Controls Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Accessories and Door Controls Group, Inc. is prohibited.

81052 10/18

## 8c. Install damper(s) with spacers.

Insert spacers (provided) between mounting tabs on dampers as shown.



Attach damper to top door edge using #10 x 2" wood screws.

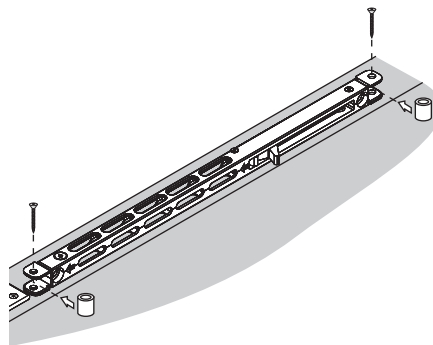

## 9. Hang door and adjust until level.


Slide door into open end of track or hook door to hangers as shown.

Adjust until level.

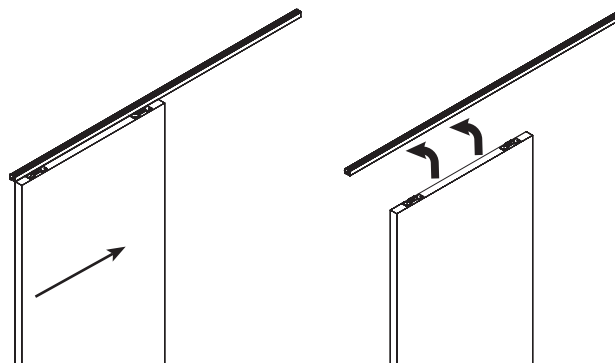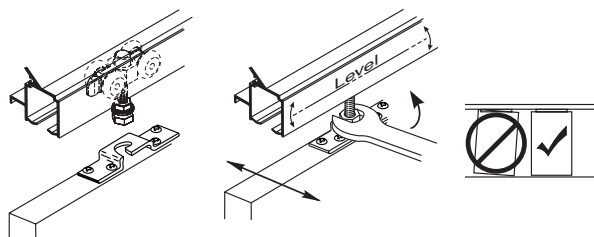

## 10. Choose activator pin.


Choose appropriate activator pin by measuring clearance and using chart below.

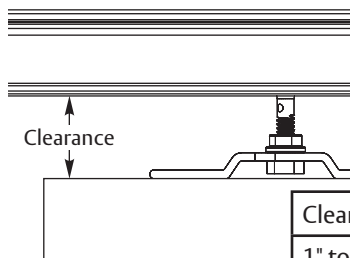

Clearance	Activator Pin
1" to 1-1/4"	Short Pin
1-5/16" to 1-3/8"	Long Pin

## 11. Install activator pin.

Install appropriate activator pin on end of rod as shown using 5/64" hex wrench (provided).

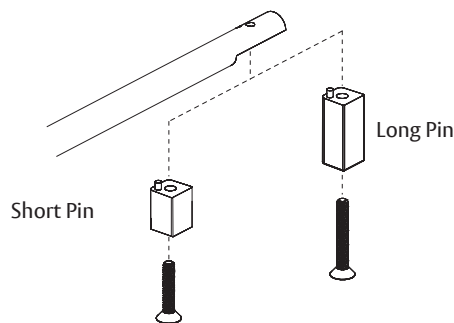

## 12. Install activator assembly into track.

Install activator assembly into track as shown.



Be sure that activator pin is pointing towards center of track.

Ensure bottom base portion of activator is in line with door edge when door is in open/closed position as shown.

Tighten two hex bolts in bottom base of activator assembly using 7/16" wrench (not provided).

Tighten two set screws in bottom base of activator assembly using 1/8" hex key (not provided).

Screws and Hex Bolts

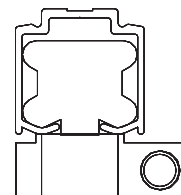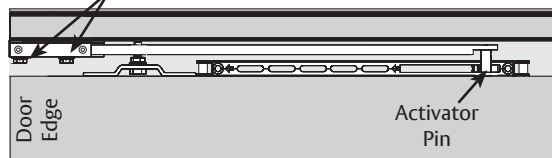

**ASSA ABLOY**

The global leader in  
door opening solutions

Copyright © 2018, ASSA ABLOY Accessories and Door Controls Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Accessories and Door Controls Group, Inc. is prohibited.


81052 10/18

### 13. Align activator.

Cycle door between open position and closed position.

Adjust activator assembly location as needed.

Cycle door several times to ensure proper engagement between activator pin and soft close damper.

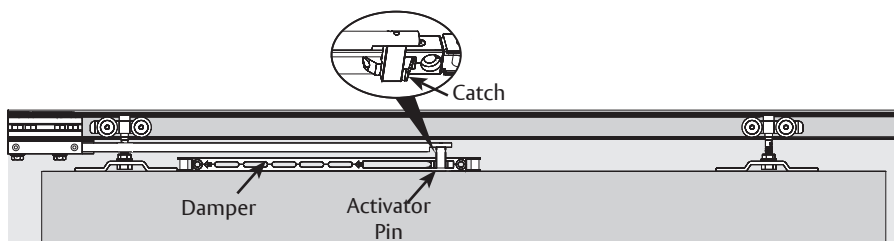


### 14. Snap on side wall fascia.

Apply foam tape to inside of fascia 14" (35.5cm) in from door edge to outer edge of foam as shown.

Apply second foam tape to wall 14" in from opposite end of track edge to edge of foam as shown if applicable.


Insert point A of fascia into groove B on track. B should sit in the elbow of A; not beyond tip. See detail.

Apply pressure at point C on fascia, beginning at one end and along length of track until it snaps into place.

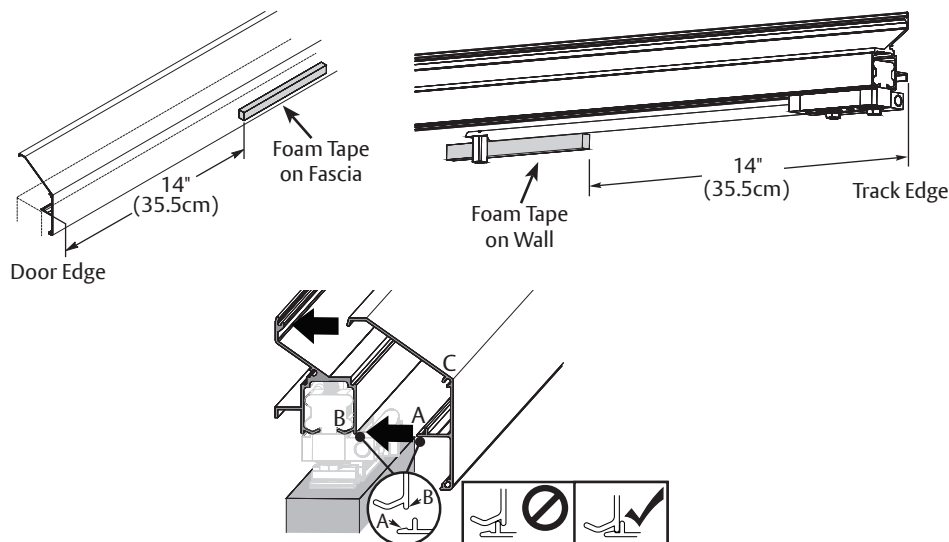

### 15. Install end plate.

Install end plates with fasteners provided.

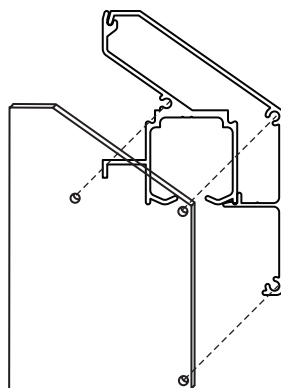

[www.assaabloydooraccessories.us](http://www.assaabloydooraccessories.us)

USA:  
Ventura, CA 93003  
Phone: 800.283.9988

Memphis, TN 38141  
Phone: 800.824.3018

Canada:  
Vancouver, BC V2T6W3  
Phone: 877.535.7888

Toronto, ON L4K4T9  
Phone: 877.535.7888