

ASSA ABLOY FRAME INSTALLATION

FOR MASONRY, METAL STUD, and WOOD STUD WALL CONDITIONS:

(*Thermal Break series not included. See 1090-1085)

JOB SITE STORAGE: Store frames off the ground on at least 4" high wood runners or skids, in a manner that will prevent rust or damage. Do not store directly on the ground. Assembled frames shall be stored vertically. Cover frames with tarpaulin or plastic but do insure that adequate ventilation is provided to eliminate moisture condensation. When frames are to be fully grouted and when mortar contains "anti-freeze" agents, the inside of the frame should be coated with a corrosion resistant material by the installation contractor.

ASSEMBLY of KD (Knock Down) FRAME

For easy 3D
instructions,
download the
BILT mobile app




SLOTS FOR
CORNER TABS

CORNER TABS

BEND CORNER TABS
TOWARDS INSIDE OF
FRAME

CORNER
ASSEMBLY

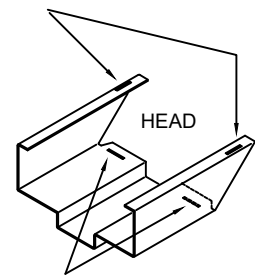


SLOTS FOR
JAMB TABS


JAMB TABS

BEND JAMB TABS
TOWARDS OUTSIDE
OF FRAME

Install rubber silencers before
frame is setup to avoid grout
plugging the holes.

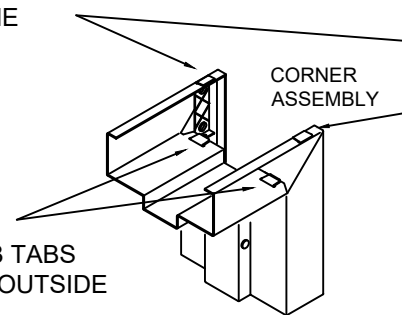


PLUMBING of FRAME

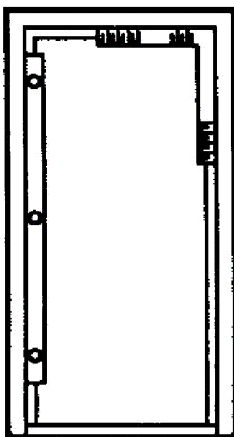

The installer should use wood spreaders (as described at right), a carpenter's level (the longer the better), and a carpenter's square (the bigger the better). Set the frame in the desired location. Level head and plumb jambs. Shim under jambs if necessary.

Typical wood spreaders must be square and made from lumber at least 1" thick. Length of spreader equals door opening width at the head. Cut clearance notches for frame stops as shown. Spreader must be nearly as wide as frame depth for proper installation.

ASSA ABLOY MASONRY WALL CONSTRUCTION

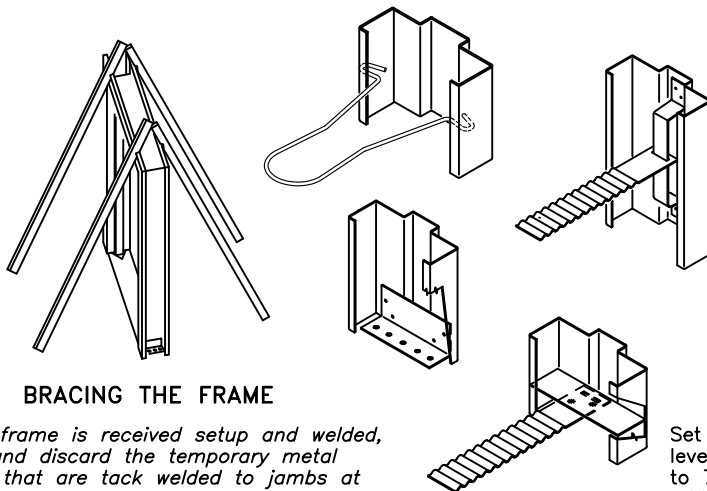

BRACING THE FRAME


NOTE: If frame is received setup and welded, remove and discard the temporary metal supports that are tack welded to jambs at sill before starting installation.

Brace the frame as shown or shore to ceiling. Do not brace in the direction of intended wall. Plumb and square jambs. Set spreader. Attach jambs to floor through floor anchor.

INSTALLING THE FRAME

Set and plumb frame. Install jamb anchors at hinge levels as wall is laid up. (3 anchors for heights to 7'-2" -- one more anchor per jamb for each additional 2 feet of height or fraction thereof.) A second spreader should be used at mid-point of opening to maintain the door opening dimension. Continually check plumb and square as wall progresses. CHECK: The difference between diagonals measured from opposite corners should not exceed 1/16".

WOOD or METAL STUD WALL CONSTRUCTION

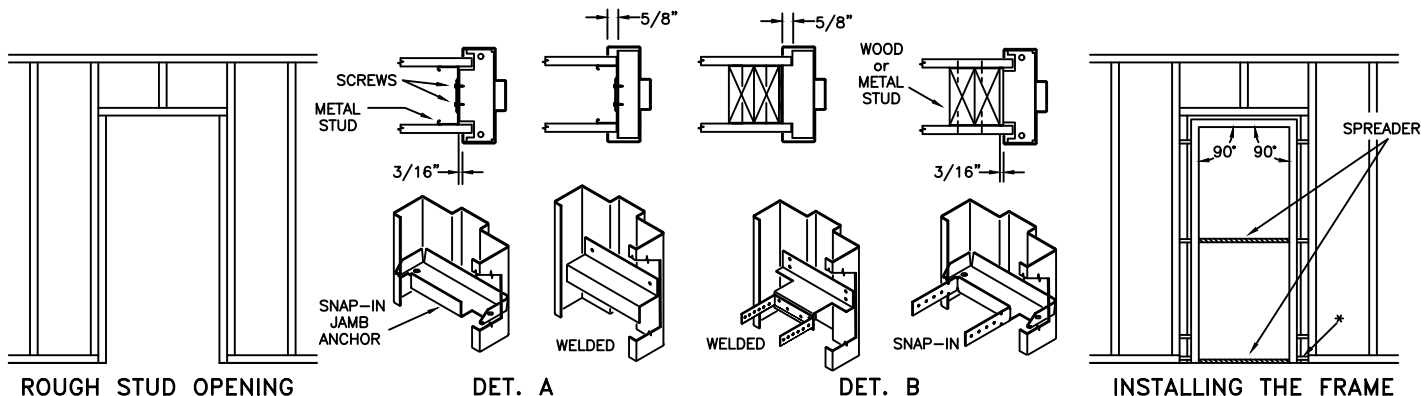

ROUGH STUD OPENING

ADD 3/8" TO OVERALL FRAME WIDTH
ADD 1/8" TO OVERALL FRAME HEIGHT

DET. A

DET. B

INSTALLING THE FRAME

1. Build the rough opening in wall allowing 3/16" clearance between upright stud and frame jamb and 1/8" clearance between header and top of door frame. *

2. If not already in place insert jamb anchors in frame throat, at hinge levels and directly opposite at strike jamb. Tap anchors into place with a hammer.

3. Place frame in rough opening.

4. Set spreaders and level frame. Shim jambs if necessary.

*If you choose to erect door frame before wall framing: brace frame and anchor at sill per masonry procedure above, then butt studs to door frame anchors.

(Conversion: 1" = 25.4 mm, e.g., 1-3/4" = 44.45 mm)

5. Square and fasten top anchors to stud on ONE JAMB ONLY. Check plumb and square of door frame and continue to fasten balance of anchors to studs. Repeat on opposite jamb.

6A. Fasten supplied anchors (detail "A") to metal stud thru web of channel using (2) screws per anchor. Screws shall be #6 x 3/8" (min) steel sheet metal or self tapping type. Detail "B" method of attachment is acceptable for metal studs.

6B. Fasten supplied anchor (detail "B") by bending tabs around stud and fasten tabs with suitable wood screws, nails, or sheet metal screws. Use (4) fasteners per anchor (min), two per tab.

7. Maintain necessary clearance between frame returns and stud for inserting wall board. Do not install wall board until you are sure that frame is plumb and square.

For easy 3D
instructions,
download the
BILT mobile app

