

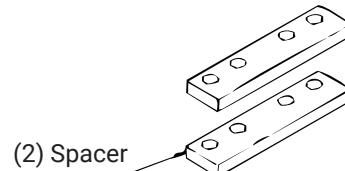
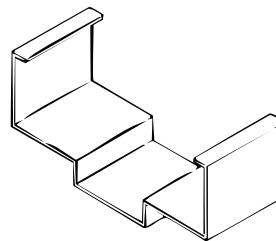


If soffit is less than 3" wide,  
a shim must be provided.

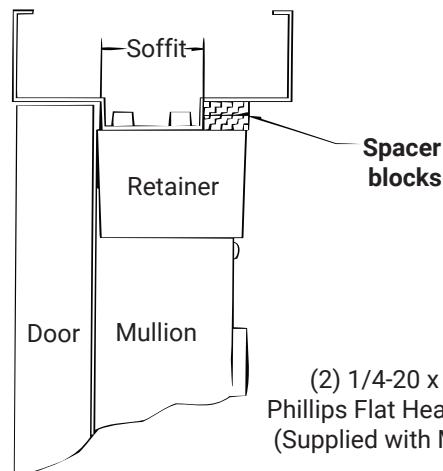

(2) Spacer Blocks

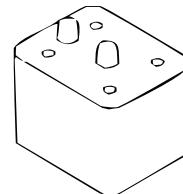

Top Retainer

(2) 1/4-20 x 5/8"  
Phillips Flat Head Screw  
(Supplied with Mullion)

(2) 1/4-20 x 1-1/4"  
Phillips Flat Head Screw



#### Notes:

1. Install spacer blocks per drawing.
2. Reference mullion installation instructions as needed.

#### ⚠️ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov).

#### ⚠️ WARNING

Attention Installer: Any retrofit or other field modification to a fire rated opening can potentially impact the fire rating of the opening, and ASSA ABLOY makes no representations or warranties concerning what such impact may be in any specific situation. When retrofitting any portion of an existing fire-rated opening, or specifying and installing a new fire-rated opening, please consult with a code specialist or local code official (Authority Having Jurisdiction) to ensure compliance with all applicable codes and ratings.

1-855-557-5078 Ext. 2 • [www.accentra-assaabloy.com](http://www.accentra-assaabloy.com)

Copyright © 2013, 2023, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

80-7401-0205-000 06/24

Experience a safer  
and more open world