



102S Mullion

Stabilizer

Installation Instructions

ACCENTRA

ASSA ABLOY

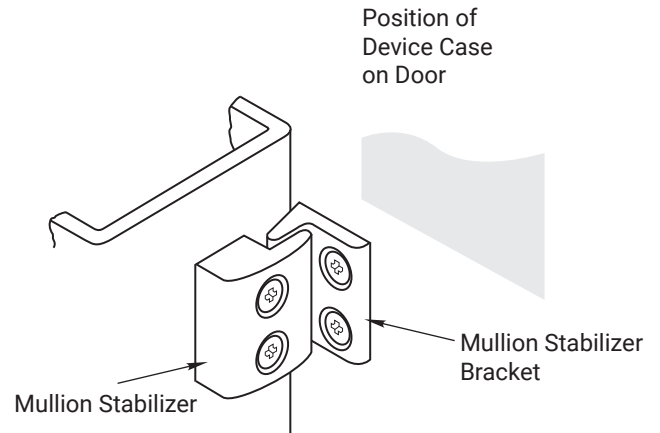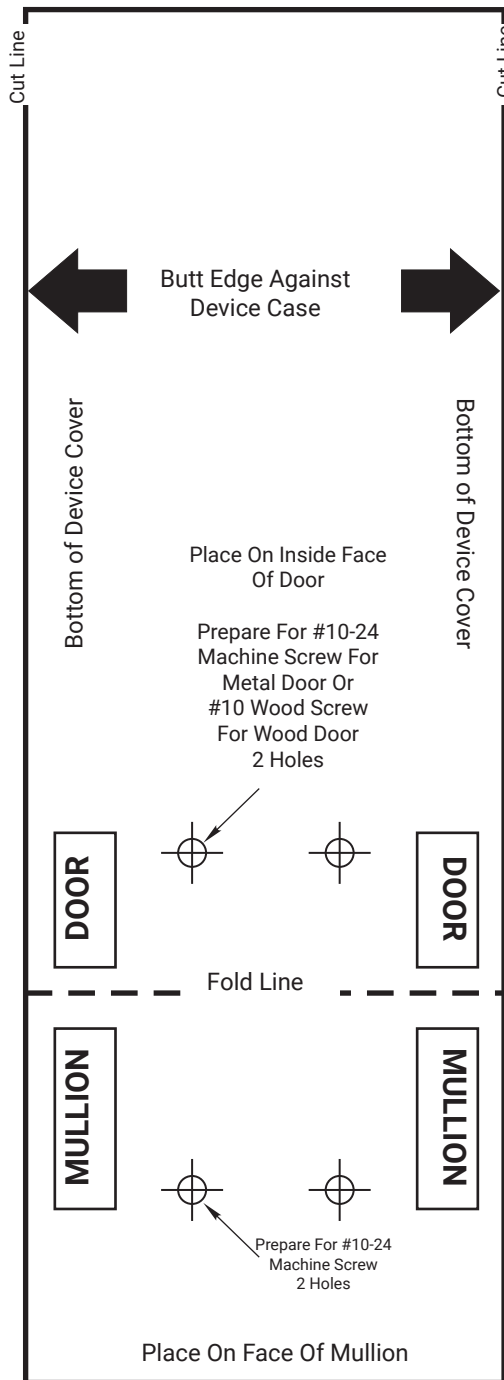

Tools required for this installation:

- Power Drill
- #25 Drill Bit
- #10-24 tap
- #10 Wood Screw Pilot Bit
- Standard Screwdriver
- Phillips Head Screwdriver
- Centerpunch

Installation Instructions

1. Cut template for application.
2. Fold template to 90°. Butt template up against device case and tape to mullion and inside face of door.
3. Spot and prepare holes in mullion and door.
4. Install mullion stabilizer to mullion and mullion stabilizer

WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

WARNING

Attention Installer: Any retrofit or other field modification to a fire rated opening can potentially impact the fire rating of the opening, and ASSA ABLOY makes no representations or warranties concerning what such impact may be in any specific situation. When retrofitting any portion of an existing fire-rated opening, or specifying and installing a new fire-rated opening, please consult with a code specialist or local code official (Authority Having Jurisdiction) to ensure compliance with all applicable codes and ratings.

1-855-557-5078 Ext. 2 • www.accentra-assaabloy.com

Copyright © 2024, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

80-8415-1033-010 04/24

Experience a safer
and more open world