


Strike Reinforcement
(See Note 6)

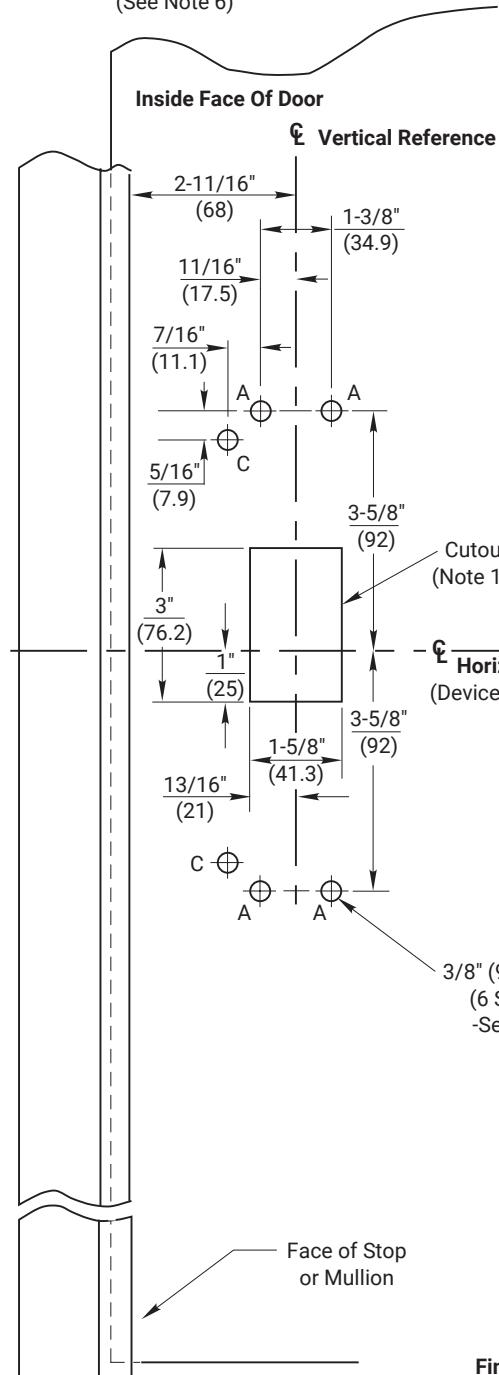

RESPONSIBILITY
DOOR AND FRAME MANUFACTURERS ARE
RESPONSIBLE FOR PROVIDING ADEQUATE
CONSTRUCTION OR REINFORCEMENTS FOR
PROPER INSTALLATION OF HARDWARE SHOWN.
ALL ARCHITECTURAL BUILDERS HARDWARE MUST
BE INSTALLED ON PROPERLY REINFORCED
DOORS AND FRAMES, REGARDLESS OF TYPE,
MATERIAL, OR METHOD OF CONSTRUCTION.


**1500F Rim Fire Exit Devices with
799 Strike & Optional SNB**
Application for Fire Labeled Wood or Composite
Door and H.M. Frame or Mullion
1-855-557-5078 Ext. 2
www.accentra-assaabloy.com

Experience a safer
and more open world

Copyright © 2008, 2023, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc.
All rights reserved. Reproduction in whole or in part without the express written
permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

NOTES:

1. Do not scale drawing.
2. Dimensions are in inches (mm).
3. LHR door shown. Preparation is typical for both door hands.
4. Minimum door stile width: 4-1/2" (114).
5. Prepare mounting holes when installing the device.
6. Unreinforced frames require blind rivet nuts (by others) to mount the strike.
7. Dimension from door face.
8. Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
9. Device mount to hinge stile (not shown) requires hole location and preparation during device installation. Door structural requirements are similar for both door stiles.
10. For outside trim preparation see appropriate trim template.
11. This hole MUST be field located using physical part as template, after installation is complete and device is fully operational.
12. Cutout, 1/2" (13) deep, only required when active outside trim is used.
13. Wood screws (by others) permitted for solid core wood doors if pilot holes are used for installation, when door label allows its use. Holes "A" #14 x 1-1/2", holes "C" #10 x 1-1/2", both RHWS.

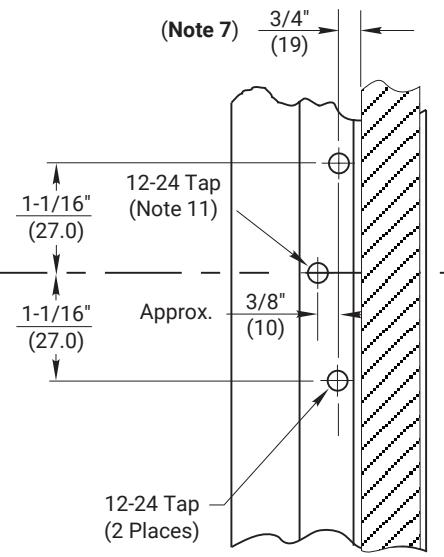

Strike Preparation Detail

MULLION NOTE:

FOR MULLION MODEL NUMBERS M100(F) AND KRM100(F)
REFER TO TEMPLATE NUMBER 7400-0100.
FOR MULLION MODEL NUMBERS M200(F) AND KRM200(F)
REFER TO TEMPLATE NUMBER 7400-0200.
FOR MULLION MODEL NUMBERS M200FWS AND
KRM200FWS REFER TO TEMPLATE NUMBER 7400-0210.

ACCENTRA
ASSA ABLOY

SUPERSEDES	7415-1002 (12/23)	DO NOT SCALE DRAWING
TEMPLATE NUMBER	7415-1002	SHEET 1 of 1

DATE
05/24