


location and preparation during device installation. 12. For outside trim preparation see appropriate trim template.

13. Cutout, thru inside door face, only required when outside trim is used.

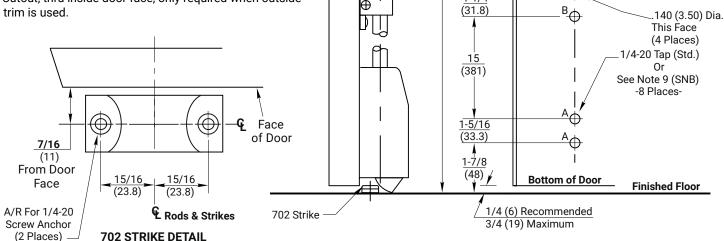

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE MATERIAL, OR METHOD OF CONSTRUCTION.

1510 Surface Vertical Rod Panic Devices with Bottom Pullman Latch Option

Application for Exit with Metal Door and Frame with 702 Floor Strike

> 1-855-557-5078 Ext. 2 www.accentra-assaabloy.com

ACCENTRA **ASSA ABLOY**

В

1-1/4

(31.8)

Experience a safer and more open world Copyright © 1999, 2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited

SUPERSEDES 8/99 DO NOT SCALE DRAWING TEMPLATE NUMBER SHEET 04/24 7415-0015 1 of 1