Reinforcement


for 791 Strike (See Note 6)

Rods

11/16"


(17.5)

Lock Edge

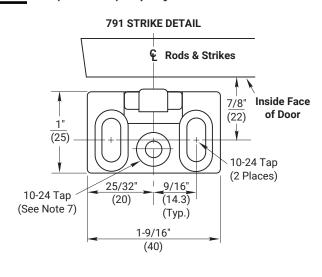

## **NOTES:**

- 1. Do not scale drawing.
- 2. Dimensions are in inches (mm).
- 3. LHR door shown. Preparation is typical for both
- 4. Minimum door stile width 4-1/2" (114).
- 5. Prepare mounting holes when installing device.
- 6. Unreinforced frames require blind rivet nuts (by others) to mount the strike.
- 7. This hole MUST be field located using physical part as template, after installation is complete and device is fully operational.
- 8. Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
- 9. Device mount to hinge stile (not shown) requires hole location and preparation during device installation. Door structural requirements to support the device cases are similar for both door stiles.
- 10. For outside trim preparation see appropriate trim template.
- 11. Cutout, 1/2" (13) deep, only required when outside trim is used.
- 12. Wood screws #14 x 1-1/2" (by others) permitted in solid core wood doors, if pilot holes are used for installation, when door label allows its use.

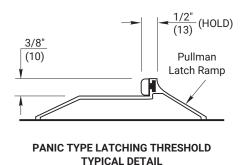

## 1510 Surface Vertical Rod Panic Devices with Bottom Pullman Latch Option and SNB

Recommended

Application for Wood or Composite Door and H.M. Frame with Latching Threshold

> 1-855-557-5078 Ext. 2 www.accentra-assaabloy.com

## ACCENTRA ASSA ABLO

€ Door

Inside Face

of Door

Vertical Reference

(Device, Rods & Strikes)

Cutout

(Note 11)

€ Horizontal

(Device

Reference

Centerline)

(76.2)

1-5/8"

(41.3)

2-3/4

(70)

ВФ

13/16"

(21)

(25)

1-3/8"

(34.9)

2-1/4"

(57)

1-5/16 (33.3)

16-3/8"

(416)

1-1/4"

(31.8)

3-5/8"

(92)

3-5/8"

(92)

Experience a safer and more open world

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE

RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR

PROPER INSTALLATION OF HARDWARE SHOWN.

ALL ARCHITECTURAL BUILDERS HARDWARE MUST

BE INSTALLED ON PROPERLY REINFORCED

DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

> Copyright © 1999, 2023, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

DO NOT SCALE DRAWING 7415-1016 (12/23) TEMPLATE NUMBER SHEET 7415-1016 1 of 1 07/24

39-15/16" (17)(1014) В 1-1/4 .140 (3.50) Dia. Вф (31.8)x 3/4" (19) Deep (4 Places) 15" 3/8" (9.50) Dia.Thru (381)(8 SNB Holes) 1-5/16 (33.3)1-7/8' (48)**Bottom of Door** Top of Threshold **Finished Floor** Max (19.1)