



791 STRIKE DETAIL

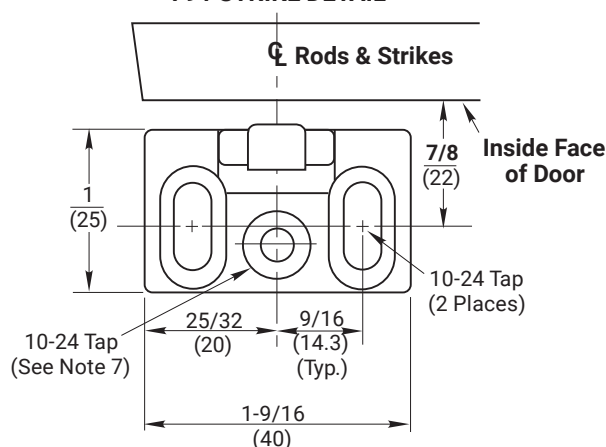


Notes:

1. Do not scale drawing.
2. Dimensions are in inches (mm).
3. LHR door shown. Preparation is typical for both door hands.
4. Minimum door stile width: 4-1/2 (114).
5. Prepare mounting holes when installing the device.
6. Unreinforced frames require blind rivet nuts (by others) to mount the strike.
7. This hole **MUST** be field located using physical part as template, after installation is complete and device is fully operational.
8. For outside trim preparation see appropriate trim template.
9. Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
10. Device mount to hinge stile (not shown) requires hole location and preparation during device installation. Door structural requirements to support the device cases are similar for both door stiles.
11. Wood screws #14 x 1-1/2" (by others) permitted for solid core wood doors if pilot holes are used for installation, when door label allows its use.

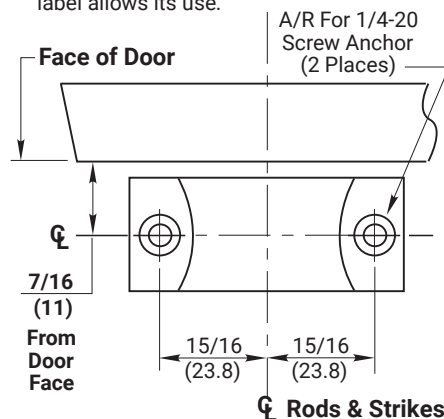

702 STRIKE DETAIL

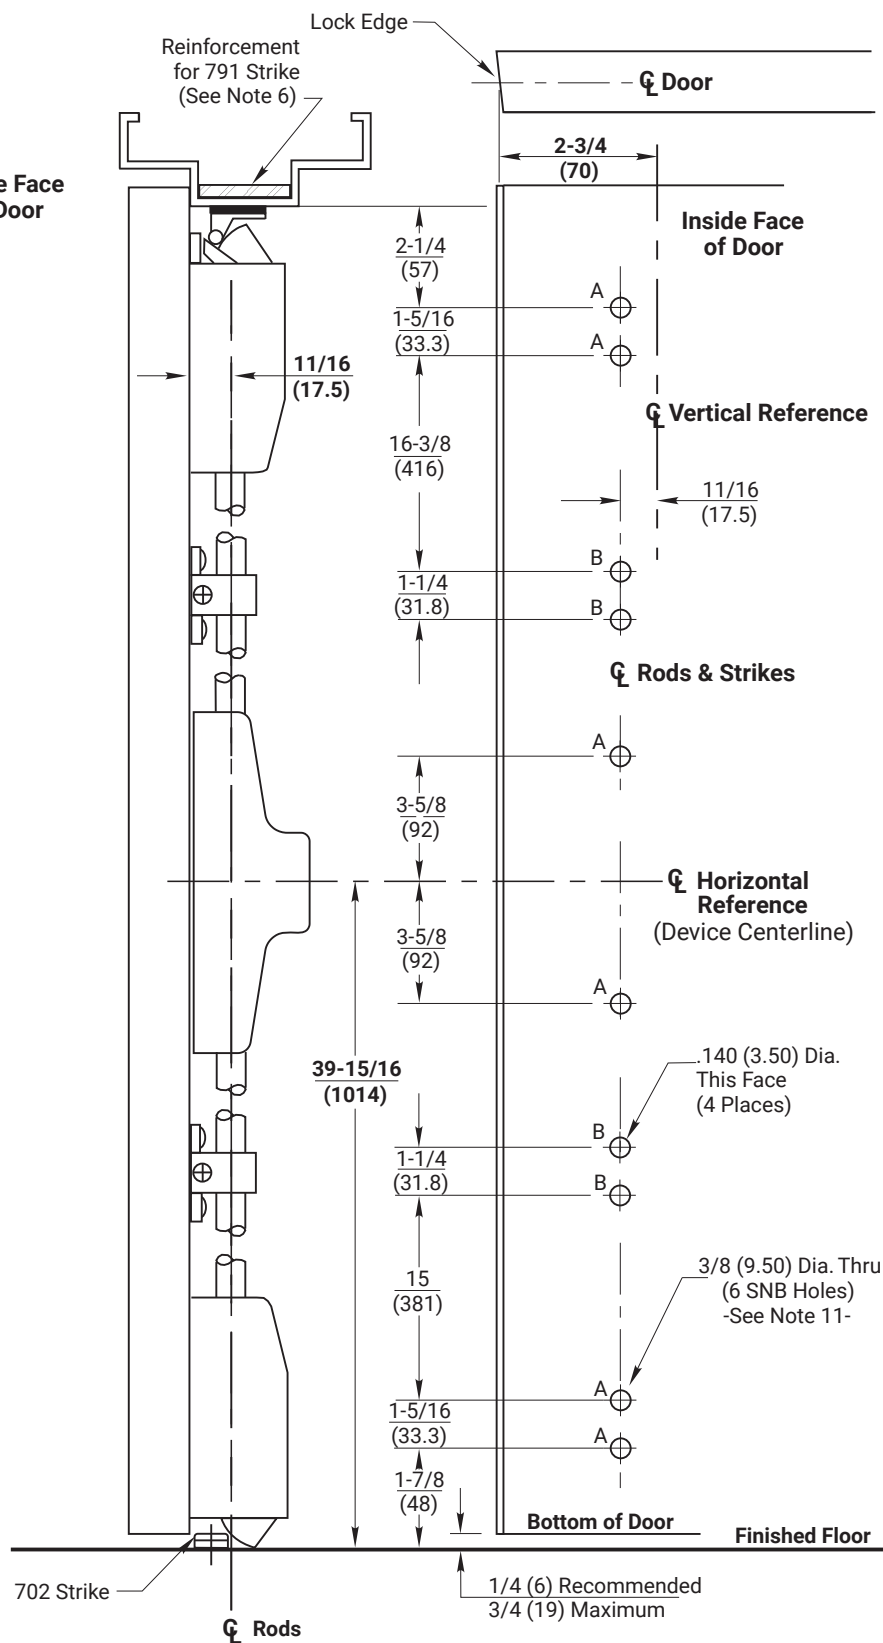

2110 & 1810

**Surface Vertical Rod Panic Exit Devices
with Bottom Pullman Latch Option**
Application for Wood or Composite Door and H.M.
Frame With 702 Floor Strike and SNB

1-855-557-5078 Ext. 2
www.accentra-assaabloy.com

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

ACCENTRA
ASSA ABLOY

SUPERSEDES

04/10

DO NOT SCALE DRAWING

TEMPLATE NUMBER

7421-1015

SHEET

1 of 1

DATE _____

04/24

Experience a safer
and more open world

Copyright © 2010, 2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc.
All rights reserved. Reproduction in whole or in part without the express written permission of
ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.