


**See Sheet 2 for Notes
& Top Strike Detail**

**Typical Top & Bottom Door Detail
(Door Face Cutout Tip Only, As Shown)**

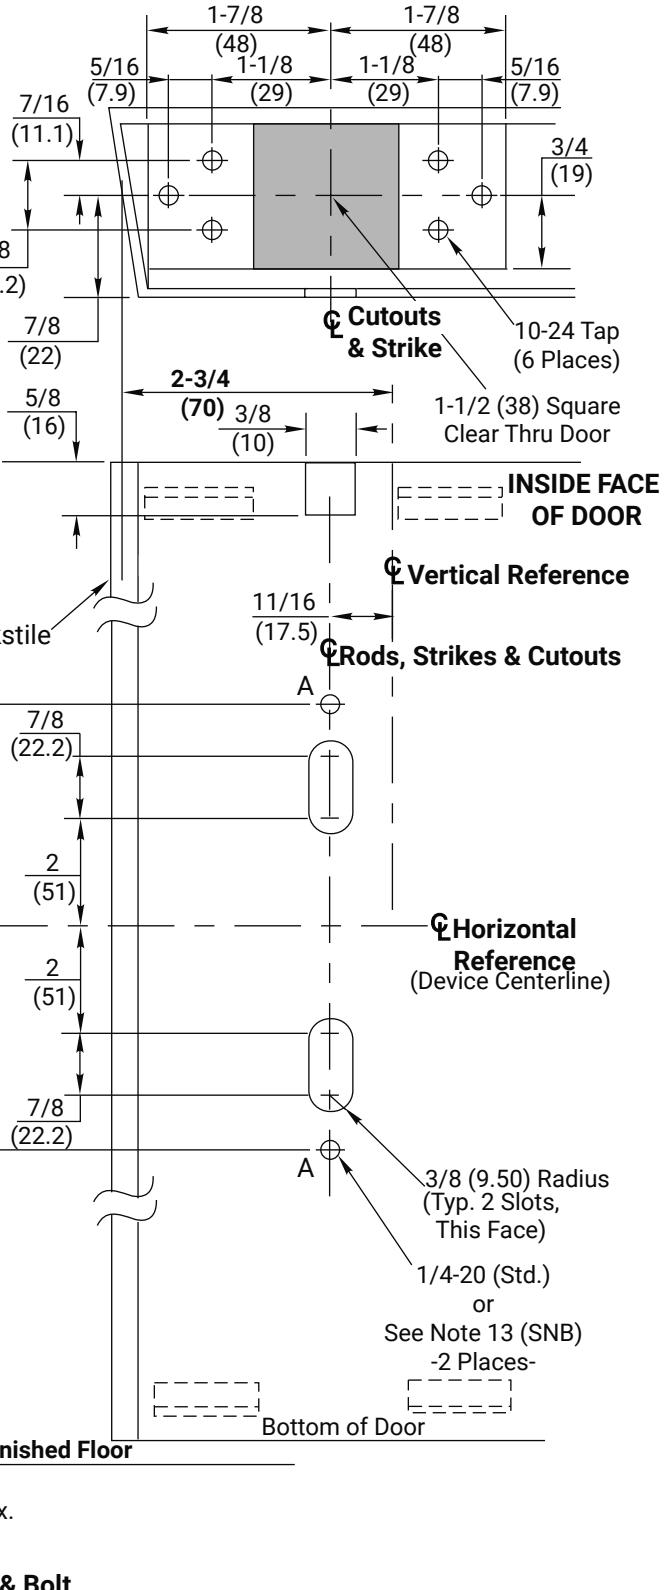


RESPONSIBILITY
DOOR AND FRAME MANUFACTURERS ARE
RESPONSIBLE FOR PROVIDING ADEQUATE
CONSTRUCTION OR REINFORCEMENTS FOR
PROPER INSTALLATION OF HARDWARE SHOWN.
ALL ARCHITECTURAL BUILDERS HARDWARE MUST
BE INSTALLED ON PROPERLY REINFORCED
DOORS AND FRAMES, REGARDLESS OF TYPE,
MATERIAL, OR METHOD OF CONSTRUCTION.

**6160 (F90), 7160 (F90) Series Concealed Vertical
Rod Exit Devices**
Application for Metal Door and Frame
with 1/2" Threshold;
761 Top Strike & 794 Optional Floor Strike
1-855-557-5078 Ext. 2
www.accentra-assaabloy.com

ACCENTRA®
ASSA ABLOY

761 Top Strike Preparation (See Note 6)

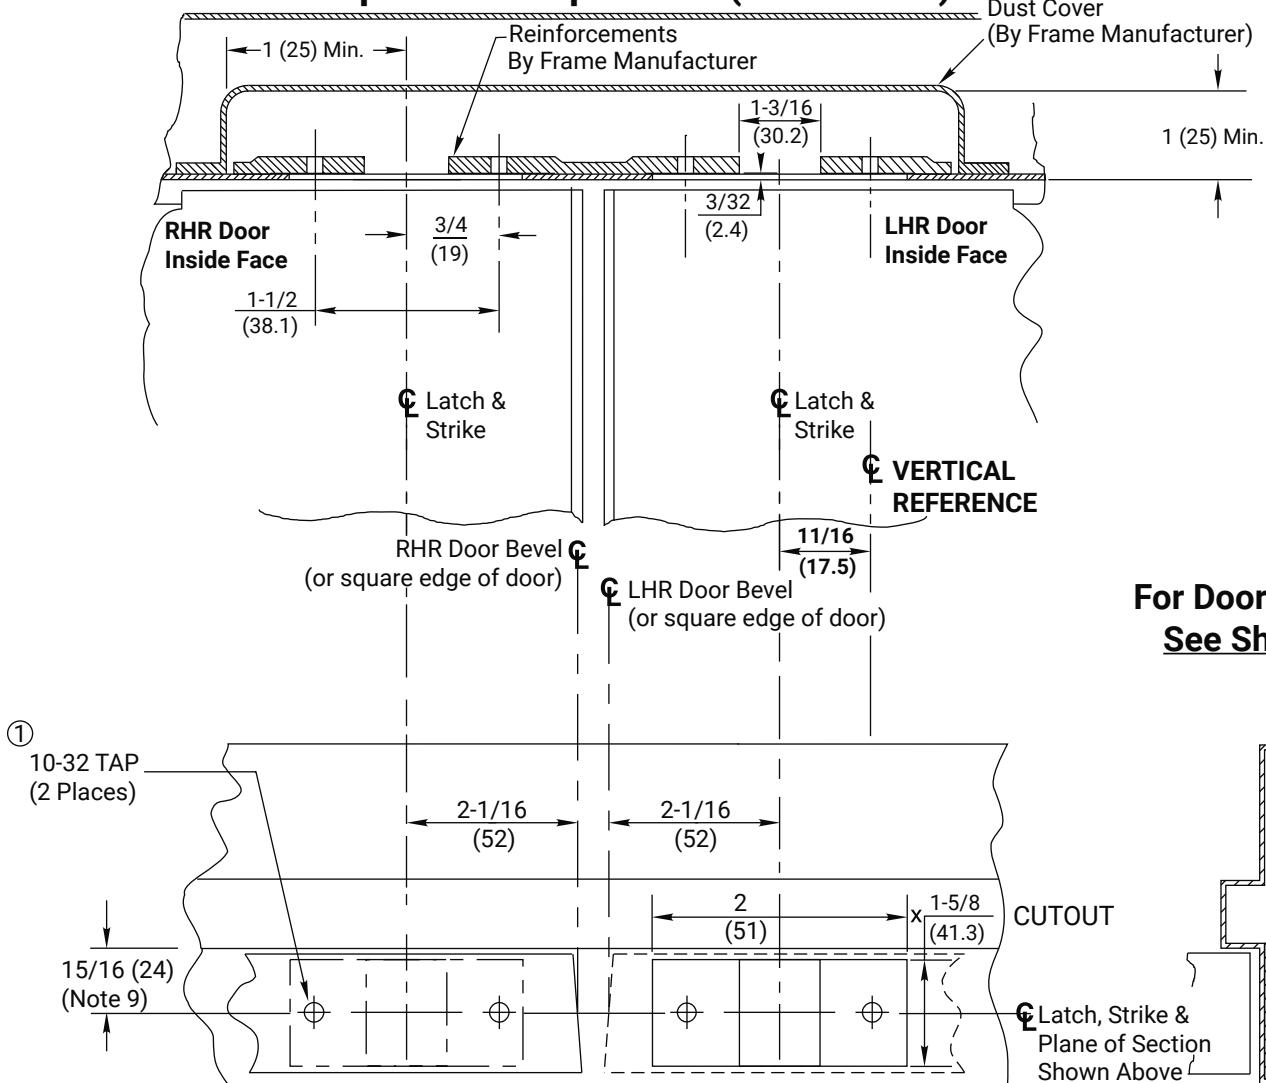

Notes:

1. Do not scale drawing
2. Dimensions are in inches (mm).
3. Preparation is typical for both hands.
4. Minimum door stile width: 4-1/2 (114.)
5. Prepare mounting holes when installing the device.
6. Drawing shows elevation (frame bisected on strike center), bottom view looking up and side view.
7. Provide adequate structural support to maintain door integrity after device installation with power tools, door use or abuse
8. For recommended door reinforcements see template 7400-0000.
9. Door located in frame for door silencers. If not used, compensate this dimension to seat the door against the stop without rattle.
10. Device mount to hinge stile (not shown) requires hole location and preparation during device installation.
11. For outside trim preparation see appropriate trim template.
12. For electrical devices (suffixes "-B", "-G", "-O", "-P", "-S", or MELR) also see template 7477-0001.
13. Holes for optional SNB (Required for unreinforced doors):
9/32 (7.00) dia., inside door face;
3/8 (9.50) dia., outside door face.
14. Maximum thickness 5/32 (4.0) when outside escutcheon trim is used.
15. Bottom bolt should retract to 1/8 (3.2) above floor strike. Floor coverings in the door path must be laid accordingly.

RESPONSIBILITY
DOOR AND FRAME MANUFACTURERS ARE
RESPONSIBLE FOR PROVIDING ADEQUATE
CONSTRUCTION OR REINFORCEMENTS FOR
PROPER INSTALLATION OF HARDWARE SHOWN.
ALL ARCHITECTURAL BUILDERS HARDWARE MUST
BE INSTALLED ON PROPERLY REINFORCED
DOORS AND FRAMES, REGARDLESS OF TYPE,
MATERIAL, OR METHOD OF CONSTRUCTION.

**6160 (F90), 7160 (F90) Series Concealed Vertical
Rod Exit Devices**
Application for Metal Door and Frame
with 1/2" Threshold;
761 Top Strike & 794 Optional Floor Strike
1-855-557-5078 Ext. 2
www.accentra-assaabloy.com

ACCENTRA®
ASSA ABLOY

Experience a safer
and more open world

Copyright © 2015, 2024, 2025, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES 7470-0061 01/24	DO NOT SCALE DRAWING		
TEMPLATE NUMBER 7470-0061	SHEET 2 of 2	DATE 09/25	