


NOTES:

1. Do not scale drawing.
2. Dimensions are in inches(mm).
3. LHR active pair shown. Preparation is typical for both hands.
4. Minimum door stile width: 3-1/2(89).
5. Prepare mounting holes when installing the device.
6. For square door edges, or other center clearance, compensate locating dimensions as required to maintain strike to device distance shown.
7. For recommended door reinforcements see template 7400-0000. Unreinforced doors require SNB option to mount the hardware.
8. Holes for optional SNB: 9/32(7.00) dia., inside door face; 3/8(9.50) dia., outside door face.
9. Provide door stiffeners, as needed to prevent door collapse due to installation with power tools, door use, or abuse.
10. Device mount to hinge stile (not shown) requires holes location and preparation during device installation.
11. For trim preparation see appropriate trim template.
12. For electrical devices (suffixes "-B", "-G", "-O", "-P", "-S") also see template 7477-0001.

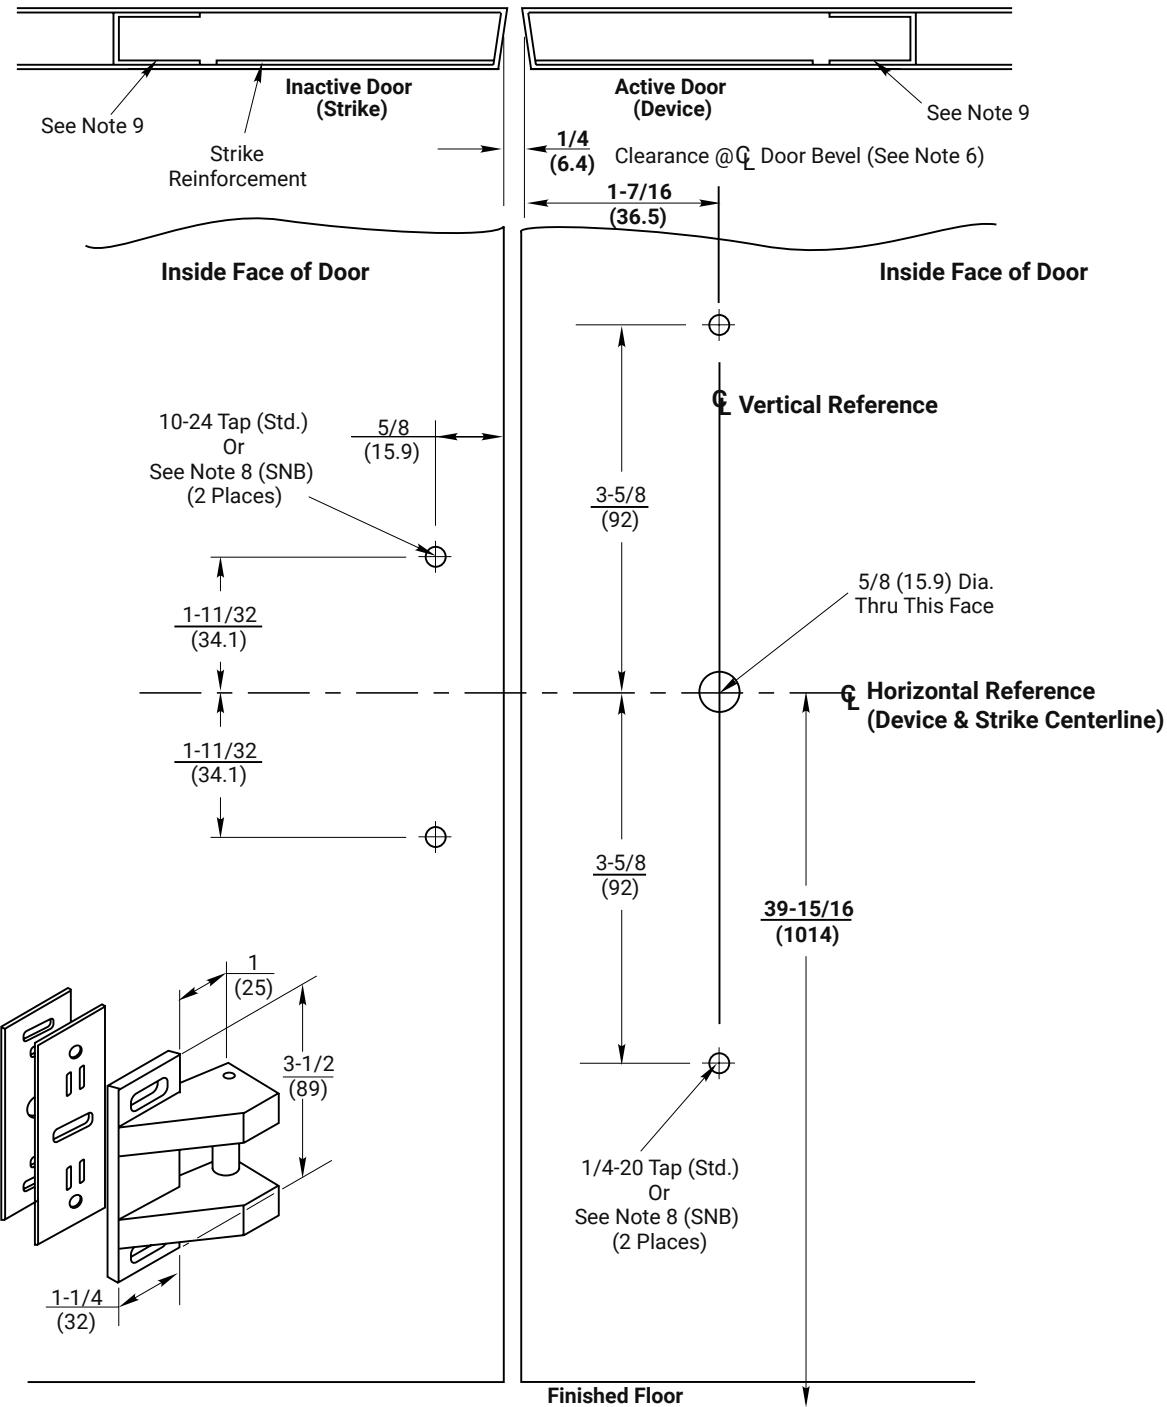

RESPONSIBILITY  
DOOR AND FRAME MANUFACTURERS ARE  
RESPONSIBLE FOR PROVIDING ADEQUATE  
CONSTRUCTION OR REINFORCEMENTS FOR  
PROPER INSTALLATION OF HARDWARE SHOWN.  
ALL ARCHITECTURAL BUILDERS HARDWARE MUST  
BE INSTALLED ON PROPERLY REINFORCED  
DOORS AND FRAMES, REGARDLESS OF TYPE,  
MATERIAL, OR METHOD OF CONSTRUCTION.

Experience a safer  
and more open world

**7200M & 7205M Rim Panic Devices  
For Narrow Escutcheon Trim**  
Application for Pair of Metal Doors with Optional 793  
Strike without Mullion (Not for Fire Labeled Devices)  
1-855-557-5078 Ext. 2  
[www.accentra-assaabloy.com](http://www.accentra-assaabloy.com)

Copyright © 2001, 2023, 2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

**ACCENTRA**  
**ASSA ABLOY**

SUPERSEDES	03/01	DO NOT SCALE DRAWING
TEMPLATE NUMBER	7473-0793	SHEET 1 of 1
		DATE 04/24