


# (See Note 6)

**Inside Face Of Door** 

## Face of Stop or Mullion **& Vertical Reference** 2-5/16 (59)11/16 (17.5)1-1/4 (31.8)3-5/8(92)Horizontal Reference (Device & Strike Centerline) Ф 3-5/8 (92)1-1/4 (31.8)39-15/16 (1014)3/8 (9.50) Dia.Thru (2 SNB Holes) See Note 13 **Finished Floor**

#### NOTES:

- 1. Do not scale drawing.
- 2. Dimensions are in inches (mm).
- 3. LHR door shown. Preparation is typical for both door hands.
- 4. Minimum door stile width: 4-1/2(114).
- 5. Prepare mounting holes when installing the device.
- 6. Unreinforced frames require blind rivet nuts (by others) to mount the strike.
- 7. Dimension from door face.
- 8. For outside trim preparation see appropriate trim template.
- Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
- Device mount to hinge stile (not shown) requires hole location and preparation during device installation. Door structural requirements are similar for both door stiles.
- 11. For electrical devices (suffixes "-B", "-G", "-O", "-P", "-S") also see template 7477-0001.
- 12. This hole MUST be field located using physical part as template, after installation is complete and device is fully operational.
- 13. Wood screws (#14x1-1/4"RHWS, by others) permitted for solid core wood doors if pilot holes are used for installation.

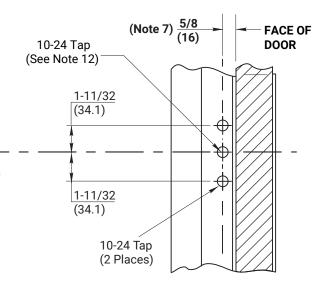

#### MULLION NOTE:

FOR MULLION MODEL NUMBERS M100(F) AND KRM 00(F) REFER TO TEMPLATE NUMBER 7400-0100. FOR MULLION MODEL NUMBERS M200(F) AND KRM200(F) REFER TO TEMPLATE NUMBER 7400-0200. FOR MULLION MODEL NUMBERS M200FWS AND KRM200FWS REFER TO TEMPLATE NUMBER 7400-0210.

#### RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

### 6150, 6155, 7150 & 7155 SquareBolt Panic Devices with 757F Strike

Application for Wood or Composite Door and H.M. Frame or Mullion (Not for Fire Labeled Devices)

1-855-557-5078 Ext. 2 www.accentra-assaabloy.com

ACCENTRA ASSA ABLOY

Experience a safer and more open world

Copyright © 2015, 2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

 SUPERSEDES
 05/15
 DO NOT SCALE DRAWING

 TEMPLATE NUMBER
 SHEET
 DATE

 7470-1050
 1 of 1
 04/24