


Strike Reinforcement  
(See Note 6)

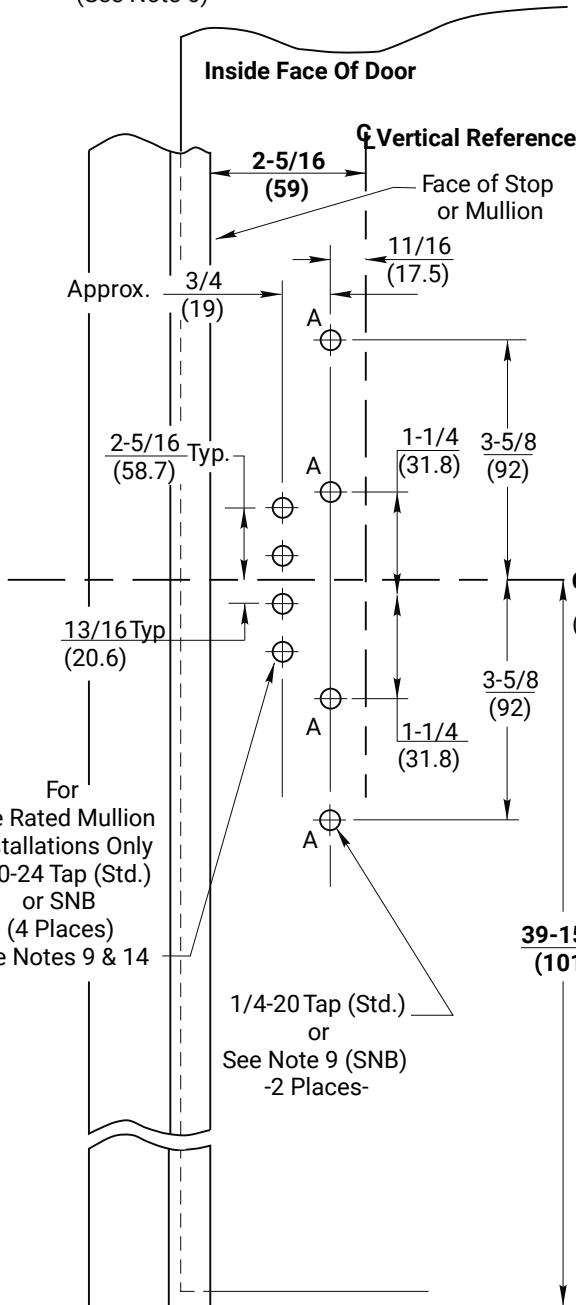

**RESPONSIBILITY**  
DOOR AND FRAME MANUFACTURERS ARE  
RESPONSIBLE FOR PROVIDING ADEQUATE  
CONSTRUCTION OR REINFORCEMENTS FOR  
PROPER INSTALLATION OF HARDWARE SHOWN.  
ALL ARCHITECTURAL BUILDERS HARDWARE MUST  
BE INSTALLED ON PROPERLY REINFORCED  
DOORS AND FRAMES, REGARDLESS OF TYPE,  
MATERIAL, OR METHOD OF CONSTRUCTION.

### 6150F, 7150F SquareBolt® Fire Exit Devices

#### with 757F Strike


Application for Fire Labeled Metal Door  
and Frame or Mullion

1-855-557-5078 Ext. 2

[www.accentra-assaabloy.com](http://www.accentra-assaabloy.com)

#### Notes:

1. Do not scale drawing.
2. Dimensions are in inches (mm).
3. LHR door shown. Preparation is typical for both door hands.
4. Minimum door stile width: 4-1/2 (114).
5. Prepare mounting holes when installing the device.
6. Unreinforced frames require blind rivet nuts (by others) to mount the strike.
7. Dimension from door face.
8. For recommended door reinforcements see template 7400-0000. Unreinforced doors require SNB option to mount the device components and strike interlock.
9. Holes for optional SNB: 9/32 (7.00) dia. inside door face;  
3/8 (9.50) dia. outside door face.
10. Provide door stiffeners as needed to prevent door collapse due to installation with power tools, door use, or abuse.
11. Device mount to hinge stile (not shown) requires hole location and preparation during device installation.
12. For outside trim preparation see appropriate trim template.
13. For electrical devices (suffixes "-B", "-G", "-O", "-P", "-S", MELR) also see template 7477-0001.
14. These hole(s) MUST be field located using physical part as template, after installation is complete and device is fully operational.

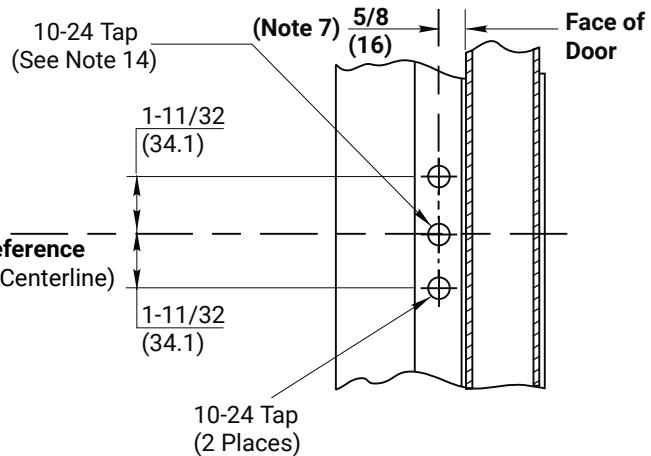

Strike Preparation  
Detail

#### MULLION NOTE:

FOR MULLION MODEL NUMBERS M100(F) AND KRM100(F)  
REFER TO TEMPLATE NUMBER 7400-0100.  
FOR MULLION MODEL NUMBERS M200(F) AND KRM200(F)  
REFER TO TEMPLATE NUMBER 7400-0200.  
FOR MULLION MODEL NUMBERS M200FWS AND KRM200FWS  
REFER TO TEMPLATE NUMBER 7400-0210.

**ACCENTRA®**

**ASSA ABLOY**