


Notes:

- 1) Do not scale drawing.
- 2) Dimensions are in inches(mm).
- 3) LHR active pair shown. Preparation is typical for both hands.
- 4) Minimum door stile width: 3-1/2(89).
- 5) Prepare mounting holes when installing the device.
- 6) For square door edges, or other center clearance, compensate locating dimensions as required to maintain strike to device distance shown.
- 7) For outside trim preparation see appropriate trim template.
- 8) Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
- 9) Device mount to hinge stile (not shown) requires holes location and preparation during device installation. Door structural requirements are similar for both door stiles.
- 10) For electrical devices (suffixes "-B","-G","-O","-P","-S") also see template 7477-0001.
- 11) Wood screws (by others) permitted for solid core wood doors if pilot holes are used for installation.

Device: #14 x 1-1/2"; Strike: #10 x 1-1/2".

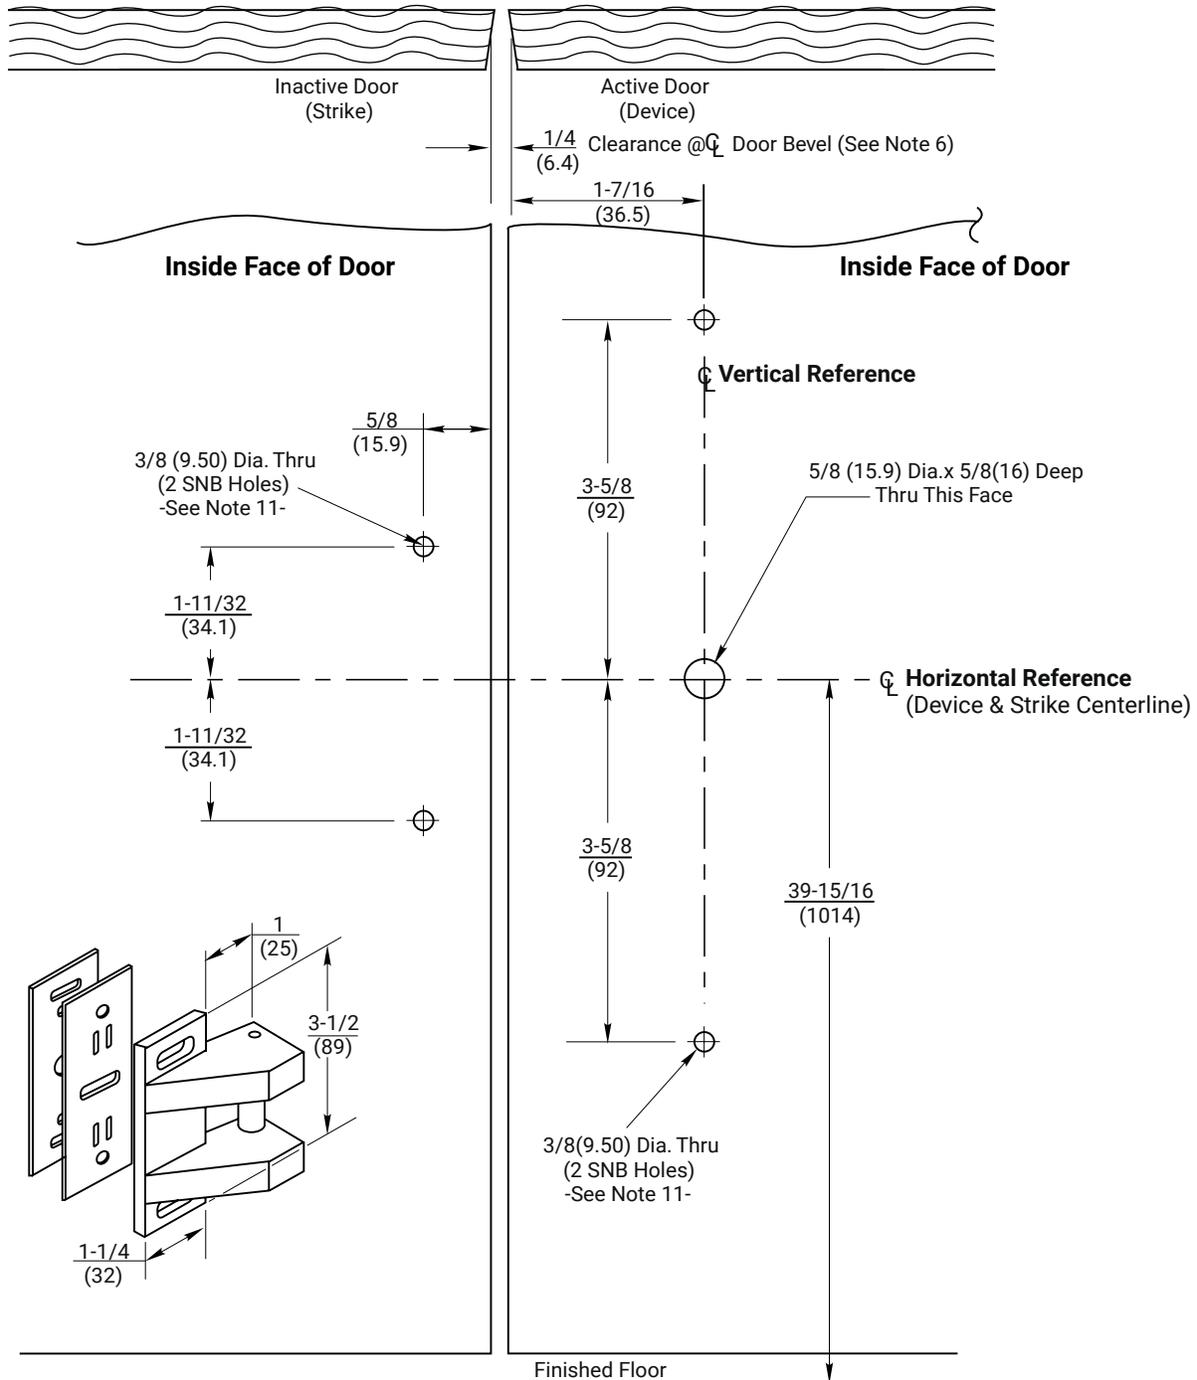

RESPONSIBILITY
 DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

7250M & 7255M SquareBolt® Panic Devices
 with Optional 793 Strike and SNB
 Application for Pair of Wood or Composite Doors
 without Mullion
 (Not for Fire Labeled Devices)
 1-855-557-5078 Ext. 2
 www.accentra-assaabloy.com

ACCENTRA
ASSA ABLOY

Experience a safer
 and more open world

Copyright ©2024, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES	7473-6793 02/24	DO NOT SCALE DRAWING
TEMPLATE NUMBER	7473-6793	DATE
		07/24