

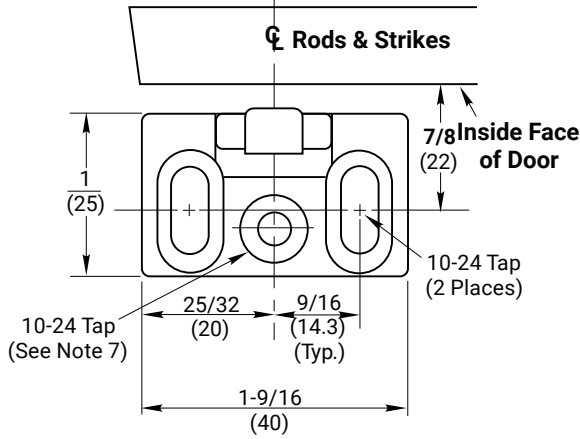


791 STRIKE DETAIL

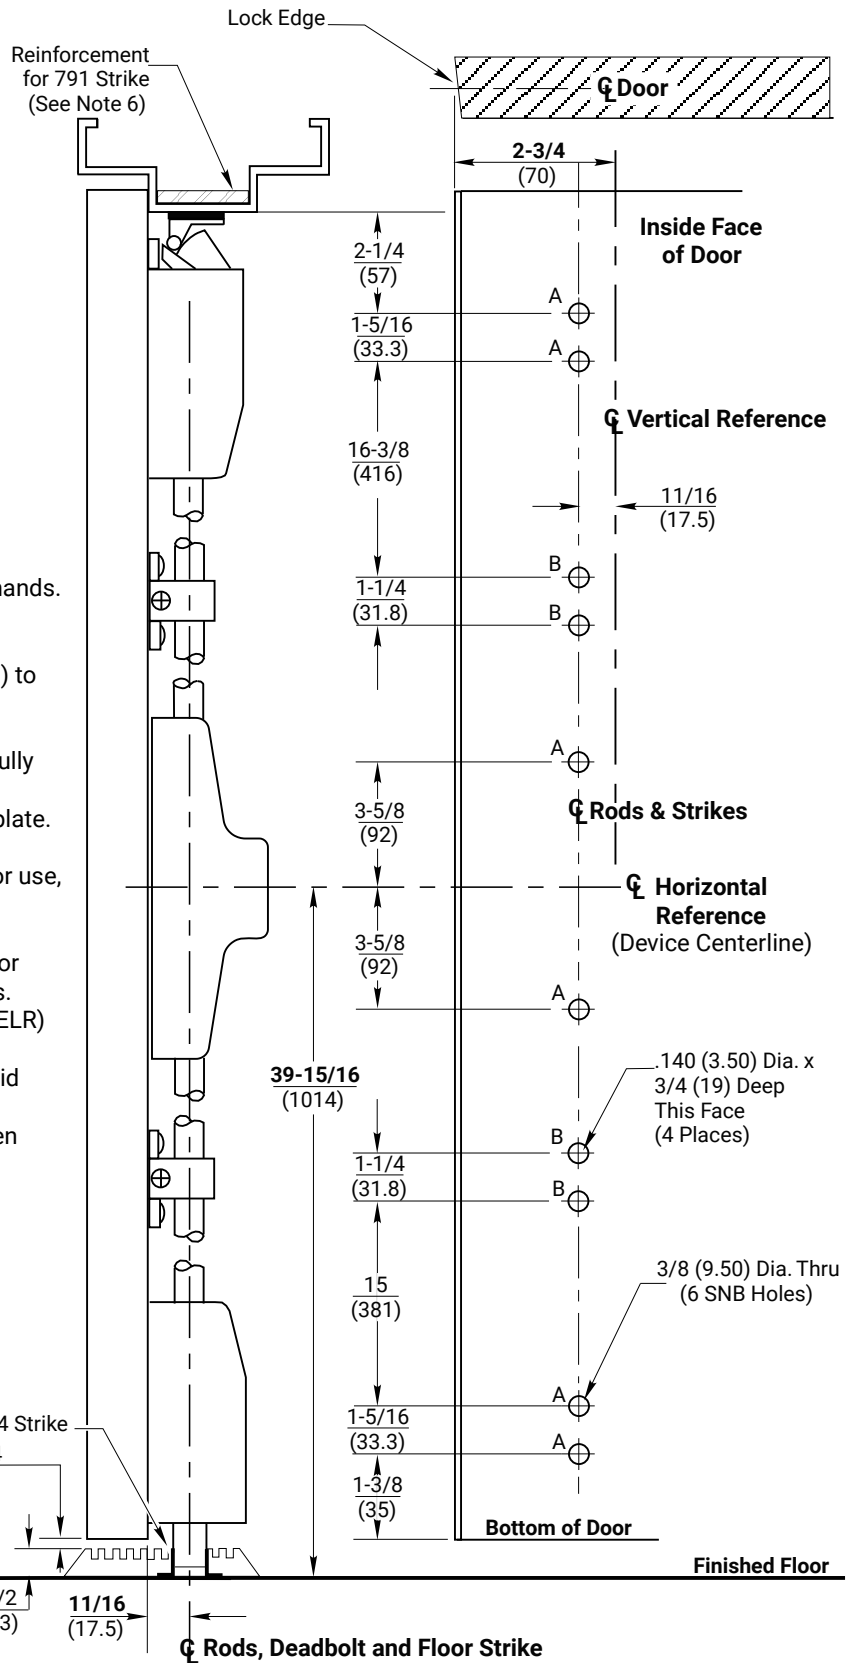

NOTES:

1. Do not scale drawing.
2. Dimensions are in inches (mm).
3. LHR door shown. Preparation is typical for both door hands.
4. Minimum door stile width: 4-1/2 (114).
5. Prepare mounting holes when installing the device.
6. Unreinforced frames require blind rivet nuts (by others) to mount the strike.
7. This hole MUST be field located using physical part as template, after installation is complete and device is fully operational.
8. For outside trim preparation see appropriate trim template.
9. Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
10. Device mount to hinge stile (not shown) requires hole location and preparation during device installation. Door structural requirements are similar for both door stiles.
11. For electrical devices (suffixes "-B", "-G", "-O", "-P", "-S", MELR) see also template 7477-0001.
12. Wood screws #14x1-1/4" (by others) permitted for solid core wood doors if pilot holes are used for installation, when door label allows its use.

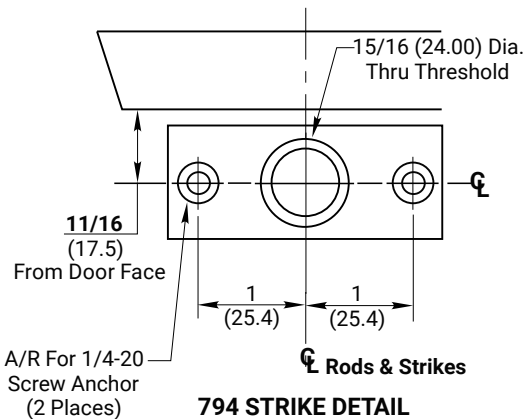

7110, 7115 & 7110F Surface Vertical Rod Exit Devices with Optional SNB

Application for Wood or Composite Door and H.M. Frame with 1/2" Threshold and 794 Optional Floor Strike

1-855-557-5078 Ext. 2

www.accentra-assaabloy.com

ACCENTRA®
ASSA ABLOY

Experience a safer
and more open world

Copyright © 1999, 2024, 2025, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES	04/24	DO NOT SCALE DRAWING
TEMPLATE NUMBER	7470-1011	SHEET 1 of 1
		DATE 09/25