


791 STRIKE DETAIL

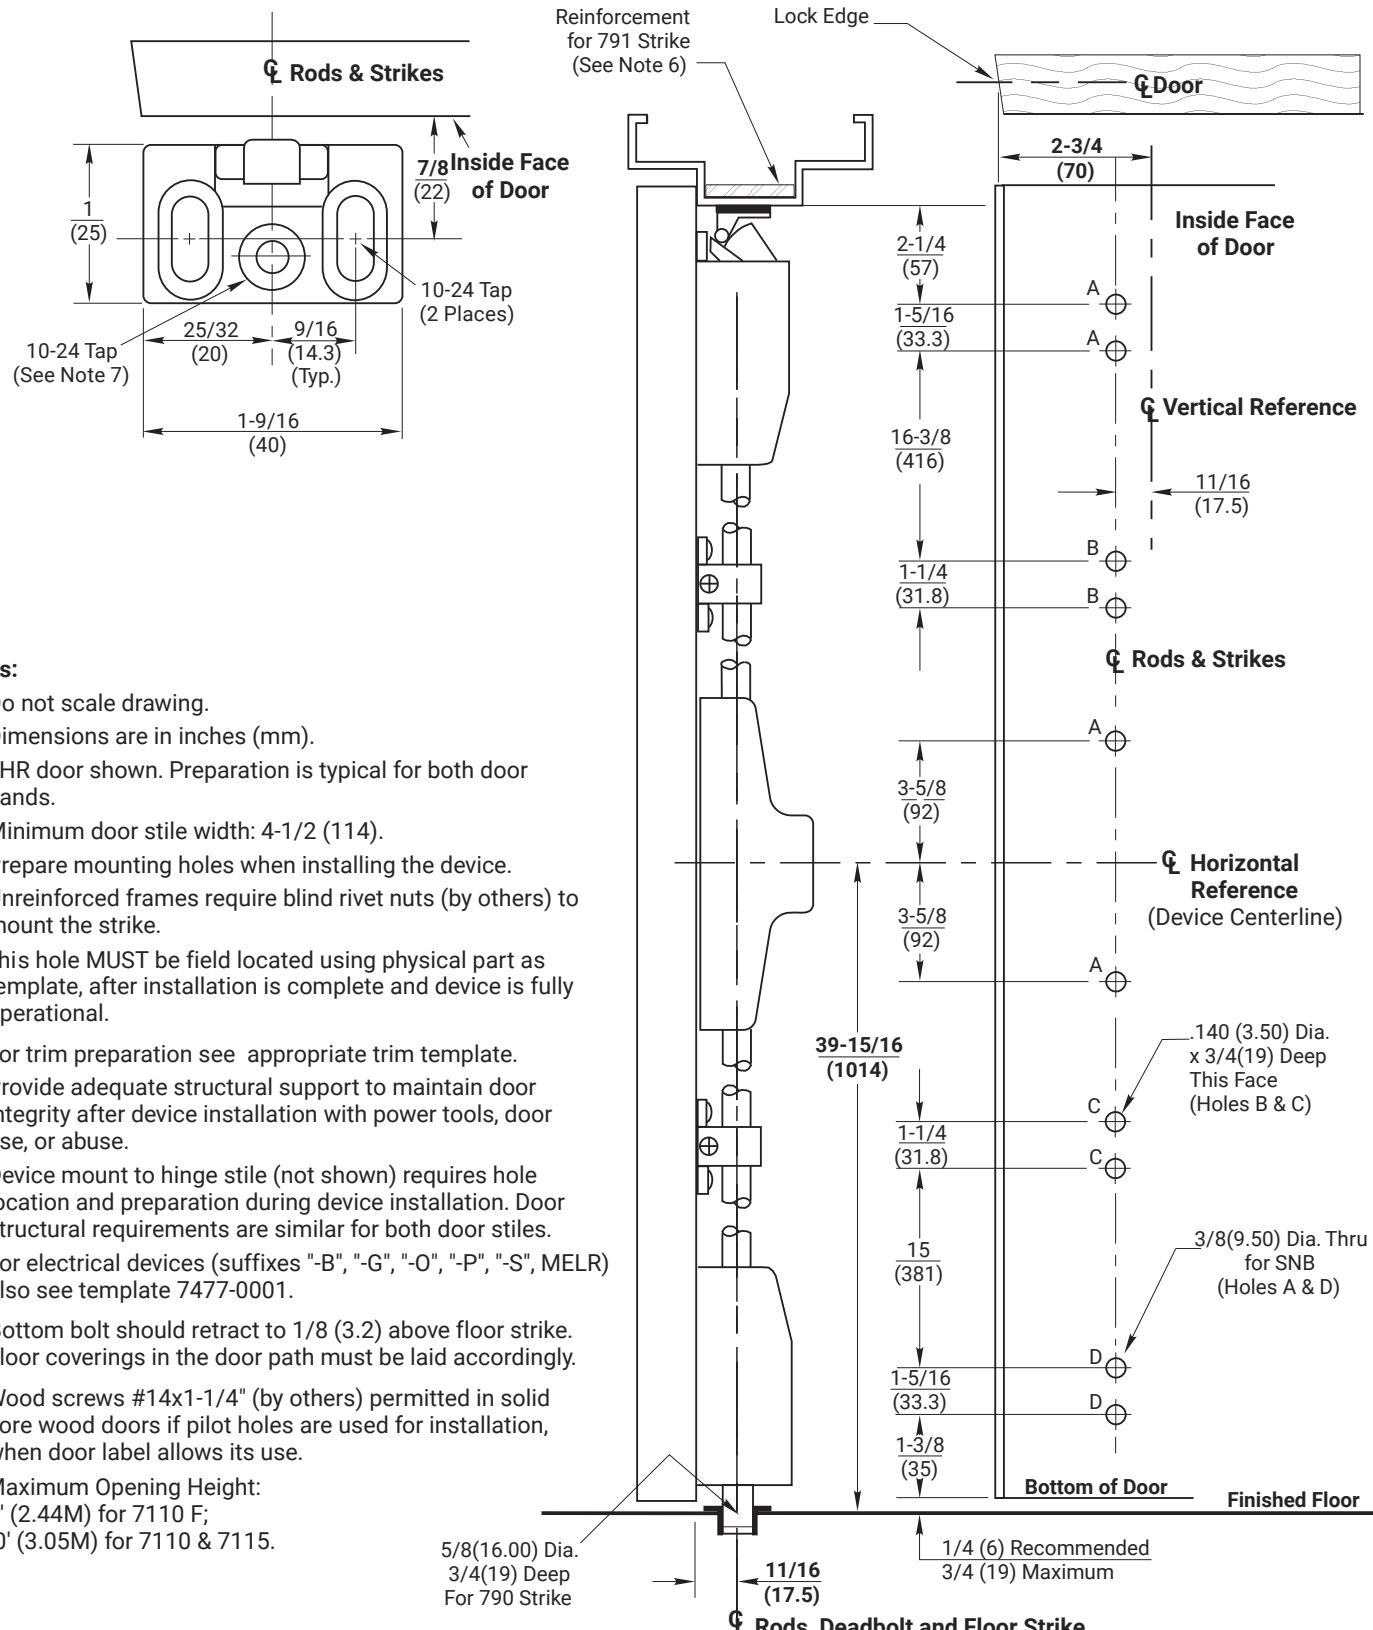

<p>RESPONSIBILITY DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.</p>	<p>7110, 7115, 7110F Surface Vertical Rod Exit Devices Standard Application for Wood or Composite Door and H.M.Frame 1-855-557-5078 Ext. 2 www.accentra-assaabloy.com</p>	<p>ACCENTRA® ASSA ABLOY</p>
<p>Experience a safer and more open world</p>	<p>Copyright © 1999, 2024, 2025, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.</p>	<p>SUPERSEDES 7470-1010 05/24 DO NOT SCALE DRAWING TEMPLATE NUMBER 7470-1010 SHEET 1 of 1 DATE 09/25</p>