
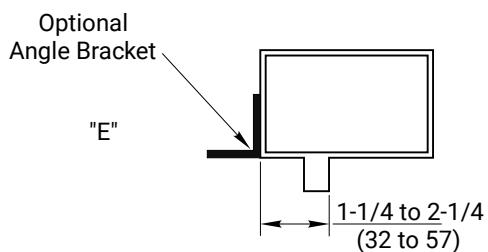
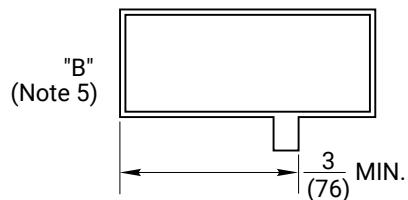


Notes:

1. Do not scale drawing.  
Dimensions are in inches(mm).
2. M300 Mullion is made from 1-1/4 x 3 (31.8 x 76.2) aluminum extrusion.
3. Mullion has built-in strike for 7200 exit devices. Locate device from mullion face as shown on template 7472-0300, at installation.
4. Prepare mounting holes when installing the mullion.
5. Doors and frames should provide solid engagement to not less than (3) full screw threads.

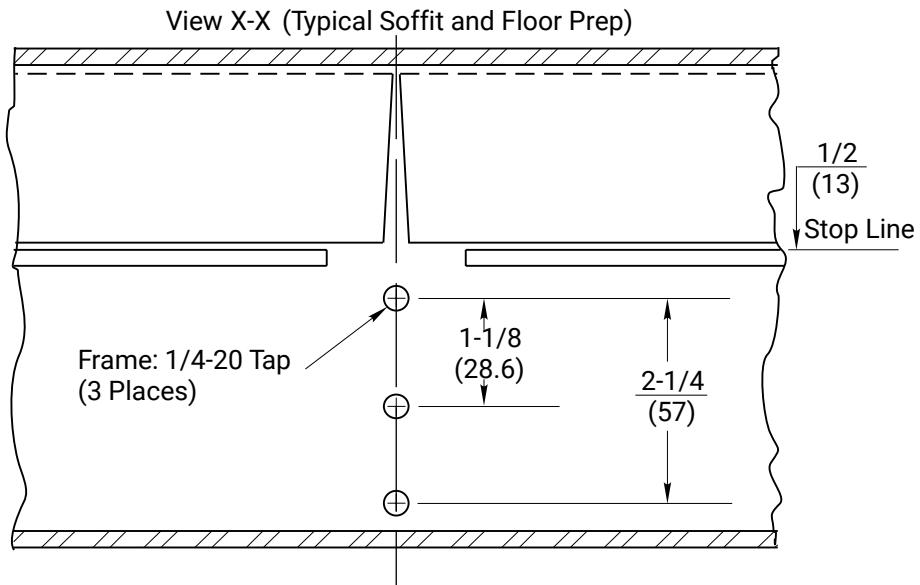

RESPONSIBILITY  
DOOR AND FRAME MANUFACTURERS ARE  
RESPONSIBLE FOR PROVIDING ADEQUATE  
CONSTRUCTION OR REINFORCEMENTS FOR  
PROPER INSTALLATION OF HARDWARE SHOWN.  
ALL ARCHITECTURAL BUILDERS HARDWARE MUST  
BE INSTALLED ON PROPERLY REINFORCED  
DOORS AND FRAMES, REGARDLESS OF TYPE,  
MATERIAL, OR METHOD OF CONSTRUCTION.

## M300 Mullion Frame Preparation

1-855-557-5078 Ext. 2  
[www.accentra-assaabloy.com](http://www.accentra-assaabloy.com)

**ACCENTRA**  
**ASSA ABLOY**

Experience a safer  
and more open world

Copyright ©2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES 7400-0300 02/24	DO NOT SCALE DRAWING		
TEMPLATE NUMBER 7400-0300	SHEET 1 of 1	DATE 04/24	