


NOTES:

1. Prep shown is for cylinders.
2. Do not scale drawing.
3. Dimensions are given in inches (mm).

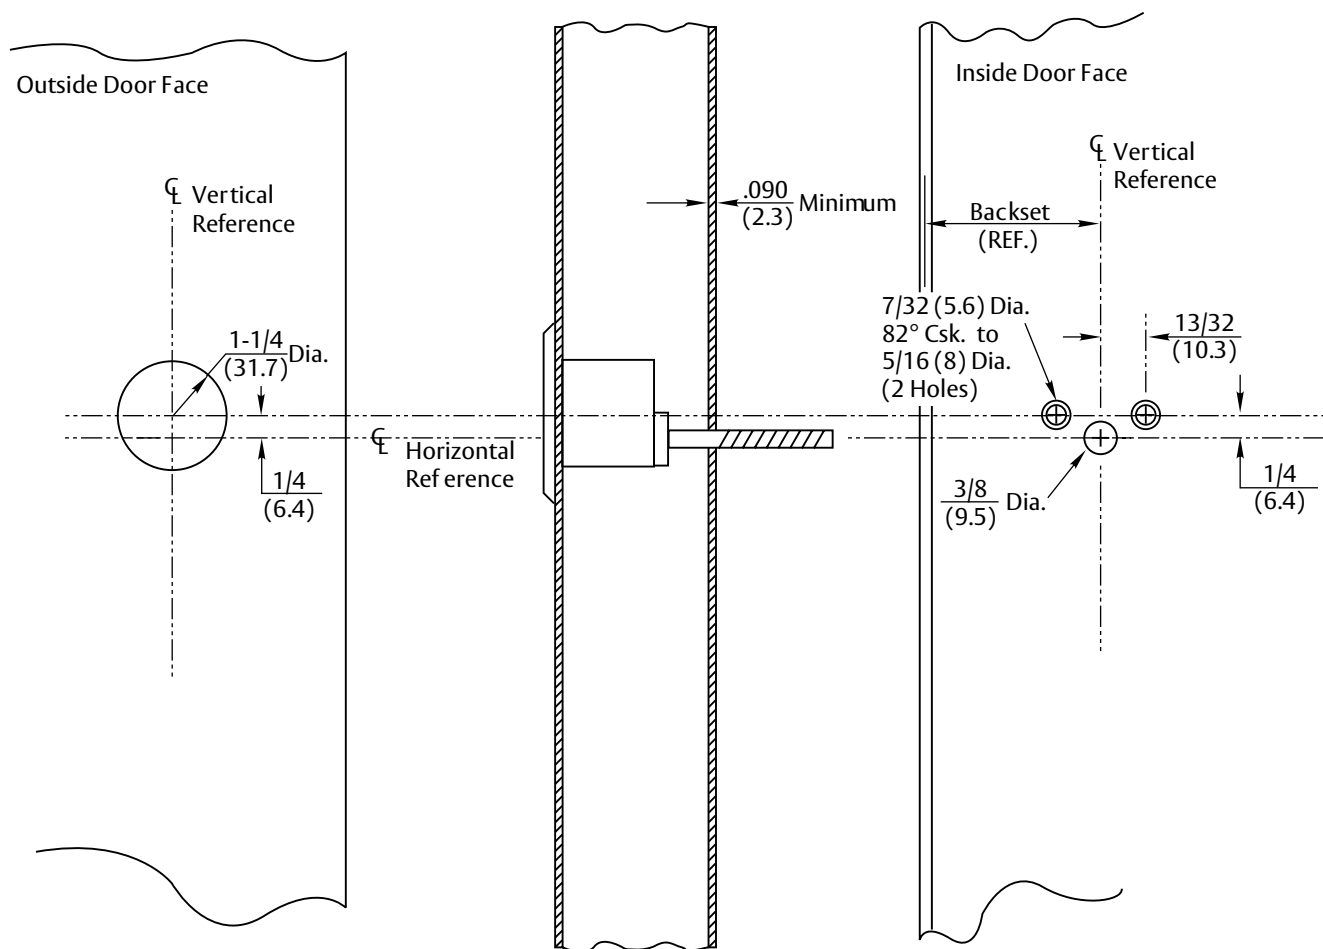

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

121NL Outside Cylinder Application
 for Metal or Aluminum Doors with 6100, 7100
 2100 or 1800 Series Exit Devices, SquareBolt®, Rim, &
 Vertical Rod Exit Devices

Contact us for support at 1-800-438-1951.

ASSA ABLOY

SUPERSEDES 7400-0121 05-15	DO NOT SCALE DRAWING
TEMPLATE NUMBER 7400-0121	DATE 10-23