
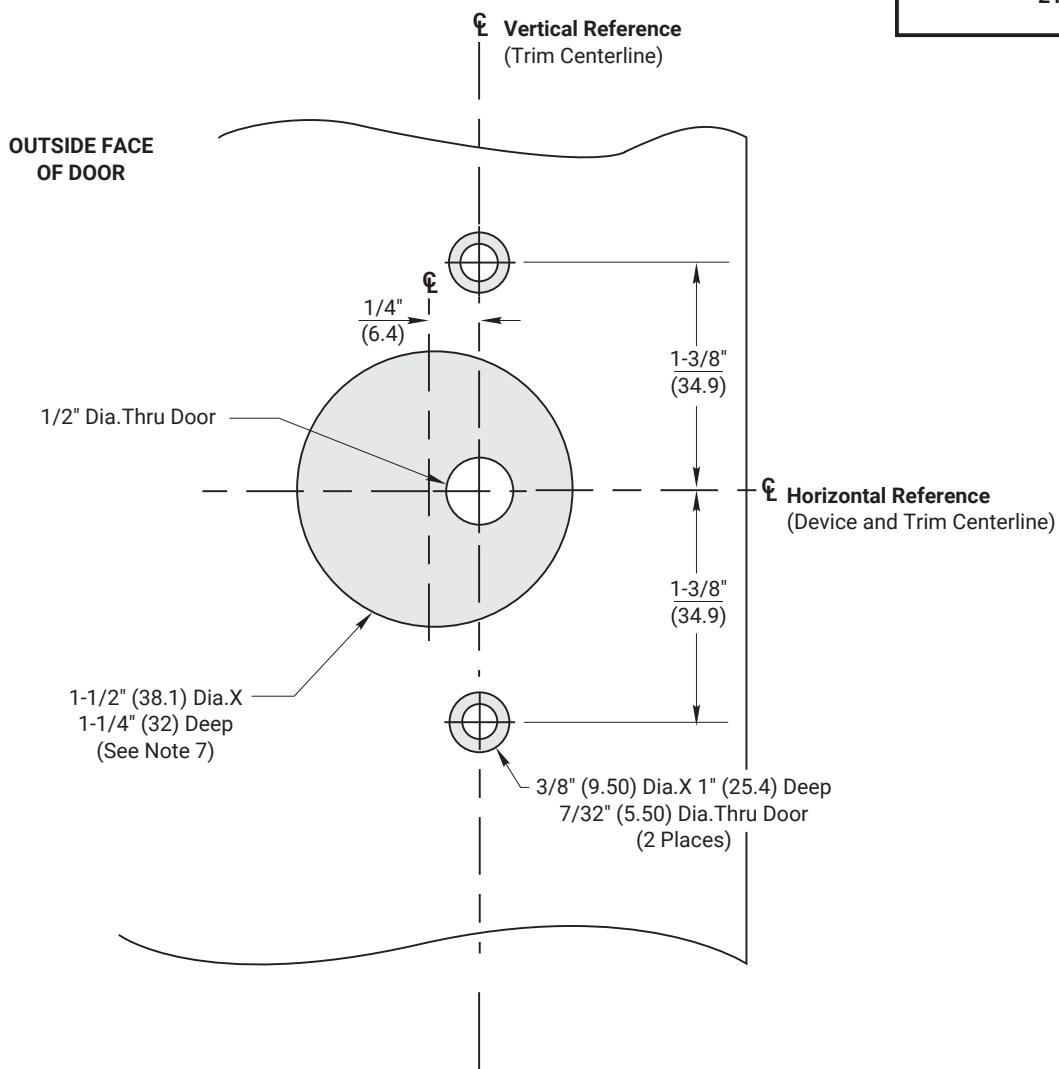


NOTES:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Prepare mounting holes when installing trim.
6. Provide adequate internal support to maintain door integrity during operation.
7. At specifier's option, stock door with ANSI A115.W2 cutout may be substituted. These doors require a filler plate for the door edge cutout (by others).

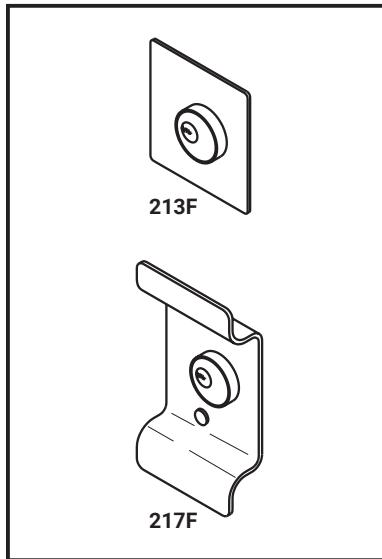

RESPONSIBILITY
 DOOR AND FRAME MANUFACTURERS ARE
 RESPONSIBLE FOR PROVIDING ADEQUATE
 CONSTRUCTION OR REINFORCEMENTS FOR
 PROPER INSTALLATION OF HARDWARE SHOWN.
 ALL ARCHITECTURAL BUILDERS HARDWARE MUST
 BE INSTALLED ON PROPERLY REINFORCED
 DOORS AND FRAMES, REGARDLESS OF TYPE,
 MATERIAL, OR METHOD OF CONSTRUCTION.

213F and 217F Trim
 With 2100(F) Series Rim and Vertical Rod Exit
 Devices Wood or Composite Door
 1-855-557-5078 Ext. 2
www.accentra-assaabloy.com

ACCENTRA
 ASSA ABLOY

Experience a safer
 and more open world

Copyright © 1999, 2023, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc.
 All rights reserved. Reproduction in whole or in part without the express written
 permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES	7400-1213 (12/23)	DO NOT SCALE DRAWING	
TEMPLATE NUMBER	7400-1213	SHEET	DATE
	1 of 1		05/24