



Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Prepare mounting holes when installing the trim.
7. Dimensions given about a centerline are symmetrical.
8. For 480F use "A" and "B" holes. For 481F DO NOT use.

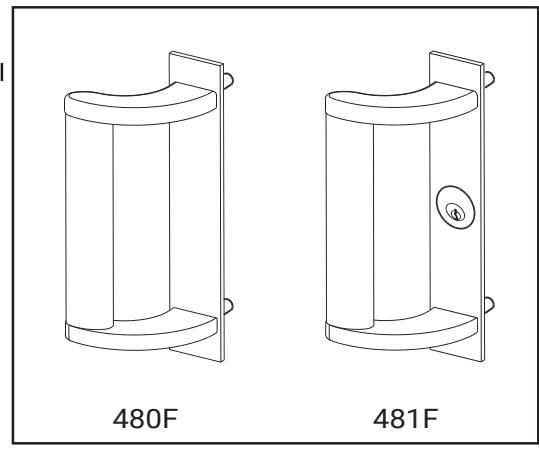

Note: Lever and knob prefix does not affect door prep

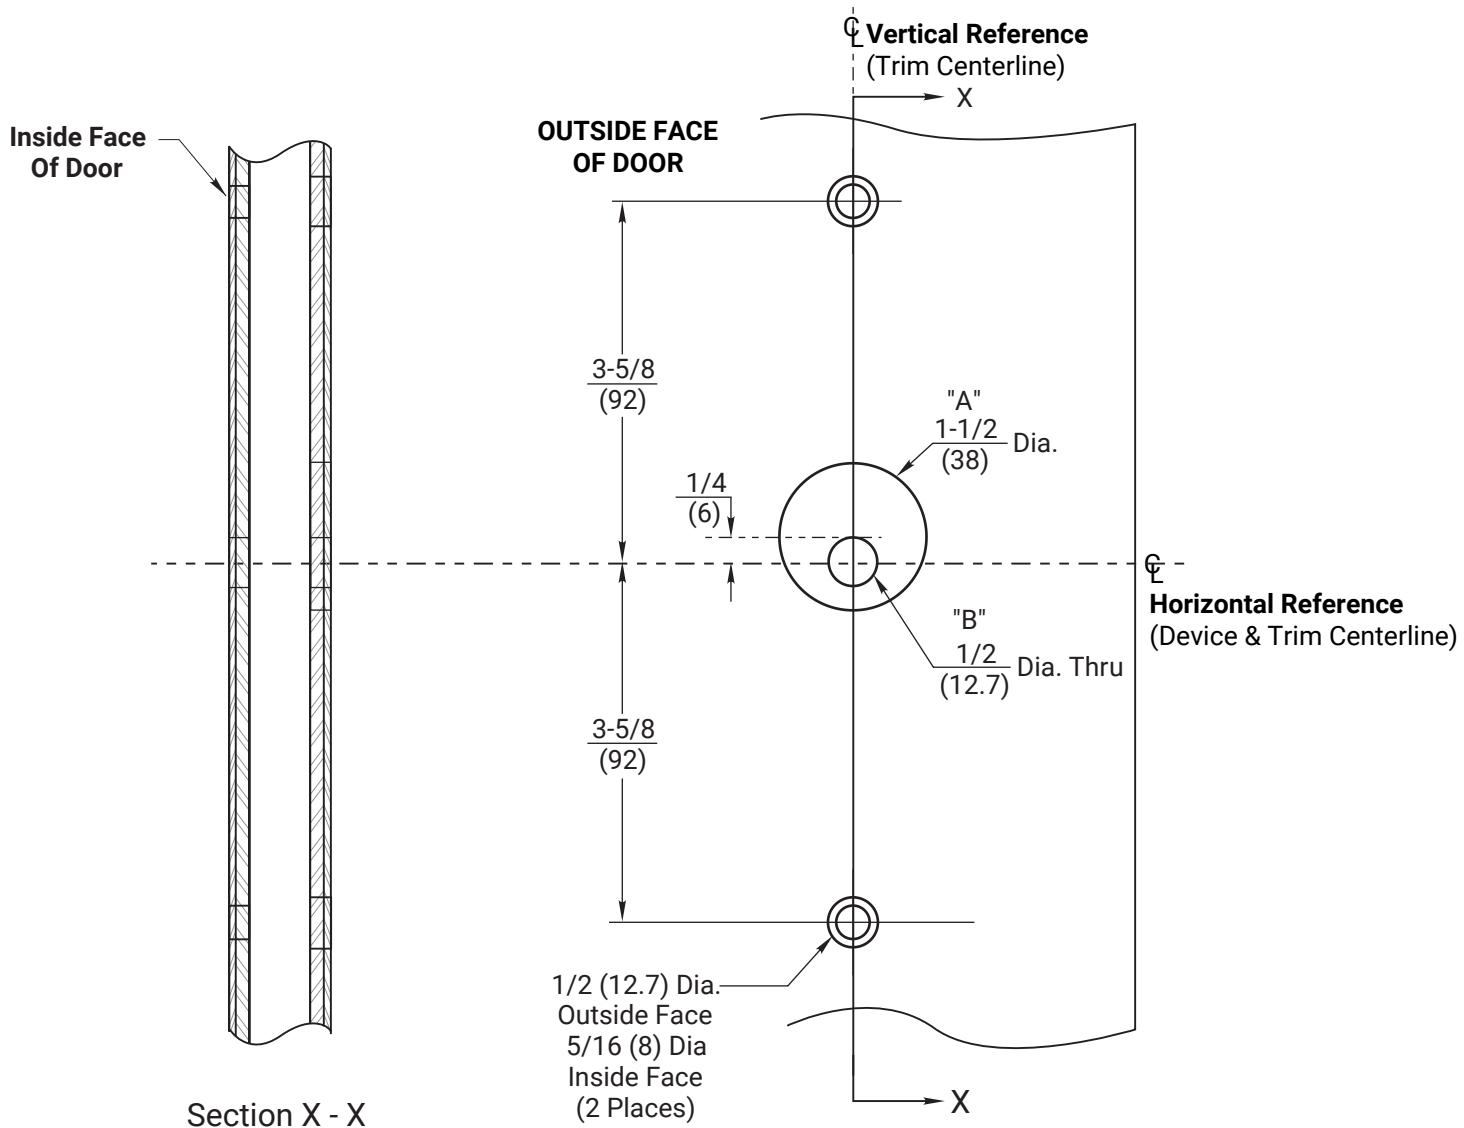

**RESPONSIBILITY**  
DOOR AND FRAME MANUFACTURERS ARE  
RESPONSIBLE FOR PROVIDING ADEQUATE  
CONSTRUCTION OR REINFORCEMENTS FOR  
PROPER INSTALLATION OF HARDWARE SHOWN.  
ALL ARCHITECTURAL BUILDERS HARDWARE MUST  
BE INSTALLED ON PROPERLY REINFORCED  
DOORS AND FRAMES, REGARDLESS OF TYPE,  
MATERIAL, OR METHOD OF CONSTRUCTION.

**480F & 481F Trim**  
7-1/2" Escutcheon, Metal Door Preparation  
For use with 6200 & 7200(F)  
Series Rim and Vertical Rod Exit Devices  
1-855-557-5078 Ext. 2  
[www.accentra-assaabloy.com](http://www.accentra-assaabloy.com)

**ACCENTRA**  
**ASSA ABLOY**

Experience a safer  
and more open world

Copyright ©2024, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved.  
Reproduction in whole or in part without the express written permission of ASSA ABLOY  
Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES	7400-0480 02/24	DO NOT SCALE DRAWING
TEMPLATE NUMBER	7400-0480	DATE
		06-24