
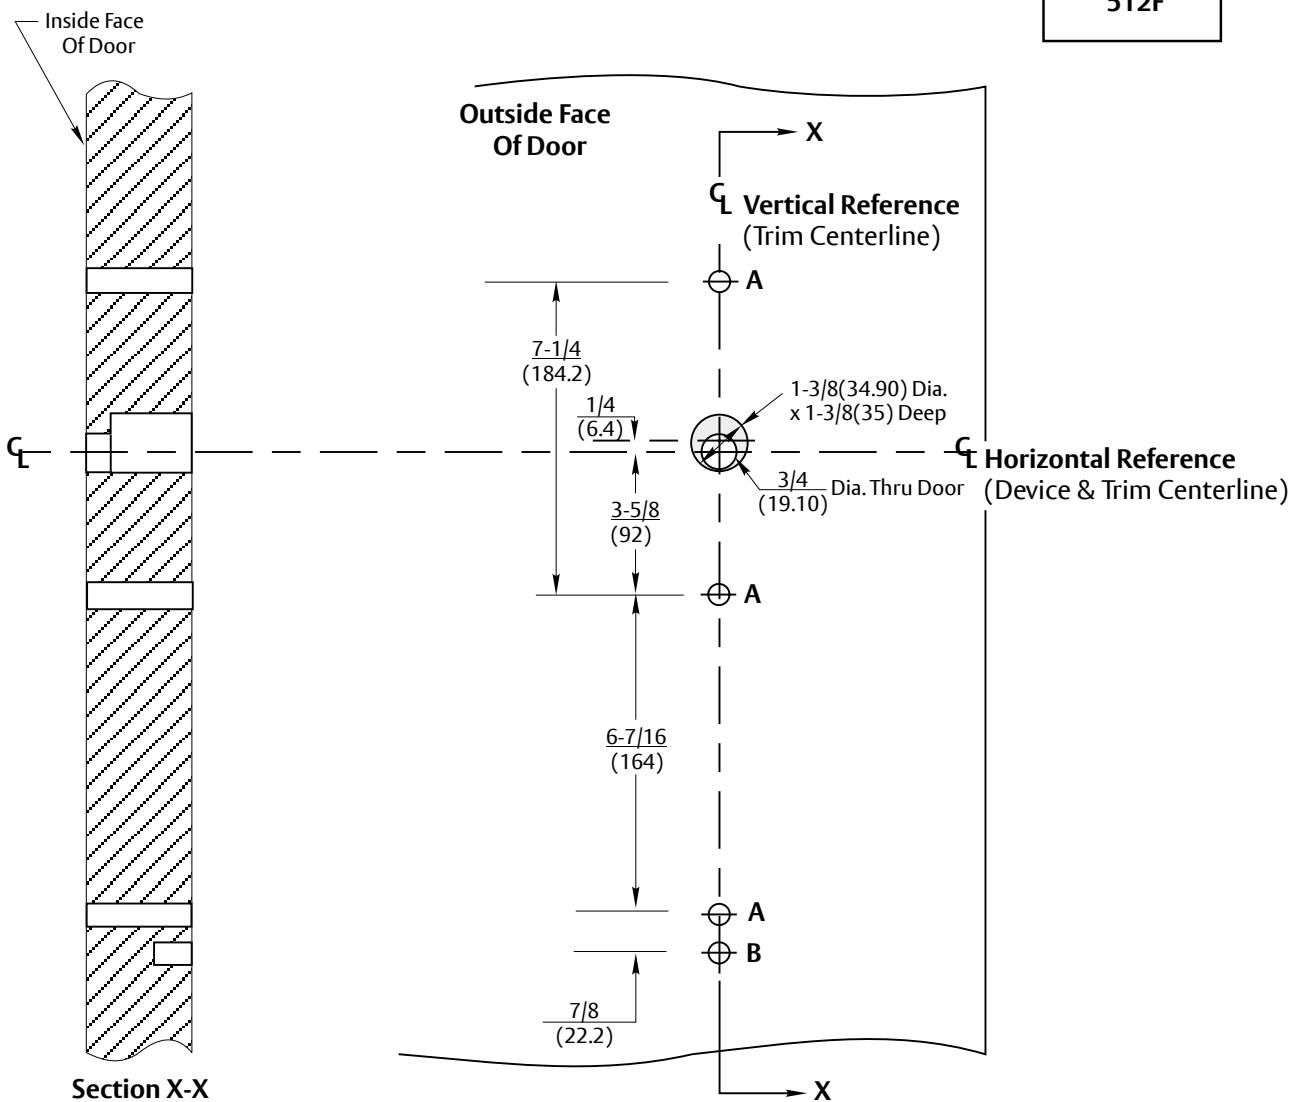


NOTES:

- This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
- Do not scale drawing.
- Dimensions are in inches (mm).
- LHR door shown. Preparation is typical for both door hands.
- Prepare mounting holes when installing trim.
- Provide adequate structural support to maintain door integrity during operation.

Hole	Specification
A	1/2(12.50) Dia. Thru Door
B	3/8(9.50) Dia. X 3/4(19) Deep

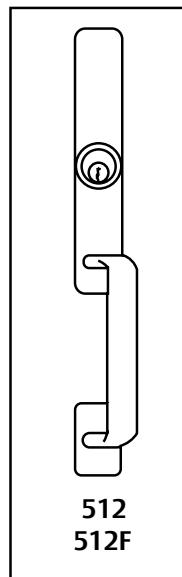

**RESPONSIBILITY**  
DOOR AND FRAME MANUFACTURERS ARE  
RESPONSIBLE FOR PROVIDING ADEQUATE  
CONSTRUCTION OR REINFORCEMENTS FOR  
PROPER INSTALLATION OF HARDWARE SHOWN.  
ALL ARCHITECTURAL BUILDERS HARDWARE MUST  
BE INSTALLED ON PROPERLY REINFORCED  
DOORS AND FRAMES, REGARDLESS OF TYPE,  
MATERIAL, OR METHOD OF CONSTRUCTION.

**512(F) Narrow Escutcheon Trim**  
With 7200M or 7200MF Series  
Rim and Vertical Rod Exit Devices  
Wood or Composite Door Preparation  
Contact us for support at 1-855-557-5078.

**ASSA ABLOY**

SUPERSEDES	8/99	DO NOT SCALE DRAWING
TEMPLATE NUMBER	7400-1512	DATE 12-23