
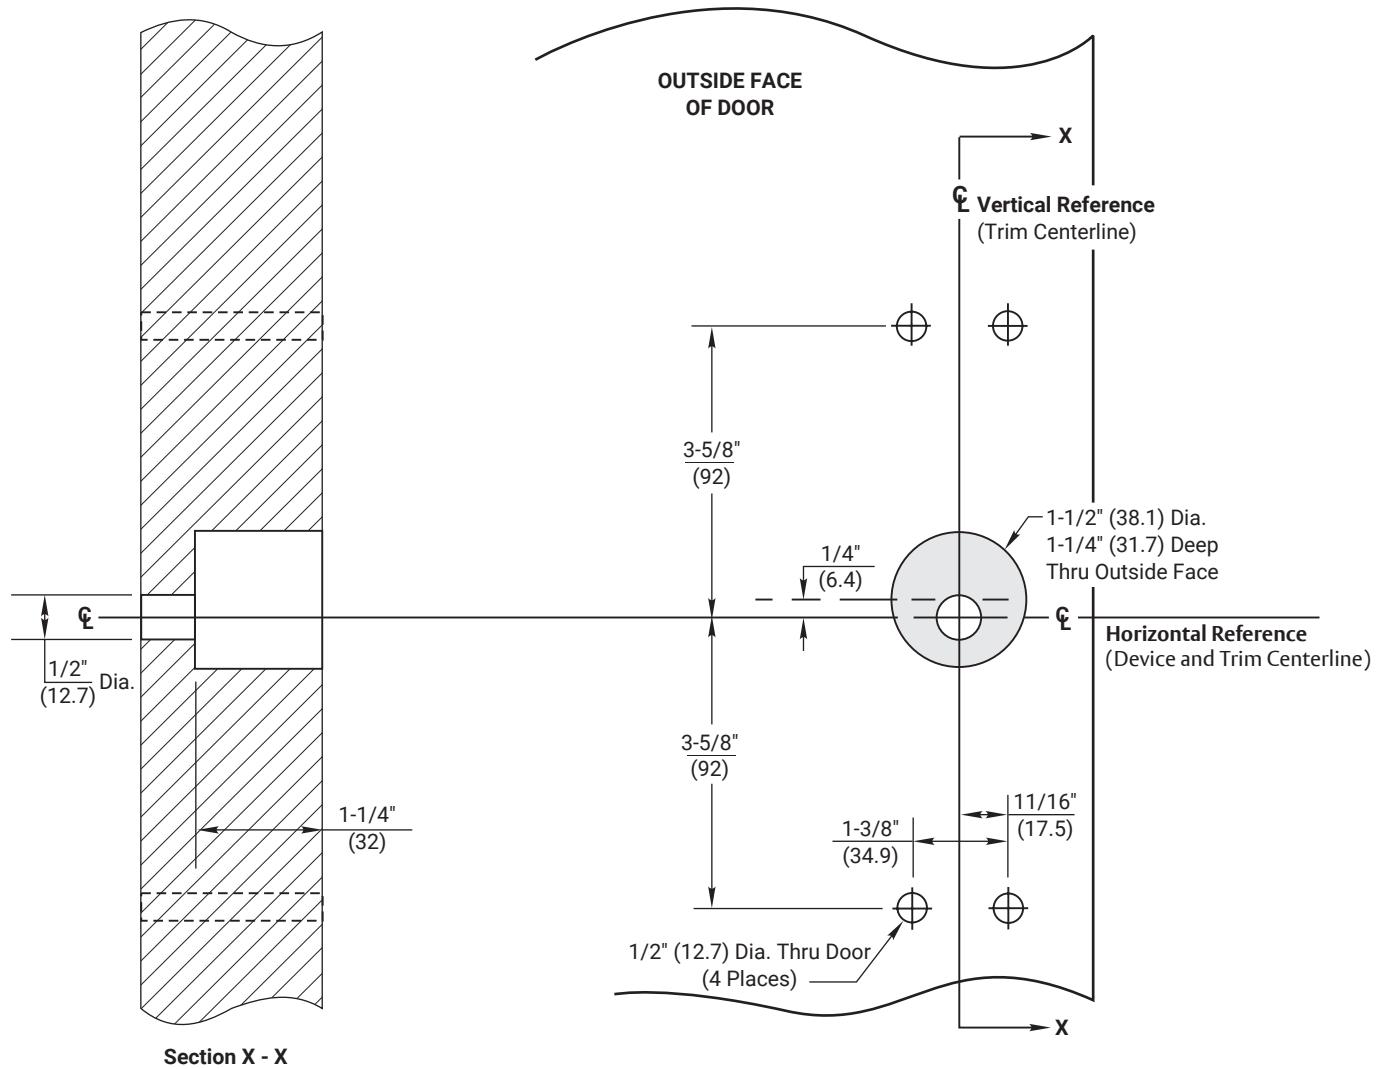


**NOTES:**

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Prepare mounting holes when installing trim.
7. Dimensions given about a centerline are symmetrical.

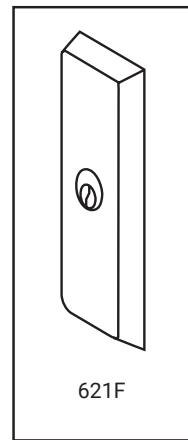

**RESPONSIBILITY**  
 DOOR AND FRAME MANUFACTURERS ARE  
 RESPONSIBLE FOR PROVIDING ADEQUATE  
 CONSTRUCTION OR REINFORCEMENTS FOR  
 PROPER INSTALLATION OF HARDWARE SHOWN.  
 ALL ARCHITECTURAL BUILDERS HARDWARE MUST  
 BE INSTALLED ON PROPERLY REINFORCED  
 DOORS AND FRAMES, REGARDLESS OF TYPE,  
 MATERIAL, OR METHOD OF CONSTRUCTION.

**621F Trim**  
 With 1500(F), 2100(F) or 7100(F) Series  
 Rim and Vertical Rod Exit Devices  
 Wood or Composite Door Preparation  
 1-855-557-5078 Ext. 2  
[www.accentra-assaabloy.com](http://www.accentra-assaabloy.com)

**ACCENTRA**  
**ASSA ABLOY**

Experience a safer  
 and more open world

Copyright © 2006, 2023, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc.  
 All rights reserved. Reproduction in whole or in part without the express written  
 permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES	7400-1621 (12/23)	DO NOT SCALE DRAWING	
TEMPLATE NUMBER	7400-1621	SHEET	DATE
	1 of 1		05/24