
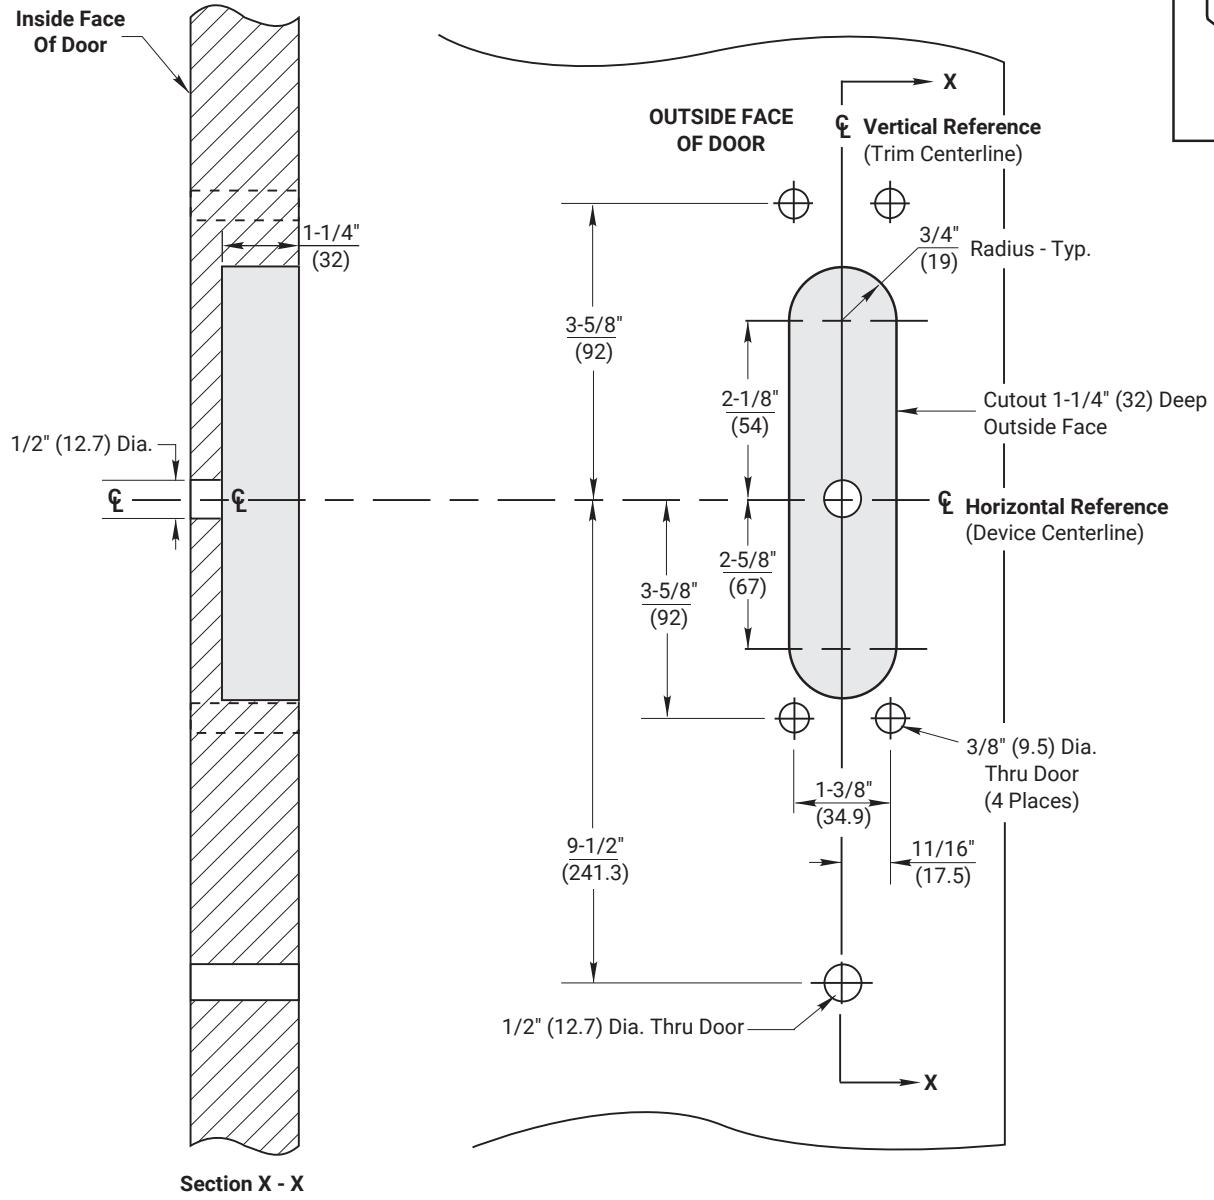


**NOTES:**

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Dimensions given about a centerline are symmetrical.
7. Unspecified radii 1/8" (3.20) maximum.

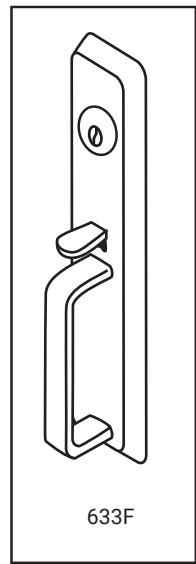

**RESPONSIBILITY**  
 DOOR AND FRAME MANUFACTURERS ARE  
 RESPONSIBLE FOR PROVIDING ADEQUATE  
 CONSTRUCTION OR REINFORCEMENTS FOR  
 PROPER INSTALLATION OF HARDWARE SHOWN.  
 ALL ARCHITECTURAL BUILDERS HARDWARE MUST  
 BE INSTALLED ON PROPERLY REINFORCED  
 DOORS AND FRAMES, REGARDLESS OF TYPE,  
 MATERIAL, OR METHOD OF CONSTRUCTION.

**633F Trim Application**  
 With 1500(F), 2100(F), 6100(F) or 7100(F) Series  
 Rim and Vertical Rod Exit Devices  
 Wood or Composite Door Preparation  
 1-855-557-5078 Ext. 2  
[www.accentra-assaabloy.com](http://www.accentra-assaabloy.com)

**ACCENTRA**  
**ASSA ABLOY**

Experience a safer  
 and more open world

Copyright © 2006, 2015, 2023, 2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES	7400-1633 (12/23)	DO NOT SCALE DRAWING	
TEMPLATE NUMBER	7400-1633	SHEET	DATE
	1 of 1		05/24