
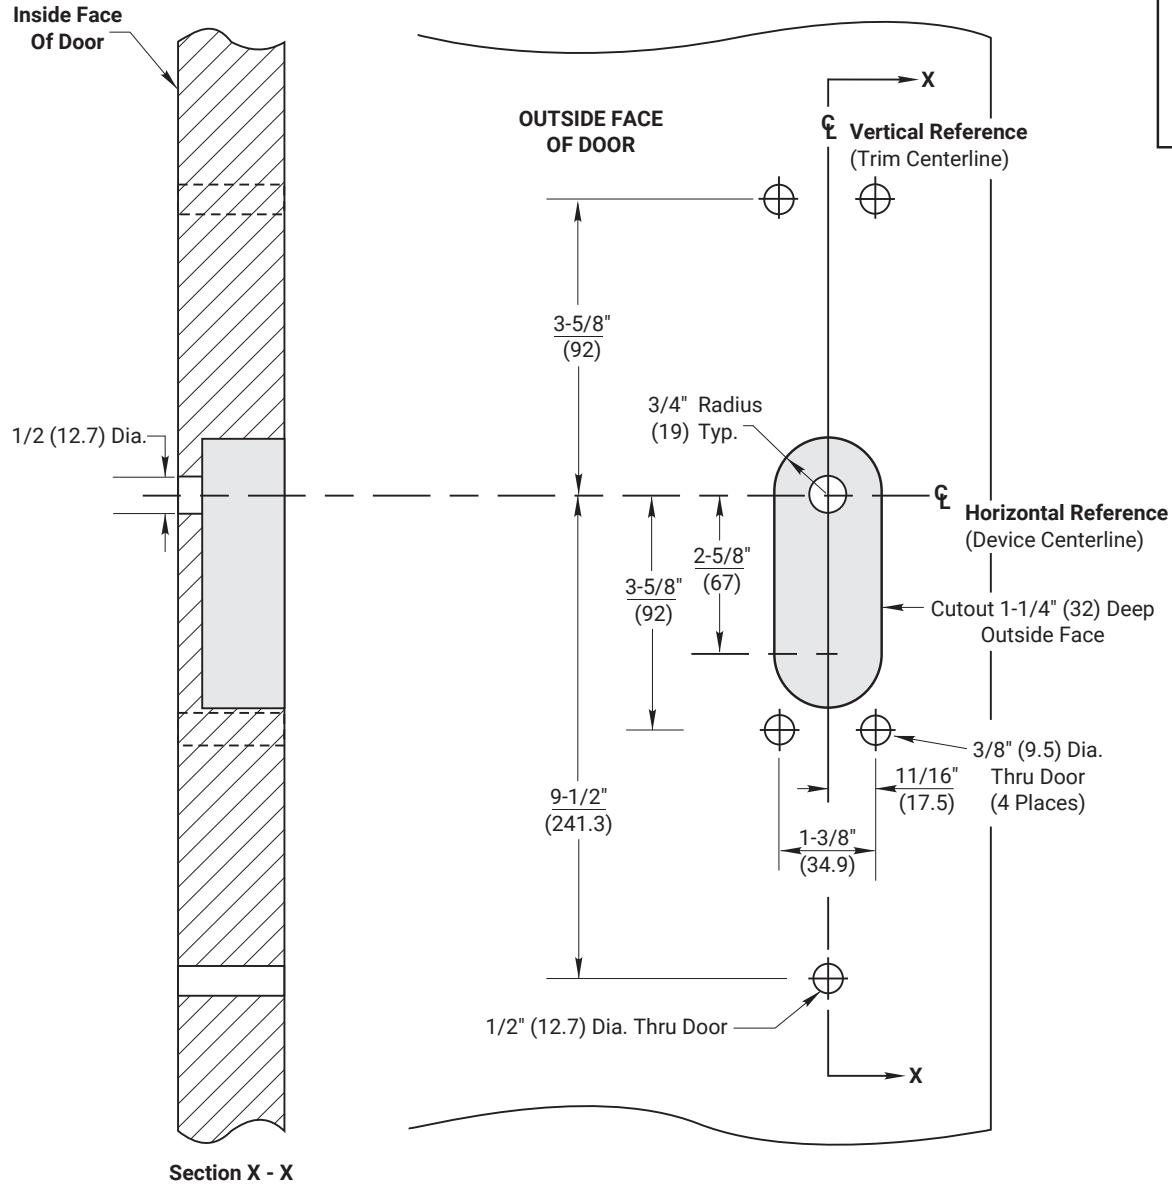


NOTES:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Dimensions given about a centerline are symmetrical.
7. Unspecified radii 1/8" (3.2) maximum.

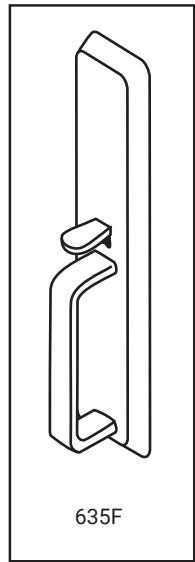

RESPONSIBILITY
 DOOR AND FRAME MANUFACTURERS ARE
 RESPONSIBLE FOR PROVIDING ADEQUATE
 CONSTRUCTION OR REINFORCEMENTS FOR
 PROPER INSTALLATION OF HARDWARE SHOWN.
 ALL ARCHITECTURAL BUILDERS HARDWARE MUST
 BE INSTALLED ON PROPERLY REINFORCED
 DOORS AND FRAMES, REGARDLESS OF TYPE,
 MATERIAL, OR METHOD OF CONSTRUCTION.

635F Trim Application
 With 1500(F), 2100(F), 6100(F) or 7100(F) Series
 Rim and Vertical Rod Exit Devices
 Wood or Composite Door Preparation
 1-855-557-5078 Ext. 2
www.accentra-assaabloy.com

ACCENTRA
ASSA ABLOY

Experience a safer
 and more open world

Copyright © 2006, 2015, 2023, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES	7400-1635 (12/23)	DO NOT SCALE DRAWING	
TEMPLATE NUMBER	7400-1635	SHEET	DATE
	1 of 1		05/24