
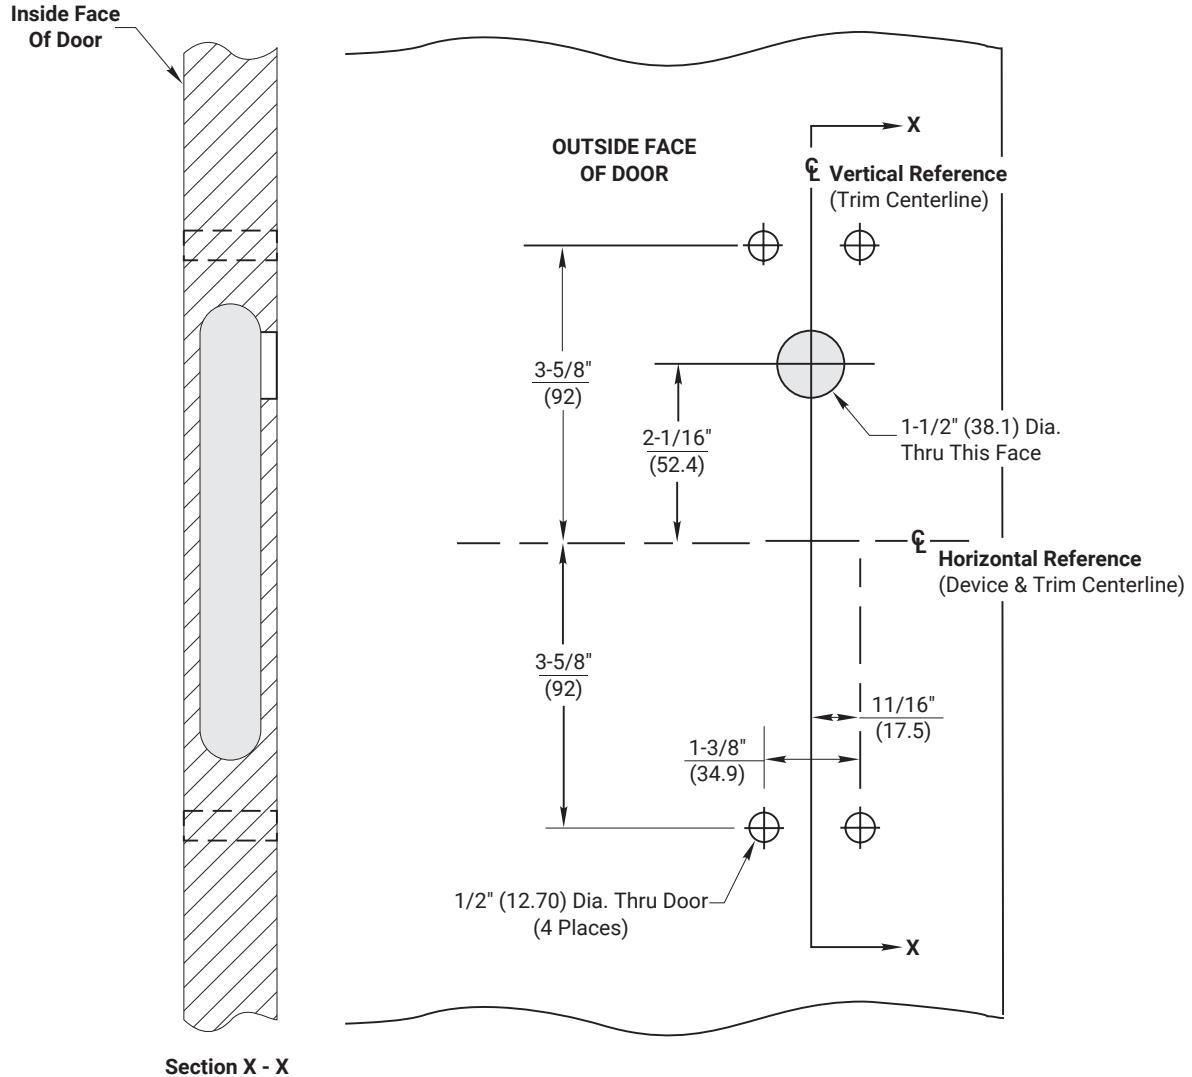


**NOTES:**

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Prepare mounting holes when installing trim.
7. Shaded area represents mortise lock cavity from device template.

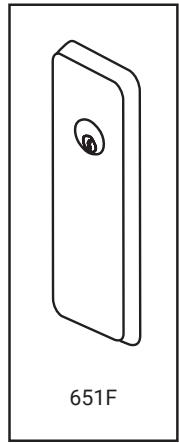

**RESPONSIBILITY**  
 DOOR AND FRAME MANUFACTURERS ARE  
 RESPONSIBLE FOR PROVIDING ADEQUATE  
 CONSTRUCTION OR REINFORCEMENTS FOR  
 PROPER INSTALLATION OF HARDWARE SHOWN.  
 ALL ARCHITECTURAL BUILDERS HARDWARE MUST  
 BE INSTALLED ON PROPERLY REINFORCED  
 DOORS AND FRAMES, REGARDLESS OF TYPE,  
 MATERIAL, OR METHOD OF CONSTRUCTION.

**651F Trim**  
 With 1530(F), or 7130(F) Series  
 Mortise Exit Devices  
 Wood or Composite Door Preparation  
 1-855-557-5078 Ext. 2  
[www.accentra-assaabloy.com](http://www.accentra-assaabloy.com)

Experience a safer  
 and more open world

Copyright © 2006, 2023, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc.  
 All rights reserved. Reproduction in whole or in part without the express written  
 permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

**ACCENTRA**  
 ASSA ABLOY

SUPERSEDES	7400-1651 (12/23)	DO NOT SCALE DRAWING	
TEMPLATE NUMBER	7400-1651	SHEET	DATE
	1 of 1		05/24