
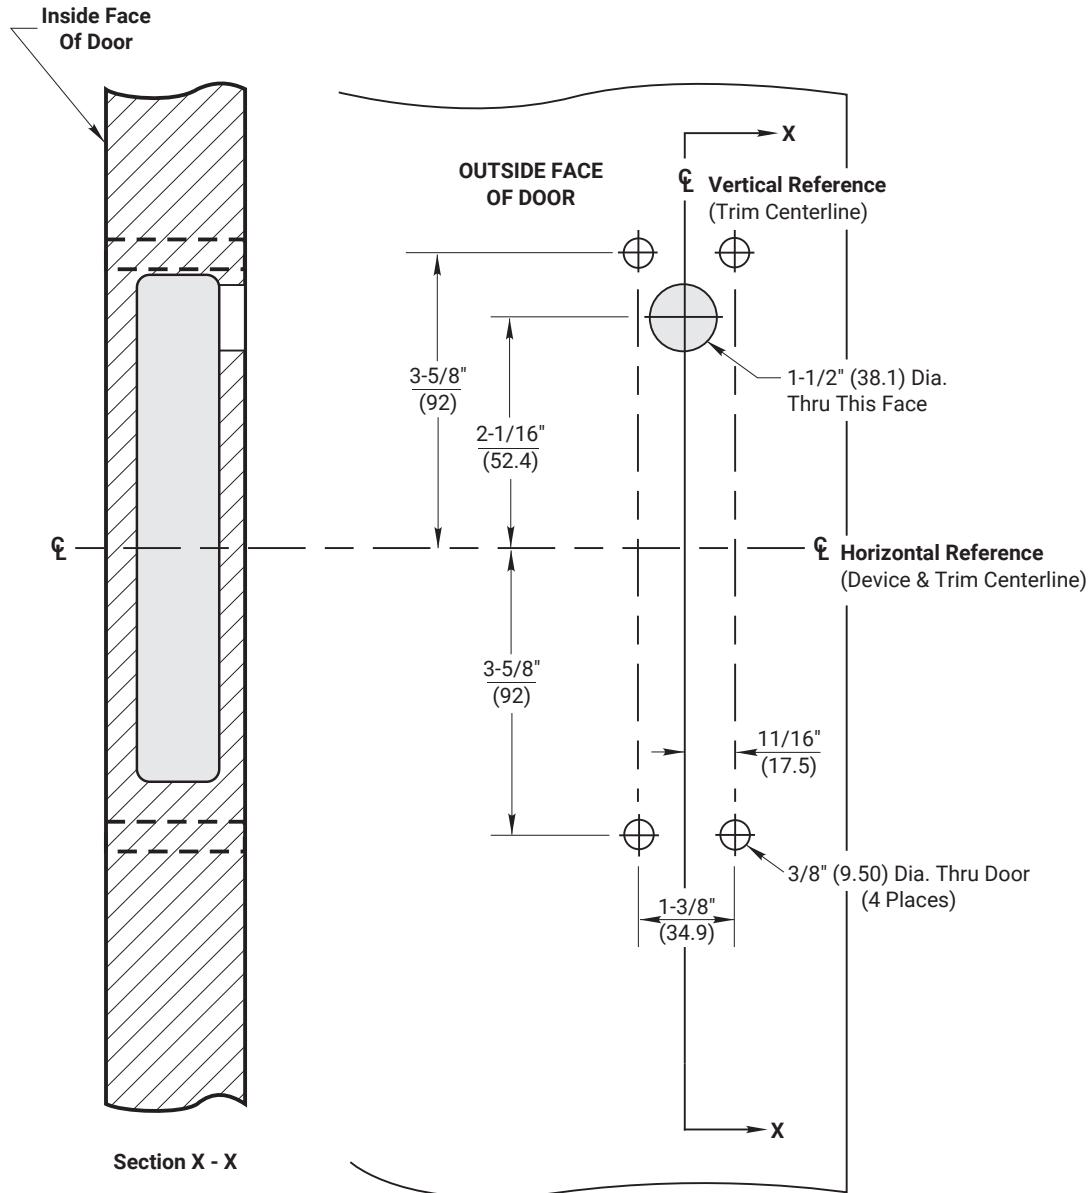


NOTES:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Shaded area represents mortise lock cavity from device template.
6. Prepare mounting holes when installing trim.
7. Provide adequate structural support to maintain door integrity during operation.

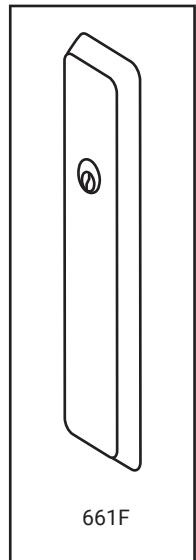

RESPONSIBILITY
DOOR AND FRAME MANUFACTURERS ARE
RESPONSIBLE FOR PROVIDING ADEQUATE
CONSTRUCTION OR REINFORCEMENTS FOR
PROPER INSTALLATION OF HARDWARE SHOWN.
ALL ARCHITECTURAL BUILDERS HARDWARE MUST
BE INSTALLED ON PROPERLY REINFORCED
DOORS AND FRAMES, REGARDLESS OF TYPE,
MATERIAL, OR METHOD OF CONSTRUCTION.

661F Trim
With 1530(F) or 7130(F) Series
Mortise Exit Devices
Wood or Composite Door Preparation
1-855-557-5078 Ext. 2
www.accentra-assaabloy.com

ACCENTRA
ASSA ABLOY

Experience a safer
and more open world

Copyright © 2006, 2012, 2023, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc.
All rights reserved. Reproduction in whole or in part without the express written permission
of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES	7400-1661 (12/23)	DO NOT SCALE DRAWING	
TEMPLATE NUMBER	7400-1661	SHEET	DATE
	1 of 1		05/24