
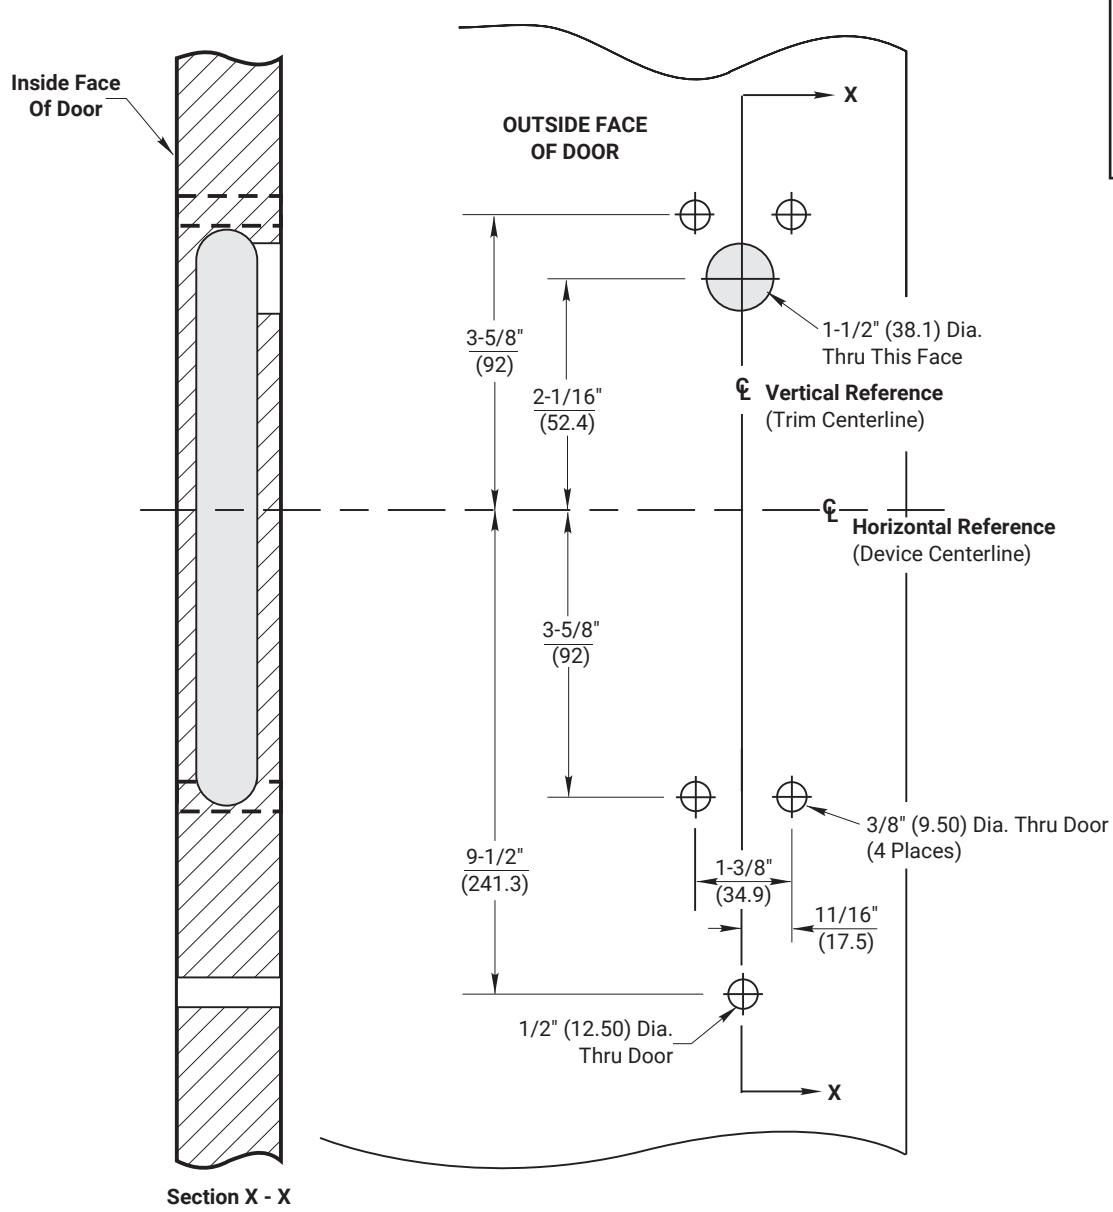


NOTES:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Shaded area represents mortise lock cavity from device template.
6. Prepare mounting holes when installing trim.
7. Provide adequate structural support to maintain door integrity during operation.

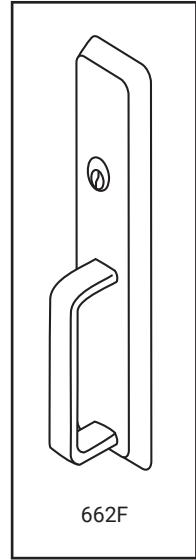

RESPONSIBILITY
 DOOR AND FRAME MANUFACTURERS ARE
 RESPONSIBLE FOR PROVIDING ADEQUATE
 CONSTRUCTION OR REINFORCEMENTS FOR
 PROPER INSTALLATION OF HARDWARE SHOWN.
 ALL ARCHITECTURAL BUILDERS HARDWARE MUST
 BE INSTALLED ON PROPERLY REINFORCED
 DOORS AND FRAMES, REGARDLESS OF TYPE,
 MATERIAL, OR METHOD OF CONSTRUCTION.

Experience a safer
 and more open world

Copyright © 2006, 2015, 2023, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc.
 All rights reserved. Reproduction in whole or in part without the express written permission
 of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

662F Trim
 With 1530(F), 6130(F) or 7130(F) Series
 Mortise Exit Devices
 Wood or Composite Door Preparation
 1-855-557-5078 Ext. 2
www.accentra-assaabloy.com

ACCENTRA
ASSA ABLOY

SUPERSEDES	7400-1662 (12/23)	DO NOT SCALE DRAWING	
TEMPLATE NUMBER	7400-1662	SHEET	DATE
	1 of 1		05/24