
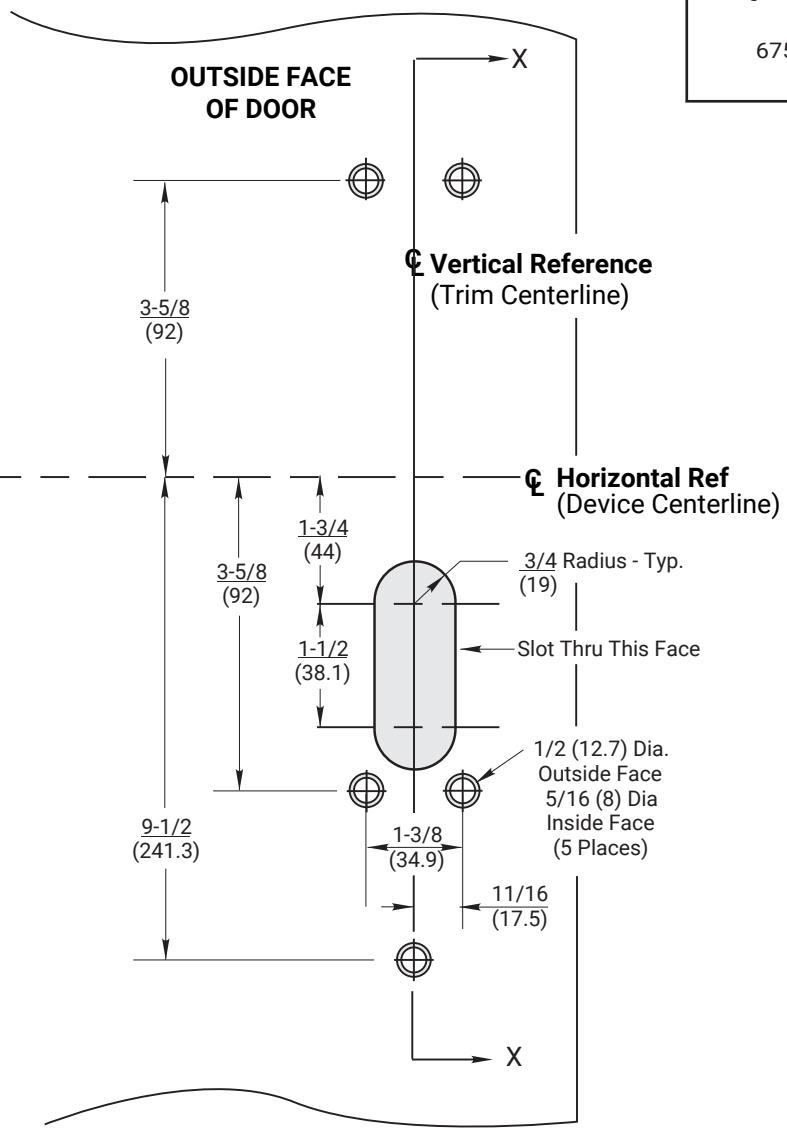
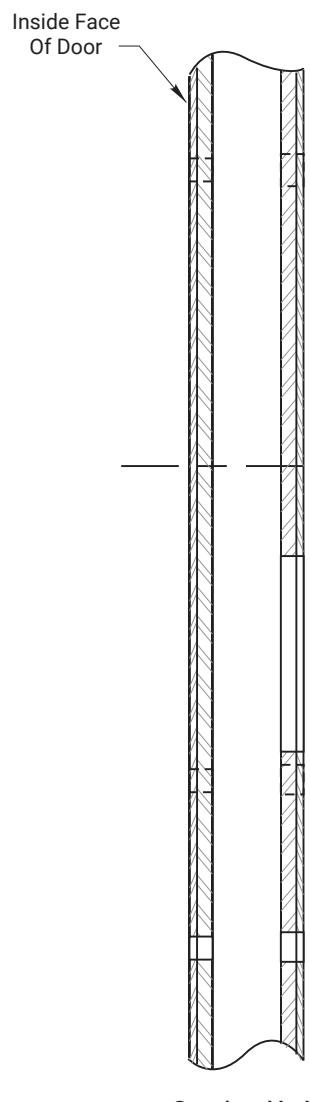


NOTES:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. For door reinforcement see template 7400-0000.
6. Provide adequate internal support to prevent door deformation from bolting trim to the device.

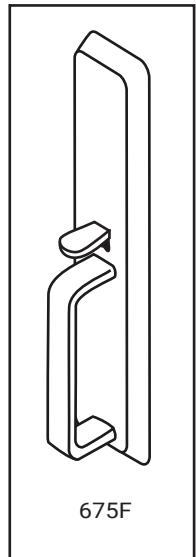

RESPONSIBILITY
DOOR AND FRAME MANUFACTURERS ARE
RESPONSIBLE FOR PROVIDING ADEQUATE
CONSTRUCTION OR REINFORCEMENTS FOR
PROPER INSTALLATION OF HARDWARE SHOWN.
ALL ARCHITECTURAL BUILDERS HARDWARE MUST
BE INSTALLED ON PROPERLY REINFORCED
DOORS AND FRAMES, REGARDLESS OF TYPE,
MATERIAL, OR METHOD OF CONSTRUCTION.

675F Trim
With 1530(F), 6130(F) or 7130(F) Series
Mortise Exit Devices
Metal Door Preparation
1-855-557-5078 Ext. 2
www.accentra-assaabloy.com

ACCENTRA
ASSA ABLOY

Experience a safer
and more open world

Copyright © 2006, 2015, 2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES	05/15	DO NOT SCALE DRAWING
TEMPLATE NUMBER	7400-0675	DATE 04-24