
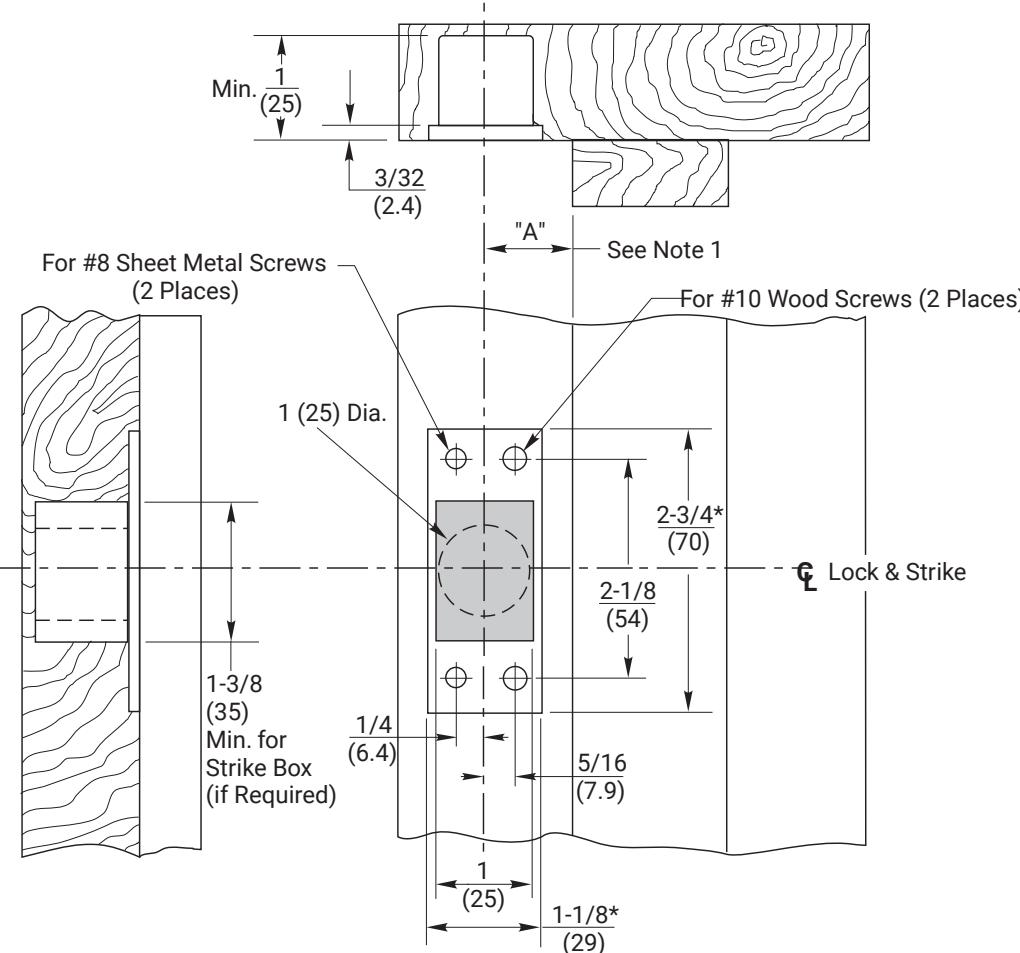


**Notes:**

1. Dimension "A" = 1/2 door thickness plus clearance for silencers or gasketing when used. (Failure to provide clearance will cause misalignment of lock and strike, requiring strike modification.)
2. Dimensions marked with \* have tolerances of +.015, -.000.
3. Dimensions marked with \*\*\* allows for 3/32" (2.4) thick strike and 2/64" (.8) thick plastic strike box.
4. **DO NOT SCALE** Dimensions are given in inches (mm).

Refer To Template No.7101-0033 For H.M. Door Preparation.  
Refer To Template No.7101-0034 For Wood Door Preparation.

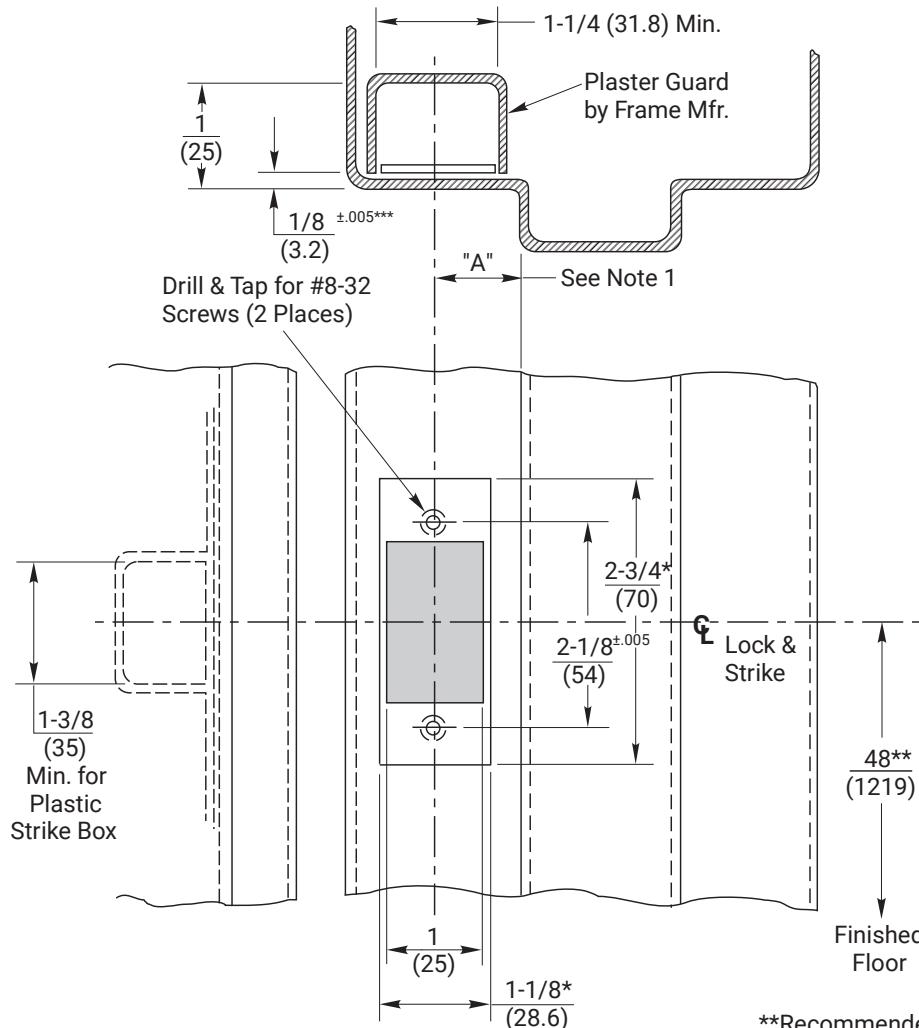

Experience a safer  
and more open world

Copyright © 2010, 2023, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

## D100 & D200 Series Deadbolts Strikes

### H.M. and Wood Frame Preparation

1-855-557-5078 Ext. 2 [www.accentra-assaabloy.com](http://www.accentra-assaabloy.com)

Template Number:  
**7101-0035**

Date: 05/24

Sheet: 1 of 1

**ACCENTRA**  
**ASSA ABLOY**