


NOT TO SCALE

Experience a safer  
and more open world

## PEMKO 120" WIDE THROW FULL MORTISE HD1

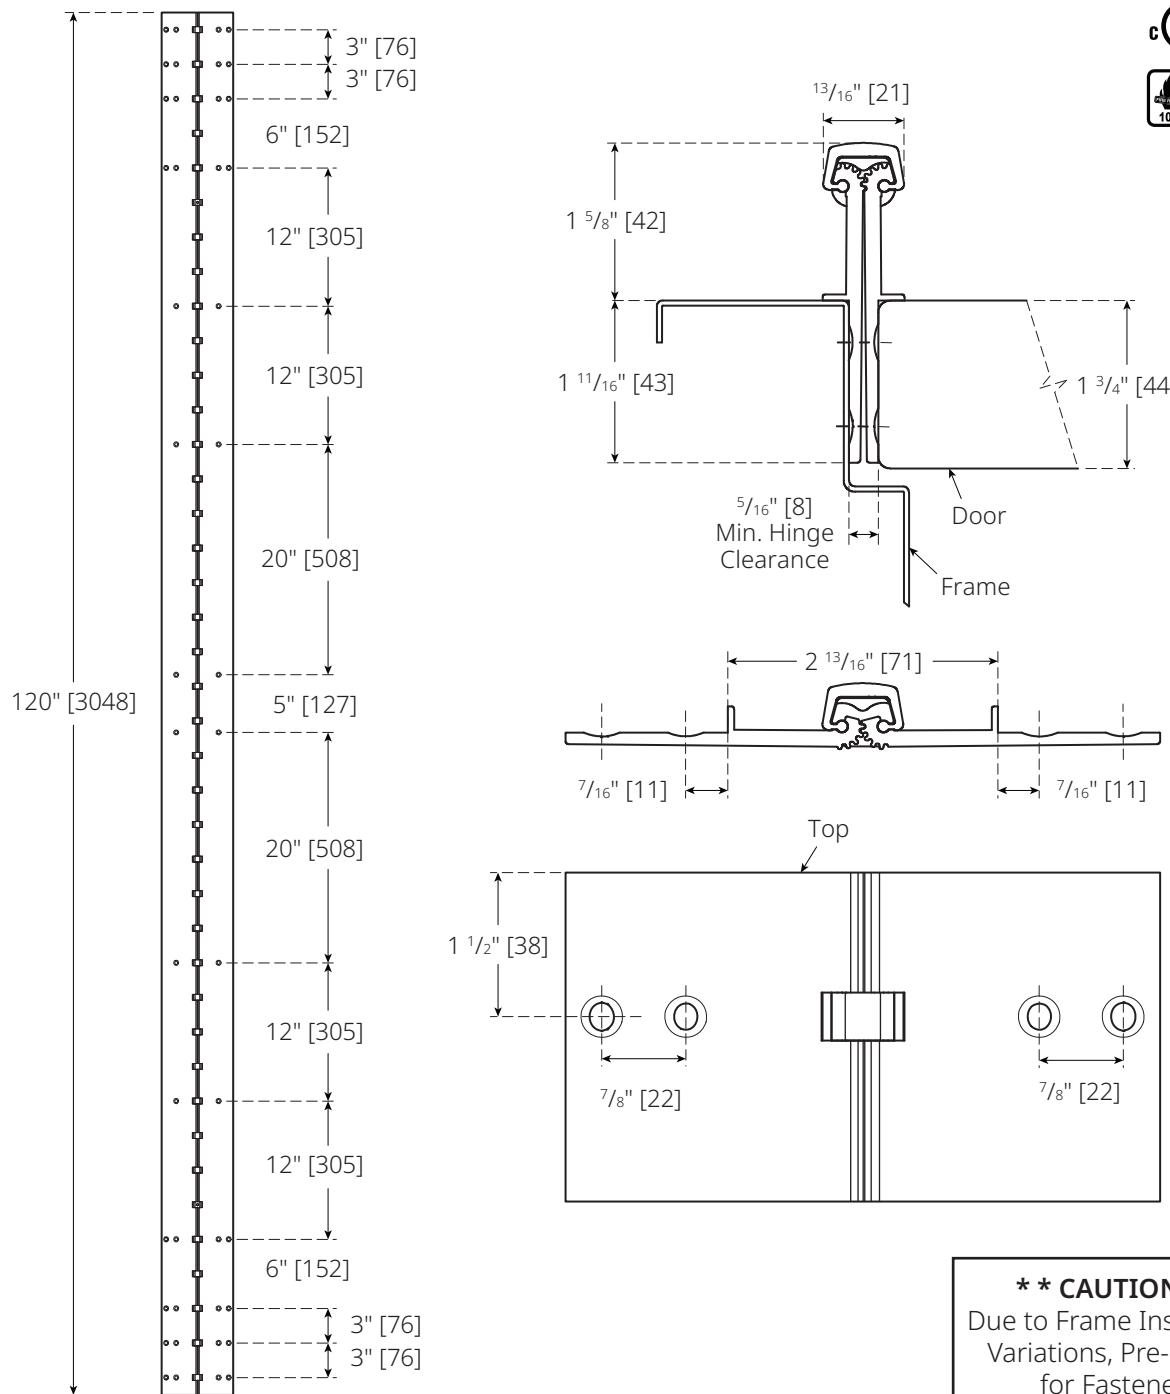

Additional clearance needed for bevelled edge hinge side of door.

## \*\* CAUTION \*\*

Due to Frame Installation Variations, Pre-drilling  
for Fasteners  
IS NOT Recommended