

TEMPLATE T-1700

Effective date: May 15, 2026
Supercedes: All Previous


NOT TO SCALE

ROCKWOOD®

ASSA ABLOY

Experience a safer
and more open world

ROCKWOOD 1700 UNIVERSAL COORDINATOR

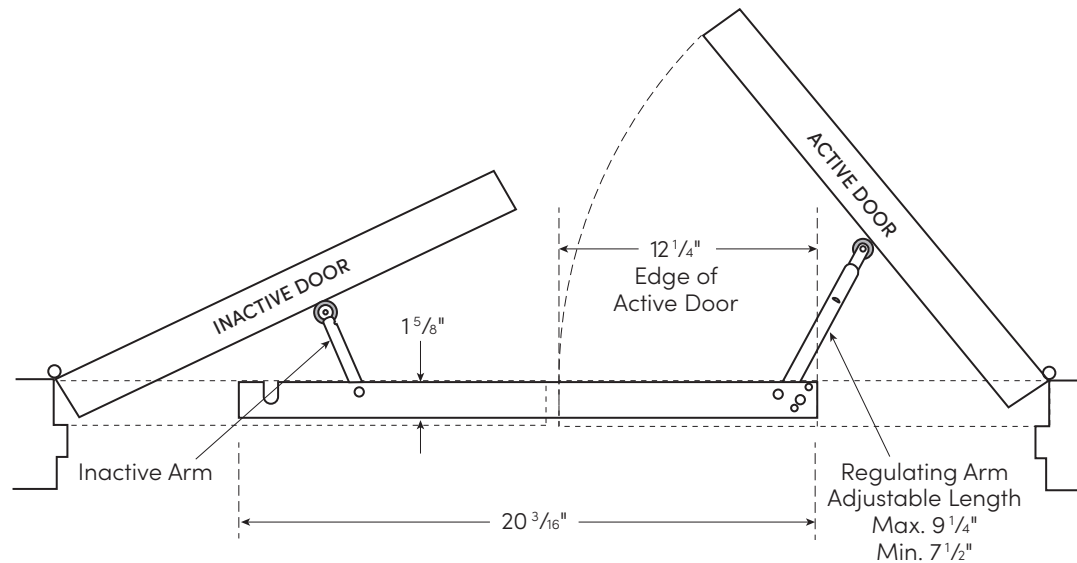

Spot (four) Holes in Door Stop
for #10-24 Machine Screws or #10 Wood Screws

