


Architectural Door Accessories

Rockwood ESK-SGL-WOOD-SWING3 Single Electric Strike Swing 3/RHR for Wood Frames

Experience a safer
and more open world

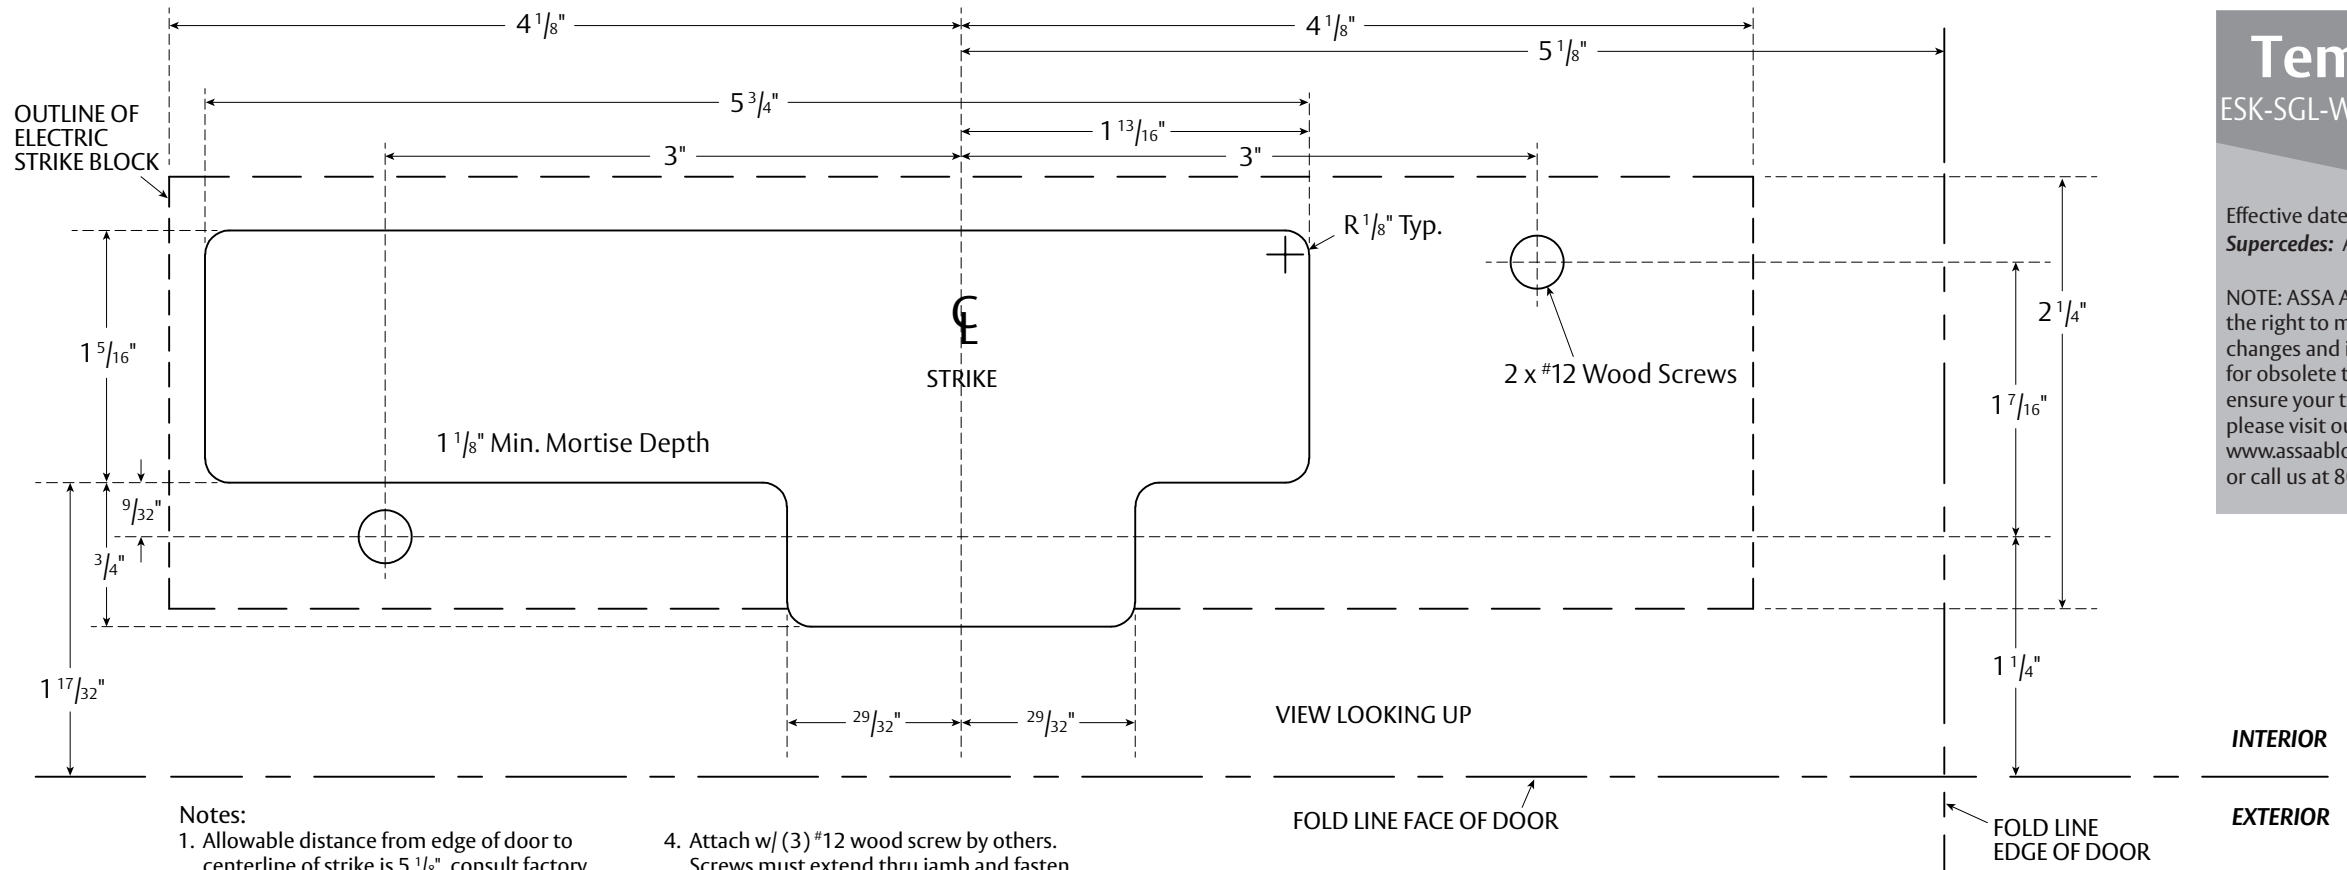

Template ESK-SGL-WOOD-SWING3

Effective date: August 12, 2021
Supersedes: All Previous

NOTE: ASSA ABLOY reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at www.assaabloydooraccessories.us or call us at 800.458.2424.

Notes:

1. Allowable distance from edge of door to centerline of strike is $5 \frac{1}{8}$ ", consult factory if distance to centerline is different.
2. View is from bottom of header.
3. Prep shown is for wood doors only.
4. Attach w/ (3) #12 wood screw by others. Screws must extend thru jamb and fasten to blocking material or sub frame.
5. For headers less than or equal to $5 \frac{1}{4}$ " wide, cover is required by others to conceal a portion of electric strike.

PRINT ON 14" X 8.5" PAPER OR LARGER AT 1:1 SCALE. VERIFY MEASUREMENTS AFTER PRINTING BEFORE USING THIS AS A TEMPLATE.