


Architectural Door Accessories

Rockwood MSK-SGL-HMF-SWING3 Single Manual Strike Swing 3/RHR for Hollow Metal Frames

Experience a safer
and more open world

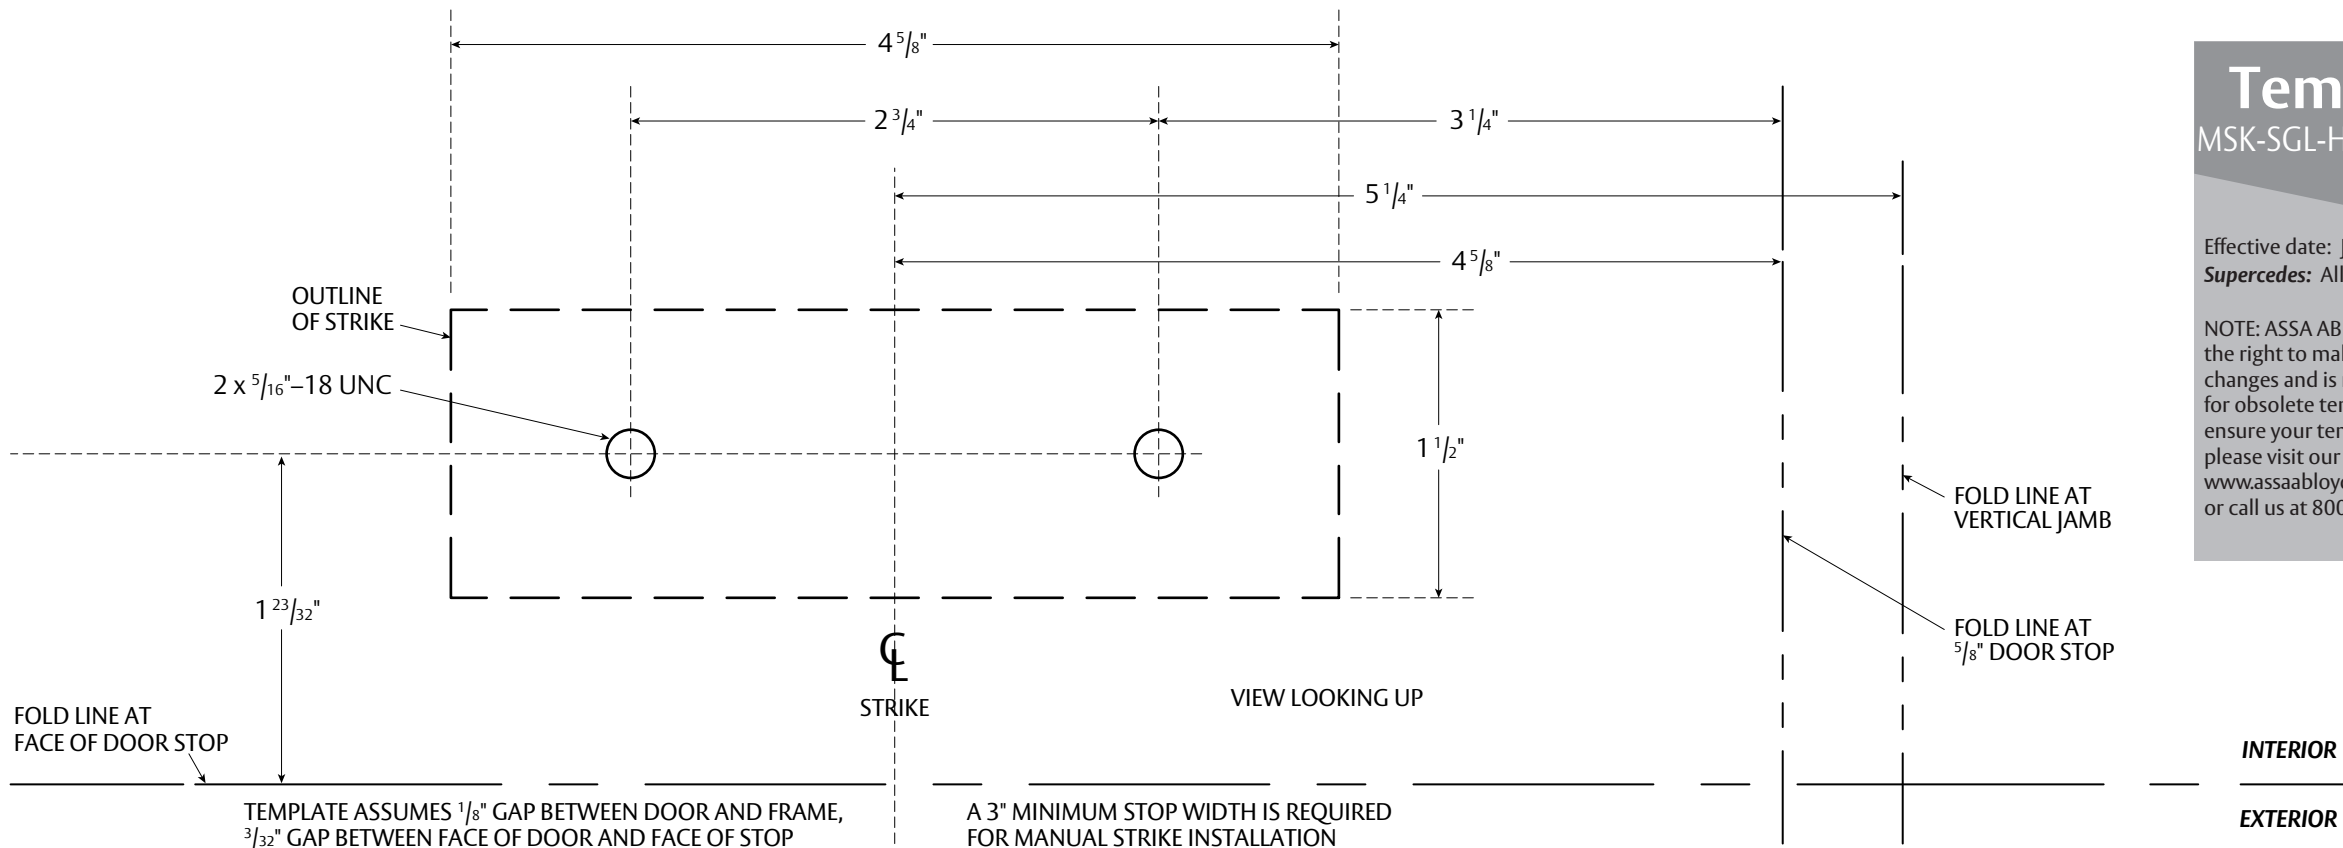

Template
MSK-SGL-HMF-SWING3

Effective date: June 1, 2020
Supersedes: All Previous

NOTE: ASSA ABLOY reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at www.assaabloydooraccessories.us or call us at 800-458-2424.

- Notes:
1. Allowable distance from edge of door to centerline of strike is 5 1/8", consult factory if distance to centerline is different.
 2. View is from bottom of header.
 3. Prep shown is for hollow metal frames only.
 4. A 3" minimum stop width is required for manual strike installation in double rabbet frames.
 5. 5/8" stop height only.
 6. Backing plate of 12 ga. min. required in door stop for strike installation.
 7. 5/16"-18 fasteners provided.
 8. It is recommended that frame be prepped by door/frame manufacturer.

PRINT ON 14" X 8.5" PAPER OR LARGER AT 1:1 SCALE. VERIFY MEASUREMENTS AFTER PRINTING BEFORE USING THIS AS A TEMPLATE.