

PEMKO DOOR TOP SOLUTIONS FOR SINGLE OR PAIRED DOOR APPLICATIONS


Experience a safer
and more open world

Applies to the following products:

EGA305XGSS

Installation instructions:

1. Measure, mark, and trim door top angle on each side of door. NOTE: Hole pattern is slightly off-center to ensure screws are placed properly.
2. Drill pilot holes in door at marks for each piece (both sides of the door). NOTE: For wood doors, fasteners should be drilled into the door's top rail.
3. Install HSS2000 onto both sides of the small legs of the door top angles. Thoroughly clean material and carefully remove adhesive backing to apply using firm pressure to ensure adhesion. Trim gasketing to length with scissors.
4. Install S88 on the frame header to contact the door angle on the push side of the door. Thoroughly clean the frame and carefully remove adhesive backing to apply using firm pressure to ensure adhesion. Trim gasketing to length with scissors.
5. Mount each door angle piece to door with supplied fasteners.
6. Install end plates with supplied fasteners.
7. For door pairs, repeat steps 1-6 on other paired door.

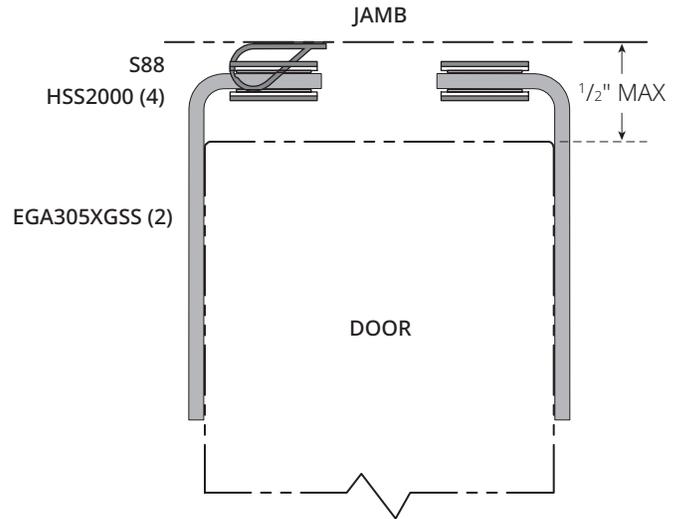


Testing/Ratings:

Solutions for door and frame clearances that exceed the guidelines of NFPA 80 when installed per the manufacturer's instructions, intended for use with UL or Intertek Classified steel composite, hollow metal, wood, and plastic covered composite core doors with UL or Intertek listed frames rated up to 1 1/2 hours.



Tools Required:



Pemko
5535 Distribution Dr.
Memphis, TN 38141
www.pemko.com

Memphis, TN USA
P: 800 824 3018
F: 800 243 3656

Ventura, CA USA
P: 800 283 9988
F: 800 283 4050

Vaughan, ON CA
P: 800 461 3007
F: 800 461 8989