

INSTALLATION INSTRUCTIONS 890 & 891

Effective date: November 29, 2021
Supercedes: All Previous

ROCKWOOD®


ASSA ABLOY

Experience a safer
and more open world


NOT TO SCALE

890 & 891 - POCKET DOOR LATCHES


Installation of Door Pull & Strike Plate

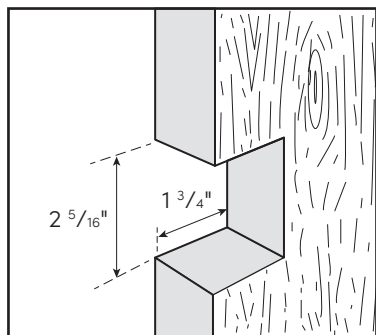


1. Cut one simple notch in edge of door.

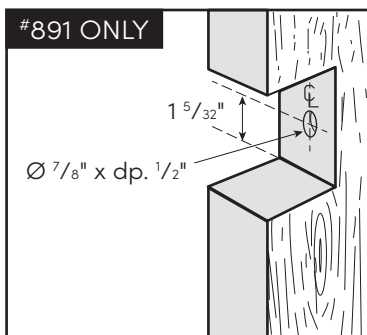


2. Drill mechanism relief hole.

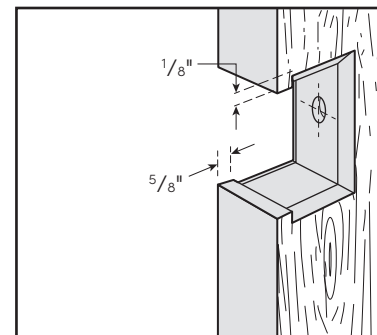


3. Notch edge for relief of dished grip.

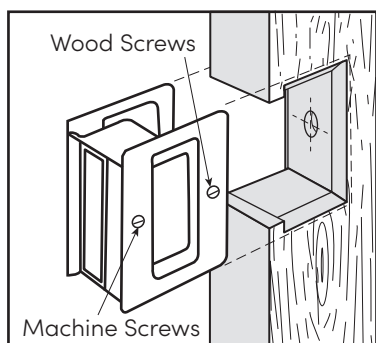

4. Slide pull into cutout. Make it flush with edge of door. Tighten machine screws. Insert #6 x 5/8" oval head wood screws.

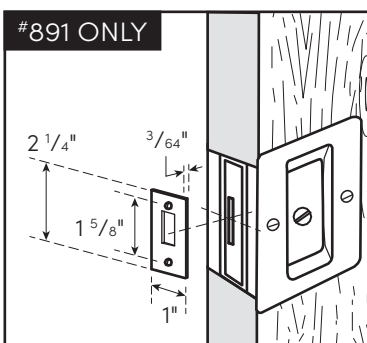


5. Align strike plate with pull. Strike should be centered on pull. Mark and mortise into jamb. Mortise 1" x 2 1/4" x dp. 3/64".

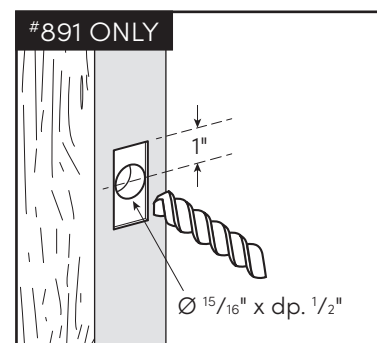

6. Drill Ø 15/16" hole x dp. 1/2" in strike mortise. NOTE: Hole is off center of mortise cutout.



7. Screw strike plate into position using #6 x 5/8" flat head wood screws.

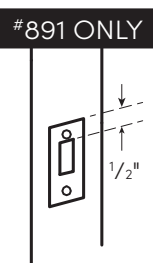


Assembly after Reversing Plates


BEFORE CHANGING PLATES




WITH 1 PLATE REMOVED

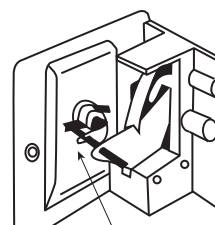

AFTER CHANGING PLATES

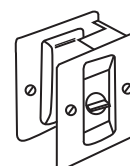

BE SURE FORK ARM ENGAGES ROCKER PIN WHEN REVERSING PLATES

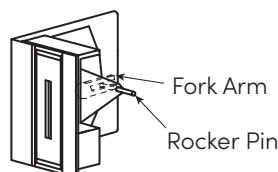

When it is desirable to reverse outside plates on lock assembly, first remove machine screw on each side of the door, then remove wood screws - change plates from side to side (making sure that fork arm engages rocker pin) and reassemble.

NOTE: Not for use in caustic environments.