

NOTES:


1. BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS.
2. DIMENSIONS GIVEN IN INCHES AND (MM).
3. REFER TO CHART FOR SPECIAL HOLES REQUIRED BY TRIM FUNCTION.

TEMPLATE CROSS REFERENCE

DESCRIPTION	TEMPLATE
ED7600 SERIES MORTISE DEVICE	T30578
MLE08, MLE09 MORTISE EXIT LOCK	T30610

LHR SHOWN
RHR OPPOSITE

TRIM		A	*B CUTOUT	C
KNOB	LEVER			
B5M10, G6M10	C4M10, E4M10 D4M10, L4M10		●	
B5M50, G6M50				●
B5M55, G6M55	C4M55, E4M55 D4M55, L4M55	●	●	

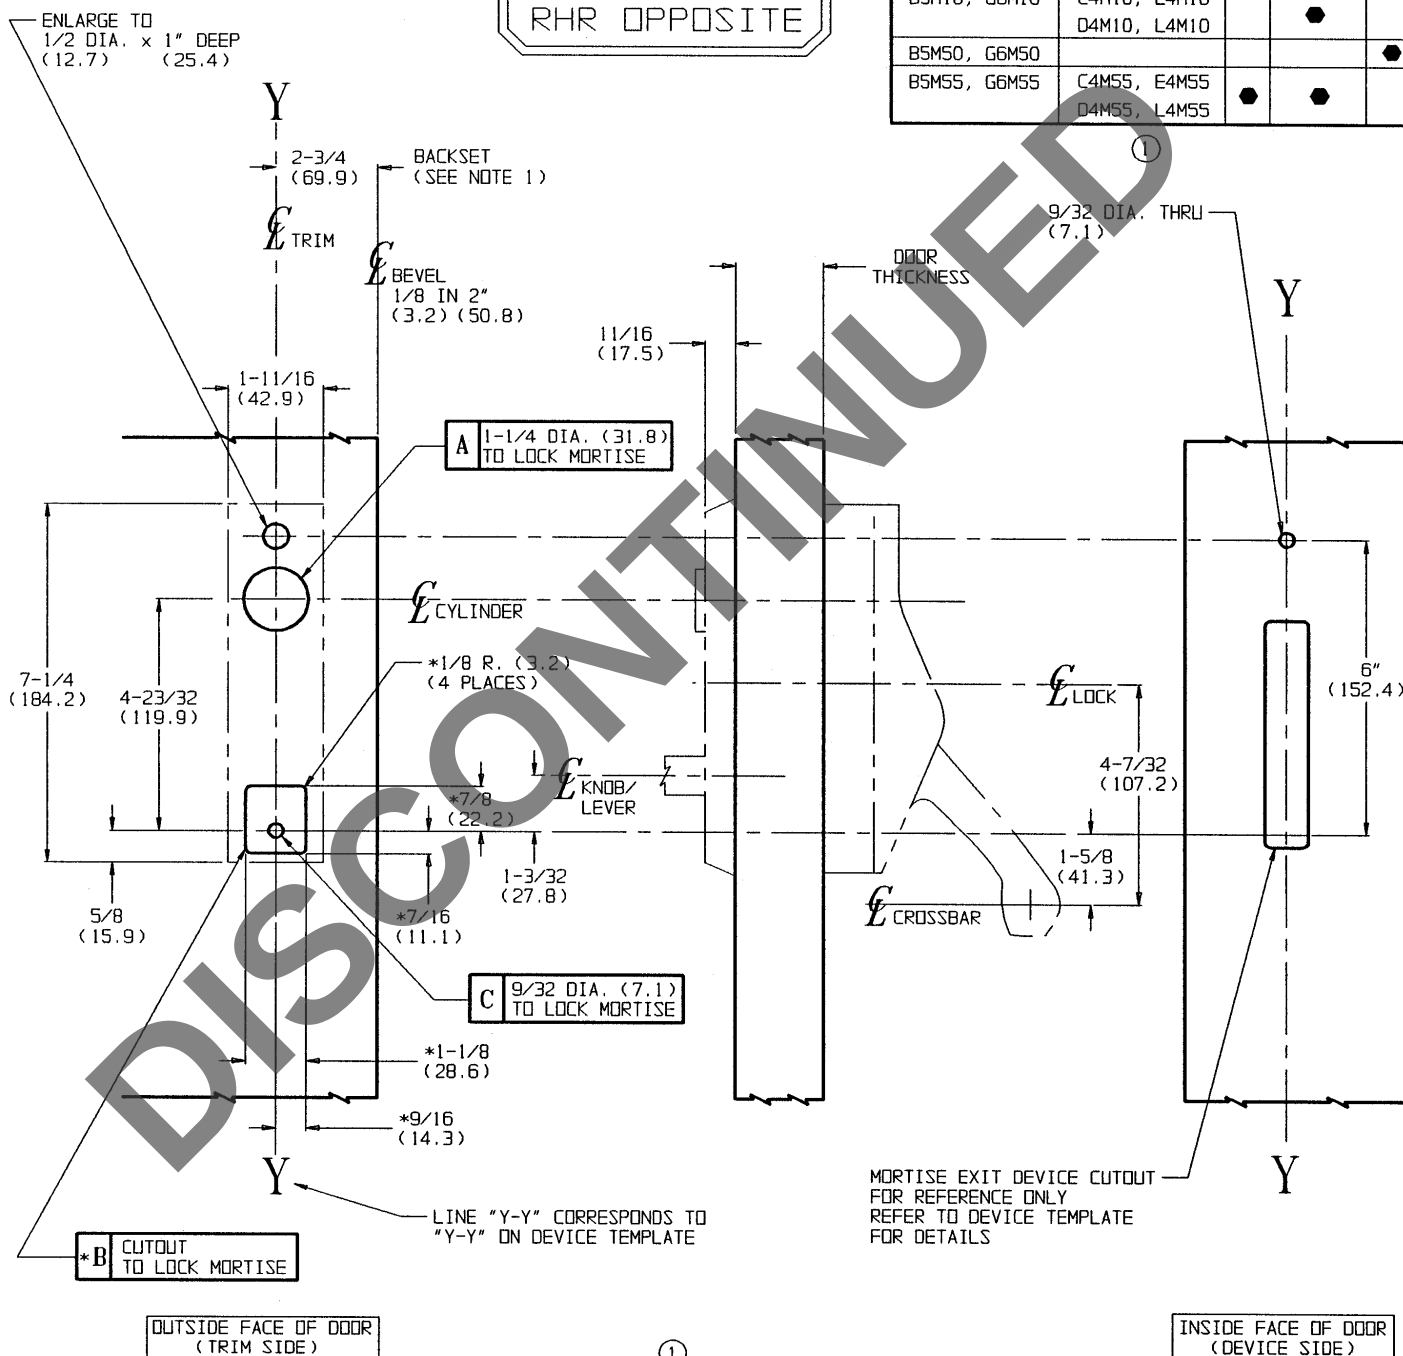

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

B5M10 C4M55 E4M55 L4M10
B5M50 D4M10 G6M10 L4M55
B5M55 D4M55 G6M50
C4M10 E4M10 G6M55
KNOB/LEVER ESCUTCHEON TRIM
CROSSBAR NARROW STILE
MORTISE DEVICE

**Corbin
Russwin**
www.corbinrusswin.com

DO NOT SCALE DRAWING
SUPERSEDES T30577 DR. OLD
DATE 1-98 TEMPLATE NUMBER T30577-1