

INSTALLATION INSTRUCTIONS 2601D

Effective date: December 1, 2022
Supercedes: All Previous

ROCKWOOD®

ASSA ABLOY

Experience a safer
and more open world

NOT TO SCALE

2601D INLINE MOUNTING BRACKET

The 2601D Inline Bracket is used to mount parallel arm closers, non-fire rated vertical rod strikes, or any other soffit applied hardware when using the 2600 Series Coordinator. The 2601D bracket mounts through the Coordinator allowing for installation on any frame dimension regardless of the soffit width.

1. Mount the 2600 Series Coordinator per instructions.


2. Position 2601D bracket at desired location.

3. Locate and mark 2601D mounting holes onto Coordinator.

Note: Do not drill in shaded areas highlighted in the drawing below.

4. Drill 2 ea. #10 pilot holes through Coordinator and into the soffit.

5. Secure 2601D bracket to 2600 series Coordinator by using 2 ea. 12-24 x 2" (50.8) thread forming screws.

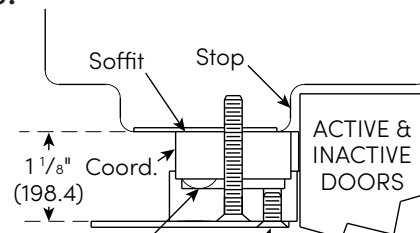

Install soffit applied hardware to 2601D bracket using 1/4-20 x 1/2" (12.7) screws


2601D bracket can mount over the Coordinator's mounting hardware

Drill #10 pilot holes through Coordinator into soffit

Secure 2601D bracket with 2 ea. 12-24 x 2" (50.8) thread forming screws


Closer shoe shown as an example

Mount soffit applied hardware to 2601D bracket with 4 ea 1/4-20 x 1/2" (12.7) FH screws Note: Do not use screws longer than 1/2" (12.7)

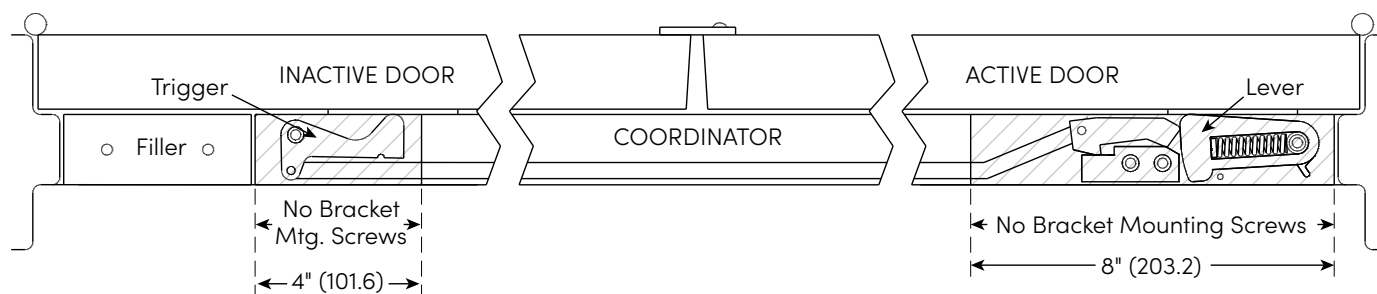

6. Drill and tap 2601D bracket for soffit applied hardware.

7. Install soffit applied hardware with 4 ea 1/4-20 x 1/2" (12.7) FH screws.
Note: Do not use screws longer than 1/2".

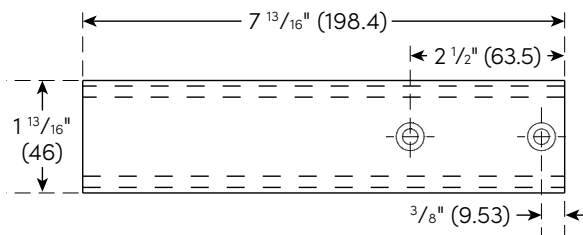

Patent No. 9109388